Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SIFENE /
- > SIFENE Slow Masticating Cold Press Juicer Machines (Model JS3209) Instruction Manual

SIFENE JS3209

SIFENE Slow Masticating Cold Press Juicer Machines

Model: JS3209

Brand: SIFENE

1. Introduction

Thank you for choosing the SIFENE Slow Masticating Cold Press Juicer Machine. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The SIFENE JS3209 is designed for efficient juice extraction from various fruits and vegetables, utilizing cold press technology to preserve nutrients and flavor. Its quiet motor and anti-clog system ensure a smooth juicing experience.

2. Package Contents

Upon unpacking, please verify that all components are present and in good condition:

- Main Motor Base
- Juicing Chamber Assembly (includes auger, filter, and end cap)
- Food Pusher
- Juice Cup (1000ml capacity)
- Pulp Container
- Cleaning Brush
- Instruction Manual



Introducing the SiFENE Anti-Clog Cold Press Juicer

Engineered to power through tough ingredients for hassle-free juicing.

Figure 2.1: All components included in the SIFENE Juicer package.

3. Setup and Assembly

Before assembling, ensure the juicer is unplugged and all parts are clean. Refer to the 'Maintenance and Cleaning' section for initial cleaning instructions.

- 1. **Attach Juicing Chamber:** Align the juicing chamber assembly with the motor base. Twist clockwise until it locks securely into place. You should hear a click.
- 2. **Insert Auger and Filter:** Place the auger inside the juicing chamber, followed by the filter. Ensure they are properly seated.
- 3. **Attach End Cap:** Secure the end cap to the front of the juicing chamber by twisting it clockwise until it locks.
- 4. **Position Containers:** Place the juice cup under the juice spout and the pulp container under the pulp outlet.
- 5. Insert Food Pusher: Place the food pusher into the feed chute.

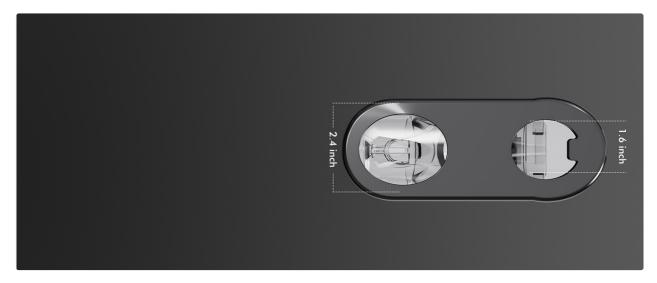


Figure 3.1: Exploded view of the juicer components for assembly.

4. Operating Instructions

Ensure the juicer is correctly assembled and plugged into a 120V power outlet before operation.

4.1. Fruit and Vegetable Preparation

- · Wash all fruits and vegetables thoroughly.
- Cut ingredients into pieces small enough to fit into the 3-inch wide feed chute. Remove hard seeds, pits, or thick peels (e.g., pineapple skin, citrus peels).
- For fibrous vegetables like celery, cut them into shorter segments (approx. 1-2 inches) to prevent clogging.



Figure 4.1: Dual mouth feed chute for various ingredient sizes.

4.2. Juicing Process

- 1. Turn the juicer ON using the control dial. The juicer has 2 speeds for different produce types.
- 2. Gradually feed prepared ingredients into the feed chute. Use the food pusher gently to guide ingredients down. Do not force ingredients.
- 3. The juicer will automatically separate juice into the juice cup and pulp into the pulp container.
- 4. If the juicer becomes clogged, switch the dial to the 'REV' (Reverse) setting for a few seconds to clear the blockage, then switch back to 'ON'.
- 5. Once juicing is complete, turn the juicer OFF and unplug it from the power outlet.



Figure 4.2: Juicing apples with the SIFENE Masticating Juicer.



Upgraded Filter Extracts Purest Juice

Figure 4.3: Example of dry pulp, indicating efficient juice extraction.

5. Maintenance and Cleaning

Regular cleaning is crucial for maintaining the performance and longevity of your juicer. All detachable parts are dishwasher safe for convenience.

- 1. Disassembly: Ensure the juicer is unplugged. Press the release button on the side of the juicing chamber and twist counter-clockwise to detach it from the motor base. Disassemble the juicing chamber by removing the end cap, filter, and auger.
- 2. Rinse: Rinse all detachable parts under running water immediately after use to prevent pulp from drying and sticking.
- 3. Clean with Brush: Use the provided cleaning brush to remove any stubborn pulp from the filter mesh and other components.
- 4. Dishwasher Safe: All parts that come into contact with juice are dishwasher safe (top rack recommended).
- 5. Wipe Motor Base: Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.

6. **Dry and Store:** Allow all parts to dry completely before reassembling and storing the juicer in a clean, dry place.



Easy to Clean

The SiFENE Anti-Clog Cold Press Juicer is easier to clean than leading centrifugal juicers. All parts that touch juice are dishwasher safe.

Figure 5.1: Cleaning the juicer filter with the provided brush.

6. Troubleshooting

If you encounter issues with your SIFENE juicer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Juicer does not turn on	Not plugged in; improper assembly; safety lock not engaged.	Check power connection; reassemble all parts securely; ensure juicing chamber is locked.
Juicer stops during operation	Overload; motor overheating.	Turn off and unplug; remove excess ingredients; allow motor to cool for 30 minutes before restarting.

Problem	Possible Cause	Solution
Excessive pulp in juice	Filter clogged; soft ingredients.	Clean filter thoroughly; alternate soft and hard ingredients during juicing.
Low juice yield	Ingredients not properly prepared; filter clogged.	Ensure ingredients are cut appropriately; clean filter; use recommended speed setting.
Loud noise or vibration	Improper assembly; foreign object.	Disassemble and reassemble correctly; check for any foreign objects in the juicing chamber.

7. Specifications

• Model Name: JS3209

• Brand: SIFENE

• **Product Dimensions:** 7.28"D x 13.3"W x 14.21"H

• Capacity: 1000 Milliliters (Juice Cup)

• Maximum Power: 250 Watts

• Voltage: 120V

• Number of Speeds: 2

• Blade Material: Stainless Steel

• Special Features: NON-STOP JUICING, No clogs, Juice blend with smart juice cap, Cold press technology with quiet DC motor, Dual mouth

8. Warranty and Support

Your SIFENE Slow Masticating Cold Press Juicer (Model JS3209) comes with the following assurances:

Motor Assurance: 4 yearsParts Assurance: 2 years

For any questions, technical support, or warranty claims, please contact SIFENE customer support. Our team is available 24/7 to assist you.

Contact information can typically be found on the product packaging or the official SIFENE website.

Related Documents - JS3209



SiFENE Juicer Quick Start Guide

A quick start guide for the SiFENE juicer, covering assembly, usage, and tips to prevent clogging. Includes product components and operating button functions.

