

Nulea RT05C

Nulea RT05C Wired Ergonomic Keyboard User Manual

Model: RT05C

1. INTRODUCTION

The Nulea RT05C Wired Ergonomic Keyboard is designed to provide a comfortable and natural typing experience, reducing strain during extended use. Its split design, cushioned wrist rest, and adjustable tilt legs promote an ergonomic posture. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting.

2. PACKAGE CONTENTS

- Nulea RT05C Wired Ergonomic Keyboard
- Durable Braided Nylon Cable (integrated)
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the key features and components of your Nulea RT05C keyboard.

Ergonomics Meets Excellence

Split layout design for a naturally comfortable typing posture



Figure 3.1: Overall view of the Nulea RT05C Ergonomic Keyboard, highlighting its split design for natural hand placement.

Wired Peace Of Mind

Just plug it in and go.



Braided nylon jacket
More durable



70.87 inches
(1.8m)

Figure 3.2: The keyboard's stable wired connection via a durable braided nylon cable.

Type at Your Angle


Adjustable tilt legs for finding your perfect typing angle every time!



Figure 3.3: Adjustable tilt legs allow customization of the typing angle for optimal comfort.

Cradle Wrists in Comfort

With an enlarged PU leather wrist rest, type freely, burden-free

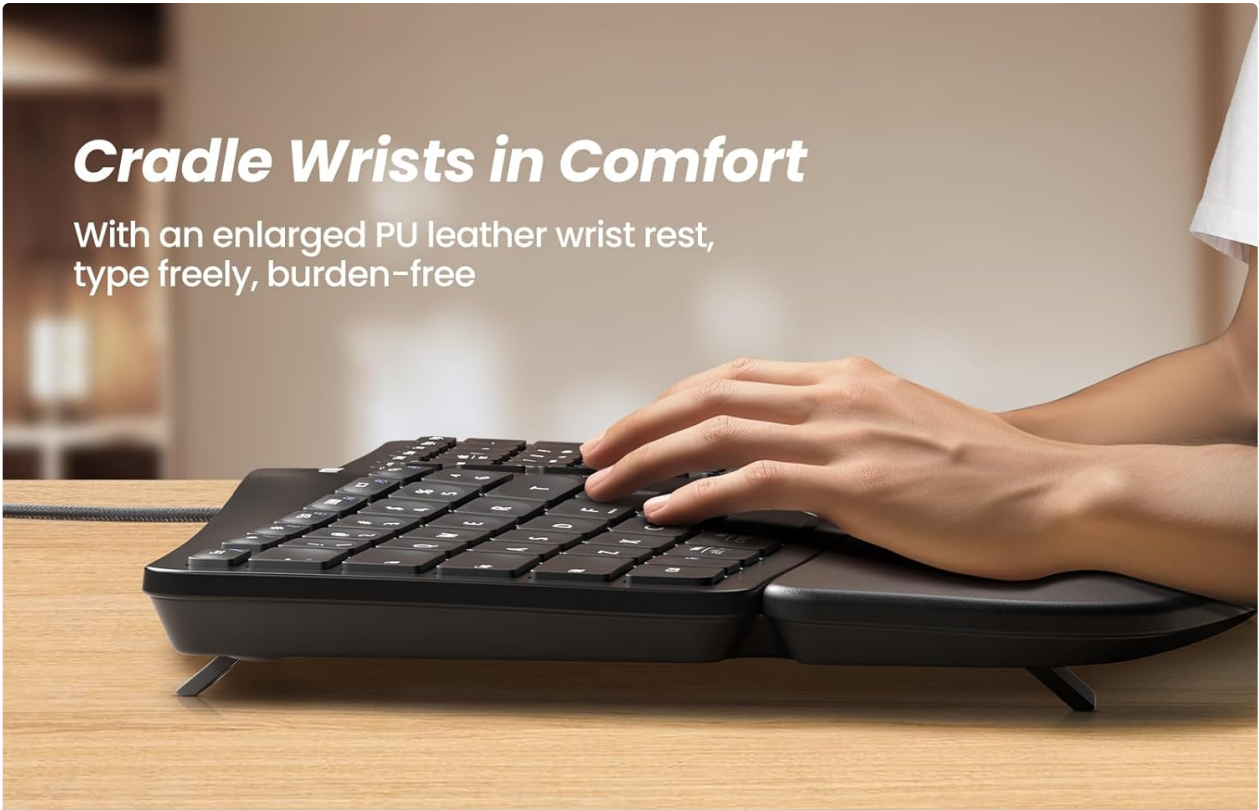

1. Skin-touch Feeling PU Leather
2. Memory Foam
3. Hard Supportive Base

Figure 3.4: The cushioned wrist rest features skin-touch PU leather, memory foam, and a supportive base for enhanced comfort.

4. SETUP GUIDE

4.1 Connecting the Keyboard

1. Locate an available USB port on your computer (Laptop, PC).
2. Plug the USB connector of the Nulea RT05C keyboard into the USB port.
3. The keyboard is plug-and-play; no additional drivers are required for most operating systems. Your computer should automatically detect and configure the device.

4.2 Adjusting the Tilt Legs

The keyboard features adjustable tilt legs on the underside, allowing you to customize your typing angle. Gently pull out the legs to engage the desired tilt level. There are three different angles available to suit individual preferences and ergonomic alignment.

4.3 Compatibility

The Nulea RT05C keyboard is compatible with the following operating systems:

- Windows (Windows 10 and above recommended)
- macOS
- Linux

Your browser does not support the video tag.

Video 4.1: An overview of the Nulea RT05C Wired Ergonomic Keyboard, demonstrating its features and design for a natural typing posture.

5. OPERATING INSTRUCTIONS

5.1 Basic Typing

The Nulea RT05C features a standard QWERTY layout with 101 keys. The split design encourages a more natural hand and wrist position. Place your hands so that your wrists rest comfortably on the cushioned wrist rest, allowing your fingers to naturally reach the keys.



Figure 5.1: Proper hand placement on the Nulea RT05C keyboard for comfortable and efficient typing.

5.2 Function Keys and Shortcuts

The top row of keys serves as both standard function keys (F1-F12) and multimedia/shortcut keys. By default, these keys may operate as multimedia controls. To toggle between standard function keys and multimedia functions, refer to your operating system's keyboard settings or specific key combinations if provided by the manufacturer (e.g., Fn + Esc on some systems, as noted in a user review).

5.3 Ergonomic Posture

To maximize the ergonomic benefits of this keyboard:

- Ensure your wrists are supported by the cushioned wrist rest.
- Adjust the keyboard's tilt to a comfortable angle that keeps your wrists straight.
- Keep your elbows close to your body and forearms parallel to the floor.
- Maintain a relaxed shoulder posture.

6. MAINTENANCE

6.1 Cleaning the Keyboard

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the keycaps and surfaces.
- Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the keyboard's finish and keycap legends.
- For dust and debris between keys, use compressed air.

6.2 Wrist Rest Care

The leatherette wrist rest can be cleaned with a damp cloth. Avoid prolonged exposure to direct sunlight or extreme temperatures to prevent material degradation.

7. TROUBLESHOOTING

7.1 Keyboard Not Responding

- **Check USB Connection:** Ensure the USB cable is securely plugged into a working USB port on your computer. Try a different USB port.
- **Restart Computer:** Sometimes a simple computer restart can resolve connectivity issues.
- **Test on Another Computer:** If possible, test the keyboard on another computer to determine if the issue is with the keyboard or your computer's setup.

7.2 Specific Keys Not Working

- **Clean Key:** Gently clean around the affected key with compressed air to remove any debris that might be obstructing its movement.
- **Software Conflict:** Ensure no software or operating system settings are remapping or disabling the key.

7.3 Number Pad Not Working

- **Check Num Lock:** Ensure the 'Num Lock' key is activated. The indicator light for Num Lock should be on.

- **Mouse Keys:** In some operating systems (e.g., Windows), 'Mouse Keys' can interfere with the number pad. Try pressing **Alt + Left Shift + Num Lock** to toggle Mouse Keys off.

8. SPECIFICATIONS

Feature	Detail
Brand	Nulea
Model Number	RT05C
Connectivity Technology	USB Wired
Keyboard Layout	QWERTY
Number of Keys	101
Switch Type	Mechanical
Special Features	Ergonomic, Split Keyset Design, Wrist Rest, Adjustable Tilt Legs
Material	Plastic with Leatherette Wrist Rest
Compatible Devices	Laptop, PC
Compatible Operating Systems	Windows, macOS, Linux
Power Source	Wired
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Nulea RT05C Wired Ergonomic Keyboard comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.

9.2 Customer Support

For technical support, warranty claims, or further assistance, please contact Nulea customer service through the retailer where the product was purchased or visit the official Nulea website for contact information.