

Keonjinn 40 x 32 Inch Lighted Medicine Cabinet

Keonjinn 40 x 32 Inch Lighted Medicine Cabinet User Manual

Model: 40 x 32 Inch Lighted Medicine Cabinet

INTRODUCTION

Thank you for choosing the Keonjinn Lighted Medicine Cabinet. This manual provides essential information for the safe installation, operation, and maintenance of your new medicine cabinet. Please read these instructions thoroughly before installation and keep them for future reference.

SAFETY INFORMATION

Electrical Safety: This LED medicine cabinet is equipped with a plug. It can be used as a plug-in unit or hardwired. If hardwiring is desired, it is crucial to handle the connection safely. If you are unsure how to perform a hardwire connection, please consult a professional electrician to avoid electrical hazards.

Glass Handling: The cabinet features tempered glass mirrors and shelves. While tempered glass is designed for enhanced durability and impact resistance, handle all glass components with care to prevent breakage and injury.

Weight Capacity: Do not exceed the maximum weight capacity of 43 pounds for the shelves to prevent damage or injury.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Keonjinn
Color	Silver
Material	Glass
Product Dimensions (D x W x H)	4.92"D x 40"W x 32"H
Additional Features	Fogless, Frameless, Illuminated, Rectangular, Touch Sensor
Number of Shelves	3 (Adjustable Tempered Glass)
Installation Type	Wall mount (Recessed or Surface Mount)

Weight Capacity Maximum	43 pounds
Item Weight	68.3 pounds
Power	Built-in Outlets & USB Ports
Lighting	Double-Sided LED, 3 Color Temperatures (Warm, Natural, White), Stepless Dimming
Clock	Bluetooth Time Sync Digital Clock

SETUP AND INSTALLATION

Unpacking and Inspection

Carefully remove the medicine cabinet from its packaging. Inspect all components for any damage. Report any damage to the retailer immediately. Ensure all parts listed in the package contents (mirror, shelves, mounting hardware) are present.




Image: Multi-layer packaging ensures safe delivery of the medicine cabinet.

Wiring Methods

The medicine cabinet supports two wiring methods: plug-in or hardwired.


- **Plug-in:** The cabinet comes with a pre-connected plug for easy installation into a standard wall outlet.
- **Hardwired:** For a seamless look, the plug head can be cut off, and the cabinet can be hardwired into a junction box.
Caution: If you are not experienced with electrical wiring, please consult a professional electrician for hardwiring.

Pay for the Quality & Convenience

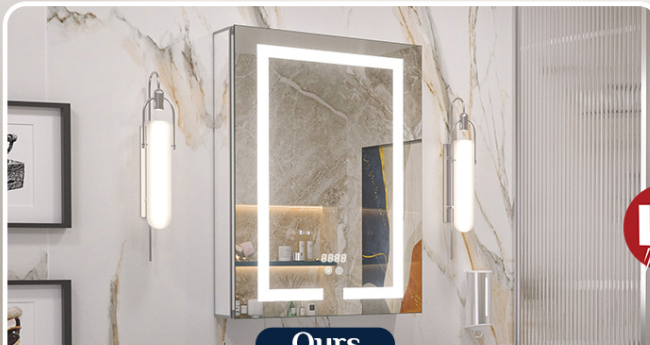

Ours

No Need to Assembly
Save Time & Skip Complex Assembly

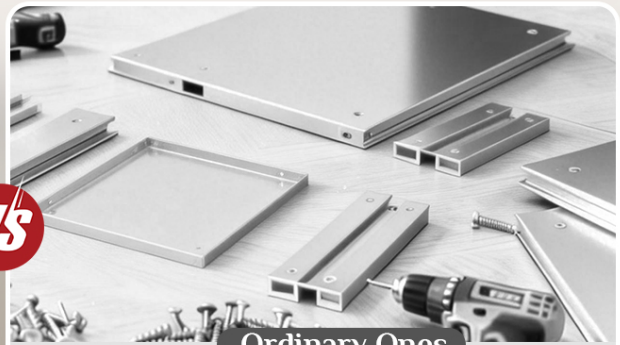

Ordinary Ones

Annoying Assembly Needed
Multiple Parts & Complicated Steps

Image: Illustration of plug-in and hardwired installation options.

Mounting Options

The medicine cabinet can be installed using either recessed mounting or surface mounting. Detachable side panels are provided for surface mounting.



Detachable Side Panels Allow Two Ways of Mounting



Image: Recessed Mounting vs. Surface Mounting options.

Recessed Mounting Installation Guide

This video demonstrates the steps for recessed installation of the Keonjinn medicine cabinet.

Your browser does not support the video tag.


Video: Keonjinn Recessed Medicine Cabinet Installation Guide. This video provides a step-by-step visual guide for installing the medicine cabinet into a wall cutout.

1. Before installation, remove the side panels and detach the cabinet door.
2. Make an outline for the cabinet on the wall, cut through the drywall, and frame the cutout opening according to the dimensions provided in the table below.
3. Place the cabinet in the cutout opening, secure it to the wall, and then reinstall the cabinet door.

● Installation Guidance



- 1 Place the medicine cabinet securely onto the lower bracket and hold it upright.

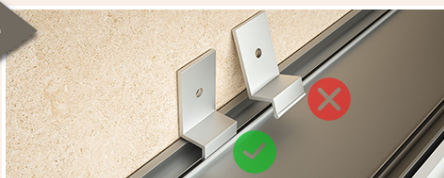

Please make sure two brackets slide into the groove.



- 2 Secure two upper brackets (big size cabinet need more than 2 upper brackets) in the groove on the top of the cabinet.



- 3 Mark the spots on the wall.

Image: Step-by-step guide for recessed mounting.

Surface Mounting Installation Guide

This video demonstrates the steps for surface installation of the Keonjinn medicine cabinet.

Your browser does not support the video tag.

Video: Keonjinn Surface Mounted Medicine Cabinet Installation Guide. This video provides a step-by-step visual guide for surface mounting the medicine cabinet.

1. Confirm the desired installation location and mark spots for the lower bracket.
2. Drill at the marked spots and securely attach the lower bracket to the wall.
3. Place the medicine cabinet onto the lower bracket and secure two upper brackets on top of the cabinet.

● Surface Mounting



- 1 Confirm where to install and mark spots for the lower bracket.



- 2 Drill at the spots and secure the lower bracket to the wall.



- 3 Place the cabinet on it and secure two upper brackets on top of the cabinet.

Image: Step-by-step guide for surface mounting.

Cutout Dimensions for Recessed Installation

For recessed installation, refer to the table below for appropriate cutout dimensions. Note that the cabinet's cutout size is not the same as the mirror size.

● Recessed Mounting



- 1 Before installation, remove side panels and detach the cabinet door.



- 2 Make an outline for the cabinet, cut through the drywall, and frame the cutout opening.



- 3 Place the cabinet in the cutout opening, secure the cabinet, and reinstall the cabinet door.

Image: Cutout dimensions reference for recessed installation.

Wall and Anchor Recommendations

Choose the appropriate wall anchors based on your wall thickness and the cabinet's net weight. Always use a stud finder to ensure hanging brackets are screwed into studs for maximum security.

WHY KEONJINN?

Welcome to Keonjinn, the Mirror Specialist to brighten up your life and the trusted choice for all your mirror needs.



Dedication

Our factory experience is the cornerstone of our expertise. We pour our passion into every mirror, recognizing its significance for your space.



Innovation

We consistently explore new techniques, materials, and styles, offering mirrors both functional and captivating to enhance the aesthetic of your space.



Consideration

We value every customer. Thus, we go the extra mile to understand your needs.

Image: Guide for selecting the correct wall and anchors.

Installing Adjustable Shelves

The cabinet includes height-adjustable tempered glass shelves. Insert the shelf supports into the desired slots on the cabinet interior, then place the glass shelves securely on top of the supports.

Your browser does not support the video tag.

Video: Installation of height-adjustable shelves. This short video demonstrates how to easily install and adjust the glass shelves inside the medicine cabinet.



Designed for Flexible Storage and Convenience



Image: Height-adjustable shelves and internal features.

OPERATING INSTRUCTIONS

LED Lighting Control

The medicine cabinet features double-sided LED lighting (front and interior) with 3 color temperatures and stepless dimming. The lighting system includes a smart memory function that recalls your last brightness and color temperature settings.



A Complete LED Mirror Experience for You



Three Color Temperatures

6000K

4500K

3000K

Stepless Dimming

100%

50%

10%



Smart
Memory



Fast
Defogging

Image: LED lighting features including color temperatures and dimming.

- **Power On/Off & Brightness Adjustment:** Use the designated touch sensor button on the mirror surface to turn the lights on or off. Hold the button to adjust brightness steplessly.
- **Color Temperature Selection:** Tap the color temperature button to cycle through Warm (3000K), Natural (4500K), and Cool White (6000K) light settings.

Your browser does not support the video tag.

Video: Keonjinn Lighted Medicine Cabinet for Bathroom with Mirror. This video showcases the various lighting features and controls of the cabinet.

Defogger Function

The integrated anti-fog feature keeps the mirror clear after showers. Activate the defogger using its dedicated touch sensor button on the mirror surface.

Bluetooth Time Sync Clock

The built-in digital clock keeps time visible and supports Bluetooth automatic synchronization for accuracy. Manual adjustment is also available.

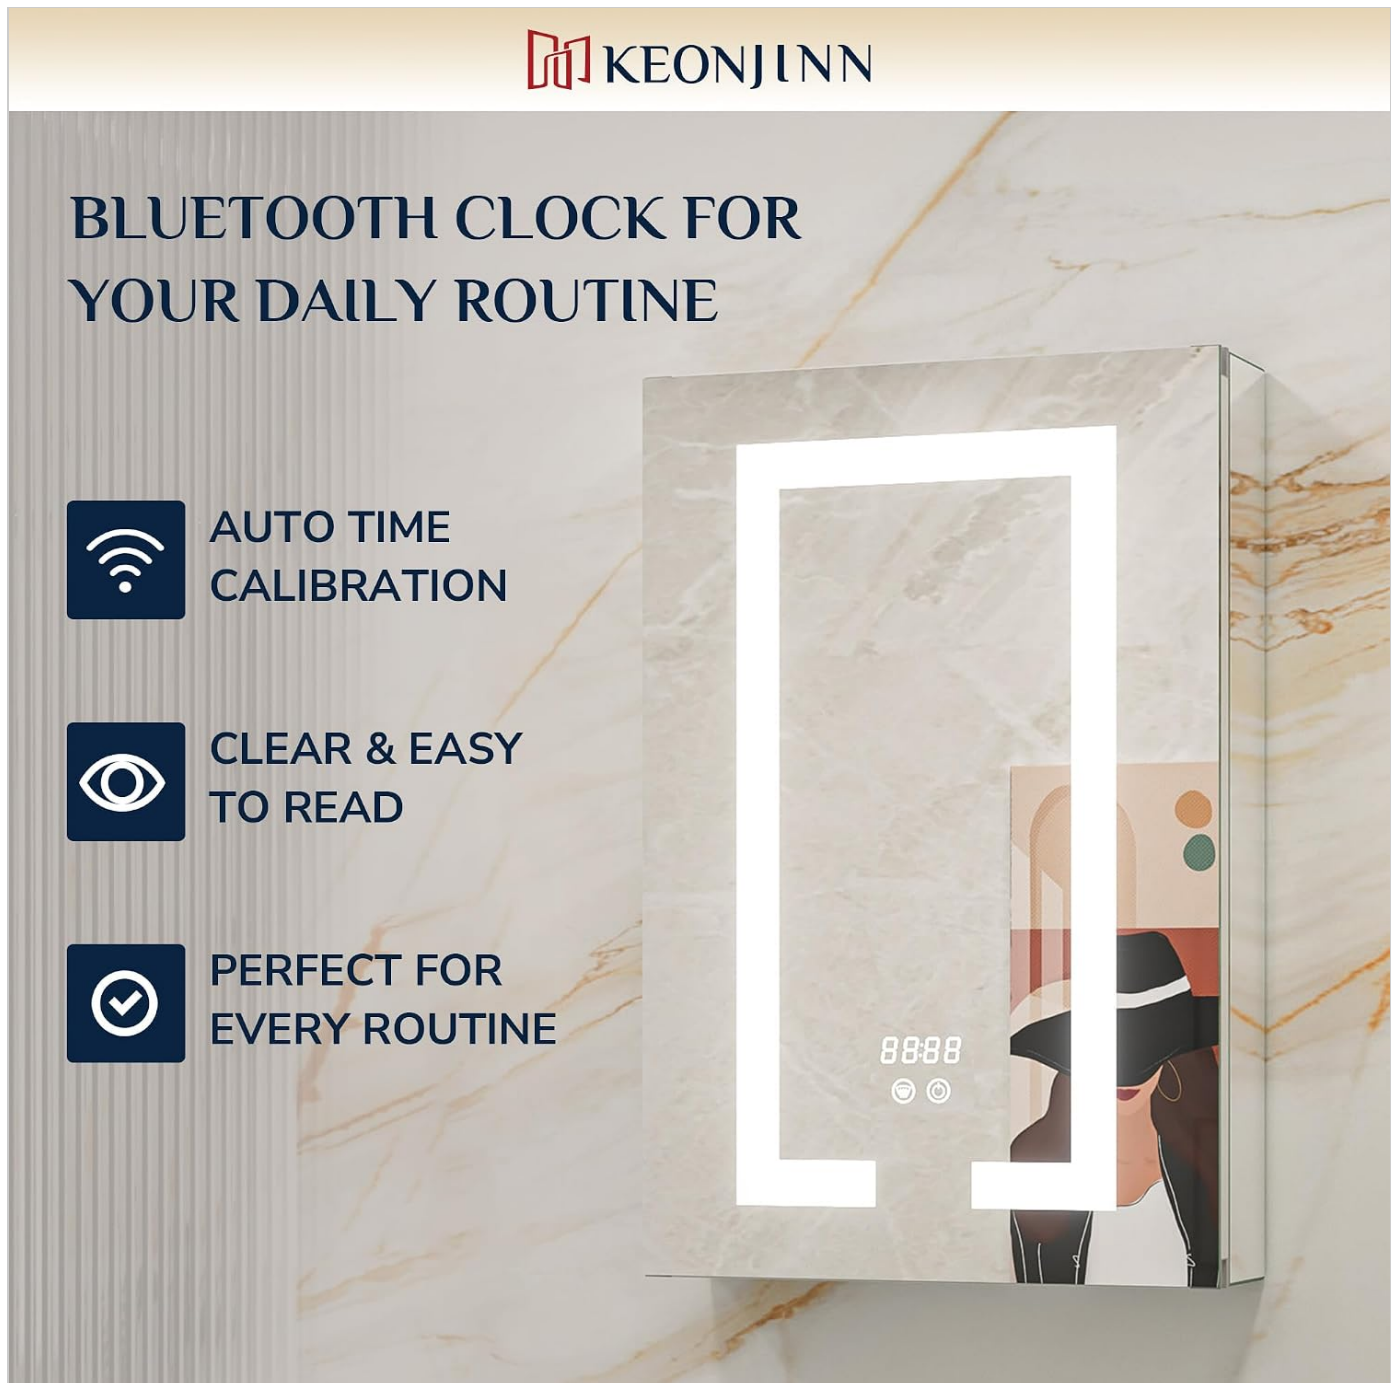


Image: Bluetooth clock features for daily routine management.

- **Auto Calibration:** Pair your phone's Bluetooth with "Smart Clock" to automatically synchronize the time.
- **Manual Adjustment:**
 - **Minute:** Hold the Defog button for 3 seconds, then press the Power button to adjust minutes.
 - **Hour:** Tap the Defog button, then press the Power button to adjust hours.
 - **Exit:** Tap the Defog button again or wait 5 seconds for auto-exit.
- **Hide Clock Display:** Press both the Power and Defog buttons together to hide the clock display.

Your browser does not support the video tag.

Video: Keonjinn Lighted Medicine Cabinet with Bluetooth Clock. This video demonstrates the Bluetooth clock's features, including auto-sync and manual adjustment.

Built-in Outlets and USB Ports

The cabinet includes integrated outlets and USB ports inside for convenient charging of toothbrushes, razors, and other devices, helping to keep your countertop clutter-free.

MAINTENANCE

Cleaning

To clean the mirror and cabinet surfaces, wipe with a damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish or electronic components.

Glass Care

The tempered glass is designed for durability. To maintain its clarity and prevent streaks, use a glass cleaner specifically designed for mirrors. Do not apply excessive force to the mirror surface.

TROUBLESHOOTING

- **Lights not working:** Check the power connection. If hardwired, ensure the electrical connection is secure. If plug-in, ensure the plug is fully inserted into a working outlet.
- **Defogger not activating:** Ensure the defogger touch sensor is pressed firmly. Check power connection.
- **Bluetooth clock not syncing:** Ensure your device's Bluetooth is on and correctly paired with "Smart Clock." If manual adjustment is needed, follow the steps in the Operating Instructions.
- **Outlets/USB ports not charging:** Verify the cabinet has power. Ensure devices are properly connected to the ports.
- **Door not closing smoothly:** Check the DTC soft-close hinges for any obstructions. The hinges are designed for smooth operation.

WARRANTY AND SUPPORT

Warranty Information

Keonjinn offers a 2-year warranty on this product. In case of damaged products upon arrival, please send photos of the damaged mirror to the seller for a free replacement without returning the damaged one. Free mirror repair is also available within 3 years.

Customer Support

For support regarding Keonjinn products or orders, please follow these steps:


1. Locate the product on the purchase platform (e.g., Amazon) and click on the 'Keonjinn' brand name.
2. On the brand page or product page, select "Ask a question" to access the Seller Messaging Assistant.
3. In the chat window, follow the prompts to type your question and submit it. Please include your product name or ASIN (B0CY883D8J) within your message.

You can also refer to the official User Manual (PDF) for additional details:[Download User Manual \(PDF\)](#)


WE ARE ALWAYS READY TO SUPPORT

If you need support regarding Keonjinn products or orders, follow these steps:

- 1 Locate the product and click **Keonjinn**.

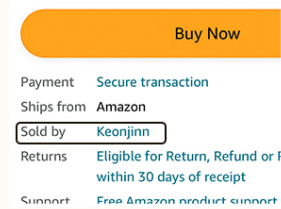

- 2 Select "Ask a question" on the page to access the Seller Messaging Assistant.

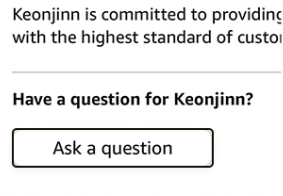

- 3 In the chat window, follow the prompts to type your question and **submit it**.

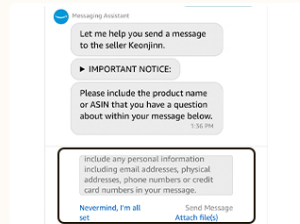


Image: Guide on how to contact Keonjinn customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question