

manuals.plus /

- › [Vente-unique](#) /
- › [Vente-unique Seroto Door Block Instruction Manual](#)

Vente-unique Seroto

Vente-unique Seroto Door Block Instruction Manual

Model: Seroto

1. INTRODUCTION

This instruction manual provides essential information for the safe and correct installation, operation, and maintenance of your Vente-unique Seroto Door Block. Please read this manual thoroughly before beginning installation and retain it for future reference. The Seroto Door Block is an interior door designed to enhance natural light in your space, featuring an aluminum frame and tempered glass panels. It is a reversible model, allowing for left or right-hand opening to suit your specific needs.

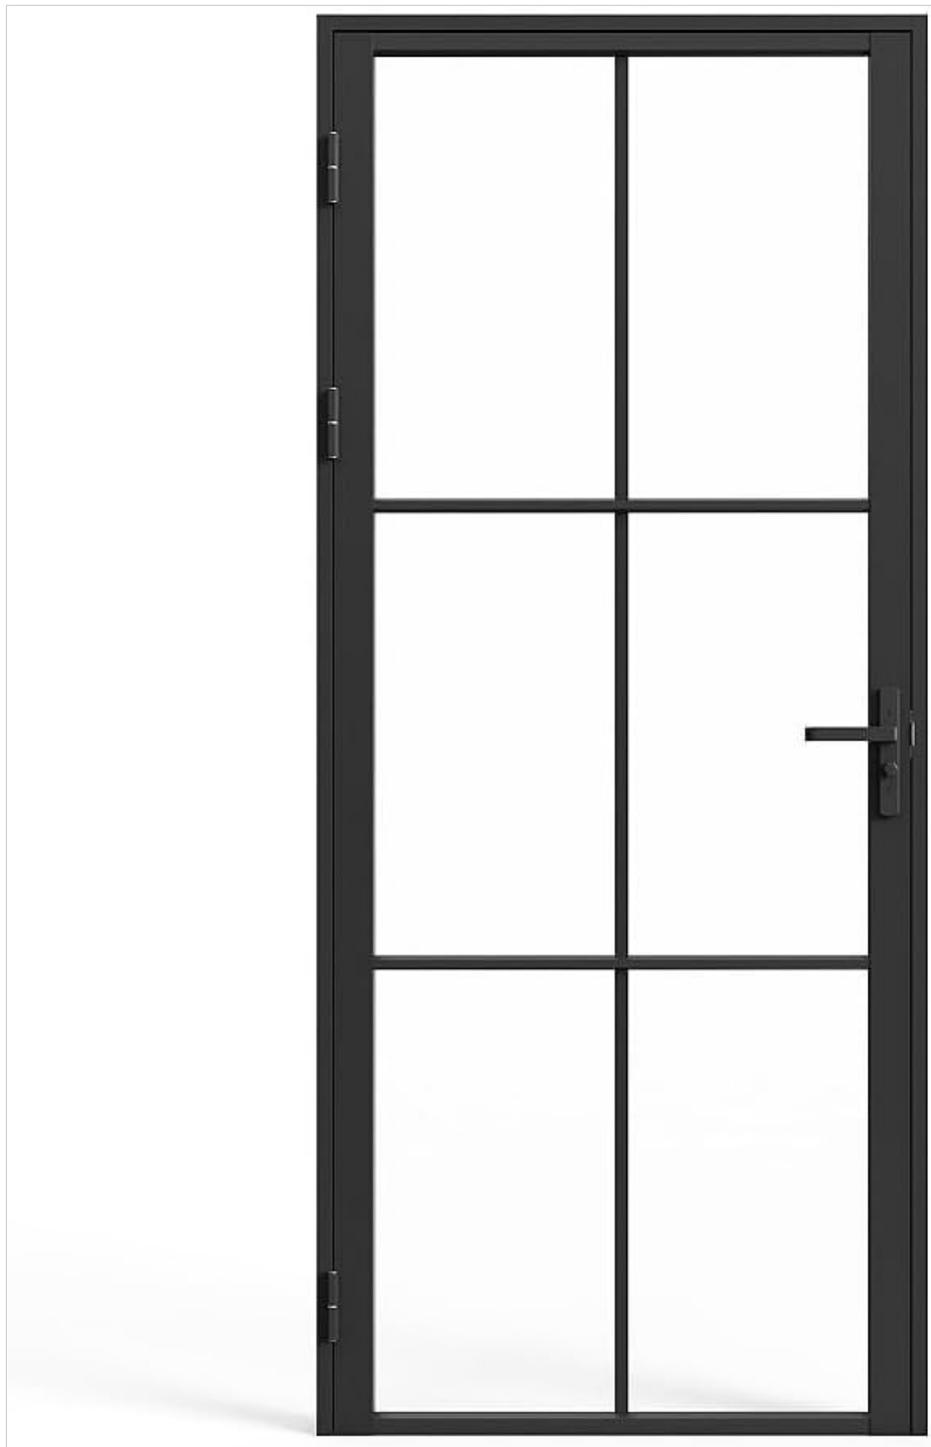


Figure 1: Overview of the Vente-unique Seroto Door Block.

2. SAFETY INFORMATION

Please observe the following safety precautions during installation and use:

- Always wear appropriate personal protective equipment (PPE), including safety gloves and eye protection, when handling glass and metal components.
- The door block is heavy (approximately 30.02 kg). Ensure you have adequate assistance for lifting and positioning to prevent injury.
- Handle tempered glass with care. Although durable, it can break if subjected to sharp impacts or edge damage.
- Ensure the installation area is clear of obstructions and that the floor is stable.
- Use only the provided hardware or suitable replacements that meet the required specifications.

- Keep children and pets away from the installation area.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact Vente-unique customer support.

- 1 x Seroto Door Block (Aluminum frame with 5mm tempered glass panels) - H204 x L73 cm
- 1 x Door Frame (Plywood) - H207.5 x L78.4 cm
- 1 x Door Handle set
- Visserie (Screws and other necessary hardware)

4. SPECIFICATIONS

Feature	Detail
Brand	Vente-unique
Model	Seroto
Door Dimensions (H x L x D)	204 cm x 73 cm x 3.5 cm
Frame Dimensions (H x L x D)	207.5 cm x 78.4 cm x 7.4 cm
Color	Black
Material (Door)	Aluminum, Tempered Glass (5 mm thickness)
Material (Frame)	Plywood
Opening Mechanism	Manual
Max Opening Angle	90 degrees
Installation Type	Tunnel (or Tableau)
Opening Direction	Reversible (Left or Right Push)
Usage	Interior
Assembly Required	Yes
Weight	30.02 kg

5. SETUP AND INSTALLATION

The Vente-unique Seroto Door Block is designed for tunnel (or tableau) installation and is reversible for left or right-hand opening. Professional installation is recommended due to the weight and nature of the materials.

5.1. Pre-Installation Checks

1. **Inspect Components:** Unpack all items and check for any damage or missing parts against the package contents list.
2. **Verify Opening Dimensions:** Ensure your door opening dimensions are compatible with the door block and

frame. The door frame measures 207.5 cm (Height) x 78.4 cm (Length) x 7.4 cm (Depth). The door itself measures 204 cm (Height) x 73 cm (Length) x 3.5 cm (Depth).

- 3. **Determine Opening Direction:** Decide whether you require a left-hand or right-hand push opening before proceeding with frame assembly.



Figure 2: Door dimensions (Height: 204cm, Width: 73cm, Depth: 3.5cm).



Figure 3: Door frame dimensions (Height: 207.5cm, Width: 78.4cm, Depth: 7.4cm).

5.2. Frame Assembly and Installation

1. Assemble the door frame components using the provided screws and hardware. Ensure all joints are secure and square.
2. Carefully position the assembled frame into the door opening. Use shims to ensure the frame is plumb, level, and square within the opening.
3. Secure the frame to the wall studs or structural elements using appropriate fasteners. Ensure the frame is firmly anchored and does not flex.

5.3. Door Hanging

1. Attach the hinges to the door frame according to your desired opening direction (left or right push).
2. With assistance, carefully lift the door block and align the hinge pins with the hinge leaves on the frame. Insert the pins to secure the door.
3. Test the door's swing to ensure it opens and closes smoothly without binding. Adjust hinges if necessary.

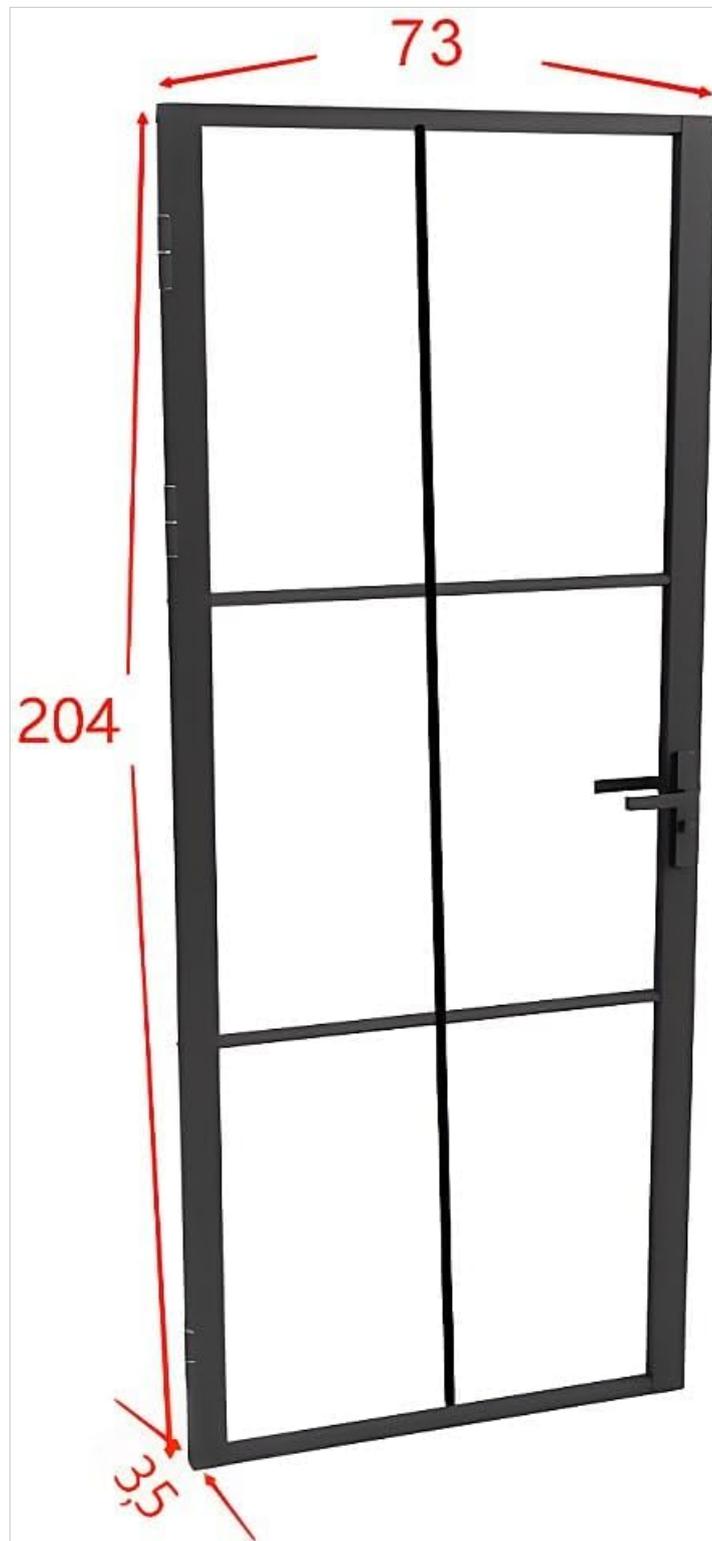


Figure 4: Detail of the door hinge.

5.4. Handle Installation

1. Install the door handle set according to the manufacturer's instructions included with the handle hardware.
2. Ensure the handle operates smoothly and the latch engages correctly with the strike plate on the door frame.



Figure 5: Detail of the door handle.

6. OPERATION

The Seroto Door Block operates manually. To open the door, depress the handle and pull or push the door in the desired direction. The door is designed to open up to a maximum angle of 90 degrees. Ensure no objects obstruct the door's path when opening or closing to prevent damage to the door or surrounding structures.

7. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your door block:

- **Cleaning Glass:** Use a soft cloth and a non-abrasive glass cleaner to clean the tempered glass panels. Avoid harsh chemicals that could damage the aluminum frame.
- **Cleaning Frame:** Wipe the aluminum frame with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.
- **Hardware Check:** Periodically check all screws and fasteners for tightness. Tighten any loose hardware to

ensure proper operation and safety.

- **Hinge Lubrication:** If the hinges begin to squeak, apply a small amount of silicone-based lubricant to the hinge pins.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Door does not close properly or binds.	Frame not plumb or square; loose hinges; debris in door path.	Check frame alignment and adjust shims if necessary. Tighten hinge screws. Clear any obstructions.
Handle is loose or does not engage latch.	Loose handle screws; misaligned strike plate.	Tighten handle set screws. Adjust strike plate position on the frame.
Hinges squeak.	Lack of lubrication.	Apply silicone-based lubricant to hinge pins.
Glass panels appear dirty or streaky.	Improper cleaning method or residue.	Clean with a soft cloth and non-abrasive glass cleaner. Avoid using paper towels which can leave lint.

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Vente-unique Seroto Door Block, please refer to your purchase documentation or contact Vente-unique customer service directly. Keep your proof of purchase for any warranty claims.

Manufacturer: [VENTE-UNIQUE.COM](https://www.vente-unique.com)

For further assistance, please visit the [Vente-unique Brand Store](#).