

SEAGO SG-2316

SEAGO SG-2316 Electric Toothbrush User Manual

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your SEAGO SG-2316 Electric Toothbrush. Please read thoroughly before first use and retain for future reference.

PRODUCT OVERVIEW

The SEAGO SG-2316 Electric Toothbrush is designed for effective oral hygiene, featuring a scientific ergonomic design and advanced cleaning capabilities. It includes multiple brush heads and modes to suit various dental needs.

Key Features:

- **Scientific Ergonomic Design:** Handle designed for comfortable grip and easy mastering of brushing techniques.
- **High Vibration Frequency:** Delivers 35,000 VPM for efficient plaque removal.
- **Multiple Brushing Modes:** Offers various modes for different oral care requirements.
- **Smart Timer:** Built-in 2-minute timer with 30-second interval reminders.
- **Brush Head Replacement Reminder:** Smartly reminds users to change brush heads every 3 months.
- **Long Battery Life:** Up to 60 days of use on a single Type-C fast charge.
- **Travel Convenience:** Includes a travel case for portability.
- **Waterproof Rating:** IPX7 waterproof for safe use in wet environments.

Package Contents:



Package Included:

- 1x Sonic Electric Toothbrush
- 6x DuPont bristles brush heads for daily clean
- 4x 3D High-density bristles brush heads for deep clean
- 1x Toothbrush holder
- 1x Travel case
- 1x Brush head protective cap

Image: All components included in the SEAGO SG-2316 Electric Toothbrush package, featuring the toothbrush handle, multiple brush heads, charging cable, and travel case.

- 1x SEAGO SG-2316 Electric Toothbrush Handle
- 6x W-shape bristles brush heads for daily clean
- 4x 3D High-density bristles brush heads for deep clean
- 1x Toothbrush holder
- 1x Travel case
- 1x Type-C Charging Cable
- 1x Brush head protective cap

Product Demonstration:

Your browser does not support the video tag.

Video: A demonstration of the SEAGO Electric Toothbrush, showcasing its components, brush heads, travel case, and overall design.

SETUP

1. Charging the Toothbrush:

Before first use, fully charge the toothbrush. The toothbrush features Type-C fast charging.



Image: Close-up of the Type-C charging port located at the bottom of the toothbrush handle, with the protective cover open and a charging cable inserted.

1. Open the protective cover at the bottom of the toothbrush handle.
2. Insert the Type-C charging cable into the port.
3. Connect the other end of the cable to a compatible USB power source (e.g., power bank, PC, USB charger).
4. A full charge takes approximately 4 hours and provides up to 60 days of use.

2. Attaching a Brush Head:

1. Align the brush head with the metal shaft on the toothbrush handle.
2. Push the brush head down firmly until it clicks into place.

3. Mounting the Toothbrush Holder:

The included toothbrush holder can be mounted to a smooth, clean surface.



Image: A pink SEAGO SG-2316 Electric Toothbrush securely placed in its white wall-mounted holder, demonstrating a tidy storage solution.

1. Clean and dry the desired mounting surface.
2. Remove the protective film from the adhesive backing of the holder.
3. Press the holder firmly onto the surface and hold for 30 seconds.
4. Allow 24 hours for the adhesive to set before placing the toothbrush in the holder.

OPERATING INSTRUCTIONS

1. Power On/Off:

Press the power button once to turn the toothbrush on or off.

2. Selecting a Brushing Mode:

The SEAGO SG-2316 offers 3 personalized cleaning modes:

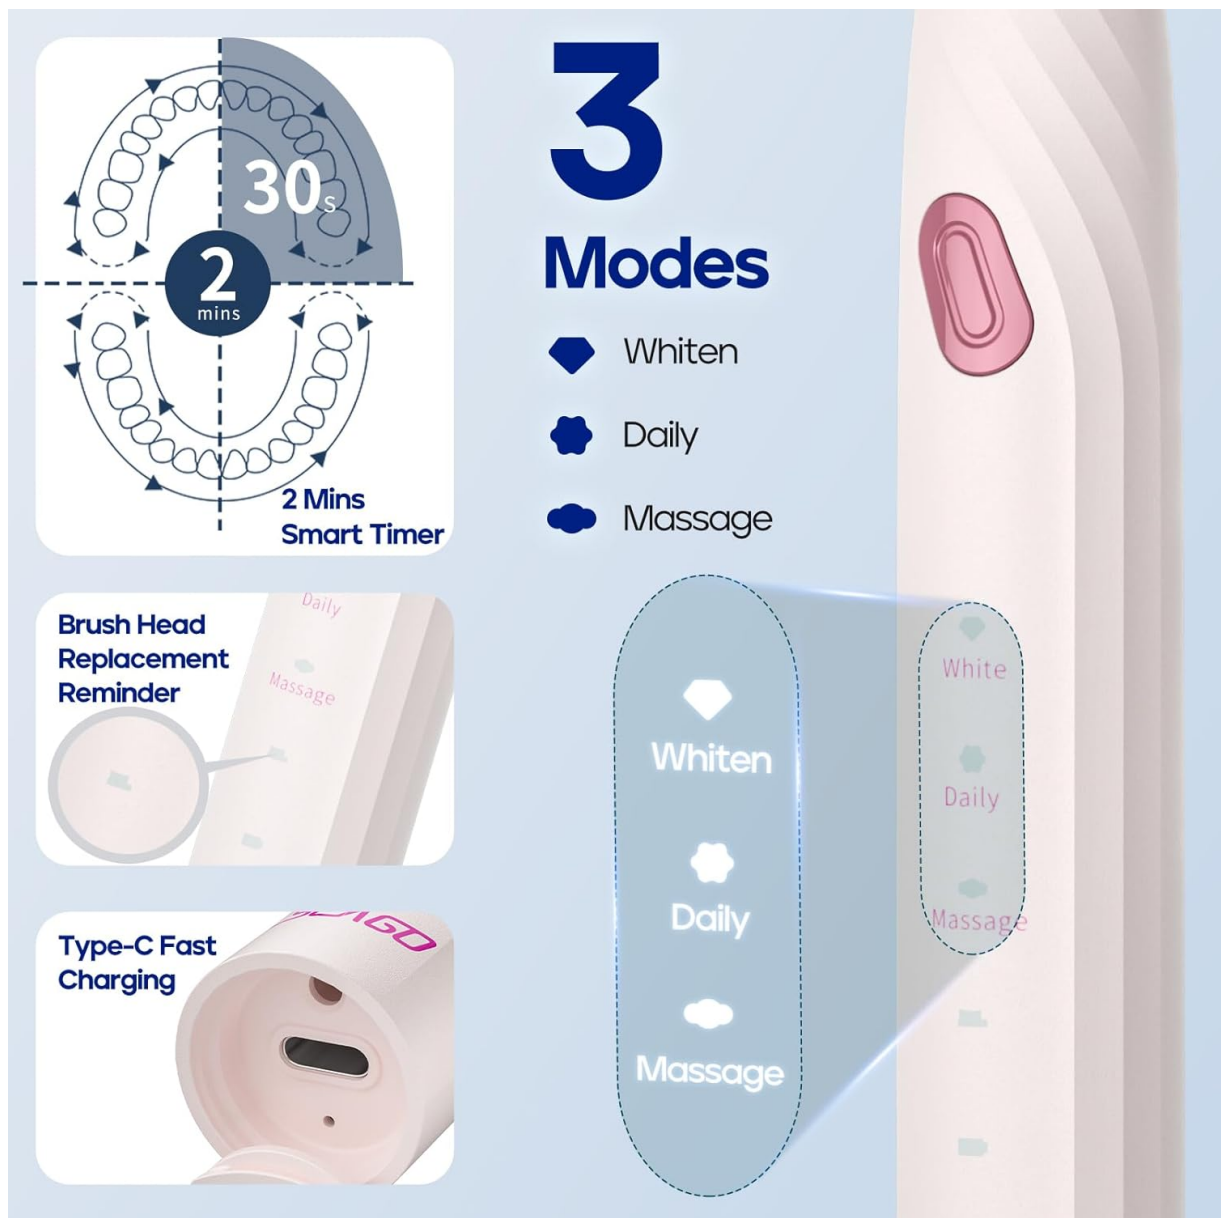


Image: The SEAGO SG-2316 Electric Toothbrush handle displaying its three brushing modes (White, Daily, Massage) and indicators for smart timer, brush head replacement, and Type-C fast charging.

1. With the toothbrush powered on, press the power button repeatedly to cycle through the modes.
2. The indicator light next to the selected mode will illuminate.
3. Available modes:
 - **White:** For teeth whitening and removing surface stains.
 - **Daily:** Standard mode for everyday cleaning.
 - **Massage:** Gentle mode for gum care and stimulation.

3. Smart Timer and Quadpacer:

The toothbrush features a built-in 2-minute smart timer and a Quadpacer to ensure thorough cleaning.

- The toothbrush will pause briefly every 30 seconds to remind you to move to a different quadrant of your mouth.
- After 2 minutes, the toothbrush will automatically turn off, indicating the completion of the recommended brushing time.

MAINTENANCE

1. Cleaning the Toothbrush:

The toothbrush is IPX7 waterproof and can be rinsed under running water.



Image: A pink SEAGO SG-2316 Electric Toothbrush partially submerged in clear water, with water droplets around it, illustrating its IPX7 waterproof capability.


1. After each use, rinse the brush head and bristles thoroughly under running water.
2. Wipe the toothbrush handle with a damp cloth.
3. Ensure no toothpaste residue accumulates around the metal shaft.

2. Replacing Brush Heads:

It is recommended to replace the brush head every 3 months, or sooner if the bristles become frayed.

10 X

Brush Heads will Last 30 Months use

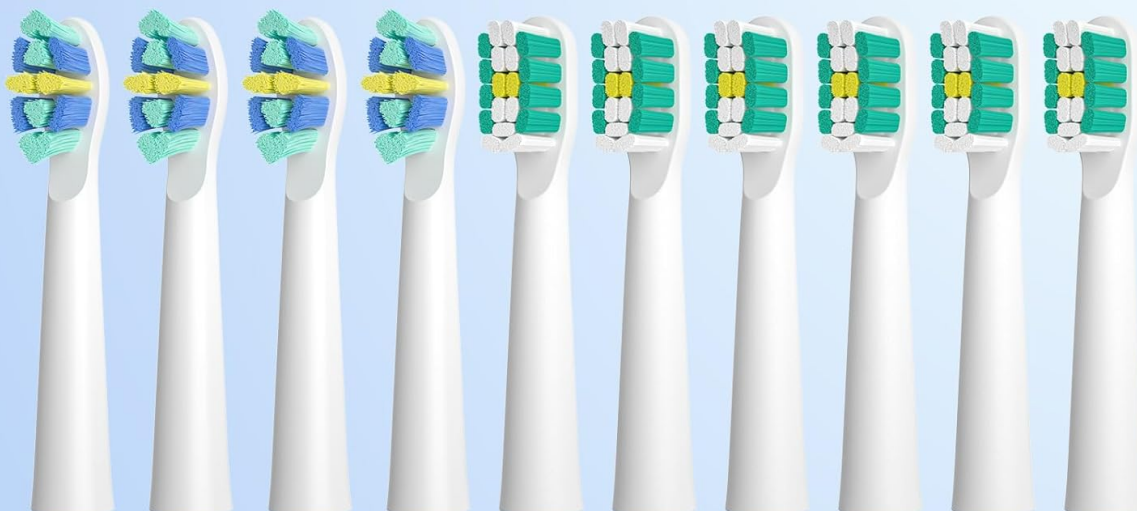

Portable Travel Case Your best travel companion

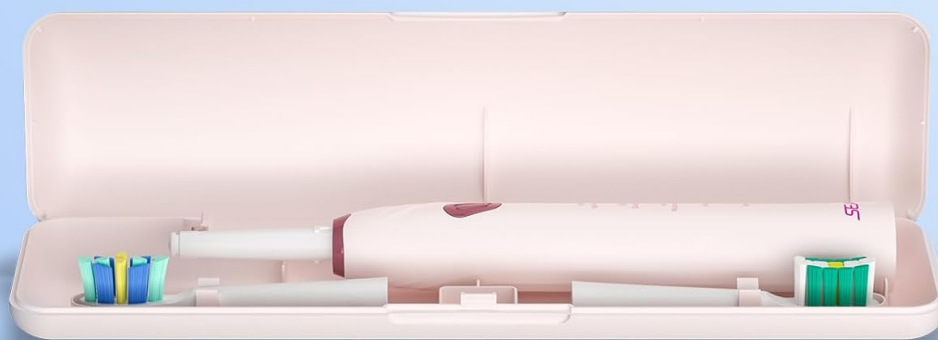


Image: The SEAGO SG-2316 Electric Toothbrush handle, along with ten replacement brush heads (six W-shape and four 3D high-density), and a pink travel case, highlighting the long-term supply of brush heads.

The smart toothbrush includes a brush head replacement reminder function.

1. To remove, gently pull the brush head straight up from the handle.
2. To attach a new brush head, align it with the metal shaft and push down firmly until it clicks.

3. Charging:

Recharge the toothbrush when the battery indicator light shows low power. A full charge provides up to 60 days of use.

TROUBLESHOOTING

Toothbrush not turning on:

- Ensure the toothbrush is fully charged. Connect it to the Type-C charging cable and allow it to charge for at least 4 hours.
- Check if the power button is being pressed correctly.

Reduced vibration or cleaning effectiveness:

- The battery might be low. Recharge the toothbrush.
- The brush head might be worn out. Replace it with a new one.

- Ensure the brush head is securely attached to the handle.

Charging issues:

- Ensure the Type-C cable is properly connected to both the toothbrush and the power source.
- Try using a different USB power adapter or port.

SPECIFICATIONS

Feature	Detail
Model Number	SG-2316
Product Dimensions	0.98 x 0.98 x 9.06 inches
Item Weight	11.82 ounces
Power Source	Battery Powered (Rechargeable via Type-C)
Battery Life	Up to 60 days on a single charge
Special Feature	Brushing Timer, Brush Head Replacement Reminder
Age Range	Adult
Bristle Firmness	Soft
Waterproof Rating	IPX7

SAFETY INFORMATION

WARNING:

- Not suitable for children under 3 years of age.
- Keep out of reach of children.
- Replace brush head every 3 months to prevent choking hazard.
- Do not use for purposes other than oral hygiene.
- Always supervise children under 18 years of age while using this product.

LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.


WARRANTY AND SUPPORT

SEAGO is committed to providing quality products and services. This product comes with a 3-year after-sale service.

For technical support or any inquiries, please contact us through your Amazon account:

1. Log in to your Amazon account.
2. Go to "Your orders".
3. Find the order ID for your SEAGO SG-2316 Electric Toothbrush.
4. Click "Contact Seller".

Related Documents - SG-2316

	<p>Seago SG-2782 Sonic Electric Toothbrush: Instructions for Use & Features</p> <p>Comprehensive instructions and overview for the Seago SG-2782 Sonic Electric Toothbrush, featuring pressure sensor, 5 modes, USB-C charging, and 8 brush heads. Learn how to use and maintain your toothbrush for optimal oral hygiene.</p>
	<p>SEAGO SG-2607 Rotating Electric Toothbrush Instruction Manual</p> <p>Official instruction manual for the SEAGO SG-2607 rotating electric toothbrush. Learn about safety warnings, product parameters, features, how to use, charging instructions, and disposal guidelines.</p>
	<p>SEAGO SG-2002 WiFi Oral Camera Instruction Manual</p> <p>Comprehensive instruction manual for the SEAGO SG-2002 WiFi Oral Camera, detailing product features, safety guidelines, operational procedures, charging, regulatory compliance, and warranty information.</p>
	<p>SeaGo Tubular Heater Instruction Manual: TH55, TH135, TH190</p> <p>Comprehensive instruction manual for SeaGo tubular heaters (models TH55, TH135, TH190), covering safety, usage, cleaning, installation, specifications, and warranty information.</p>
	<p>Seago Electric Folding Bike Owners Manual: e-Power 36v & Go City-Lite</p> <p>Comprehensive owners manual for Seago electric folding bikes, covering the e-Power 36v and Go City-Lite models. Includes important information, battery care, specifications, component details, control panel operation, charging instructions, bike assembly, battery removal, and warranty information.</p>

