

HBEZON 3636

HBEZON Medicine Cabinet with LED Lights and Mirror

Model: 3636
User Manual

INTRODUCTION

Thank you for choosing the HBEZON Medicine Cabinet with LED Lights and Mirror. This manual provides detailed instructions for installation, operation, and maintenance to ensure safe and efficient use of your new cabinet. Please read this manual thoroughly before installation and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Always unplug the cabinet before installation or cleaning. Do not install near water sources to prevent electrical hazards. Be cautious of sharp edges and glass parts during installation and use. Always use appropriate safety gear when handling the cabinet.

For electrical connections, it is recommended to consult a qualified electrician to ensure compliance with local electrical codes and safety standards.

PACKAGE CONTENTS


- Medicine cabinet with mirror
- Mounting Hardware
- Adjustable Shelves
- User Manual (this document)

SPECIFICATIONS

Feature	Description
Brand	HBEZON
Model	3636
Dimensions (D x W x H)	5"D x 36"W x 36"H

Weight	51 Pounds
Mounting Type	Wall Mount or Recessed Mount
Lighting	LED, 3 Color Modes (Warm, Natural, Cold White), Dimmable (0-100%), Memory Function
Display	Digital Time & Temperature Display (12/24-hour format, reduced brightness, can be turned off)
Additional Features	Anti-Fog Function, Electrical Outlet & USB Port, Soft-Close Hinges, Adjustable Shelves
Frame Material	Aluminum

Product Dimensions

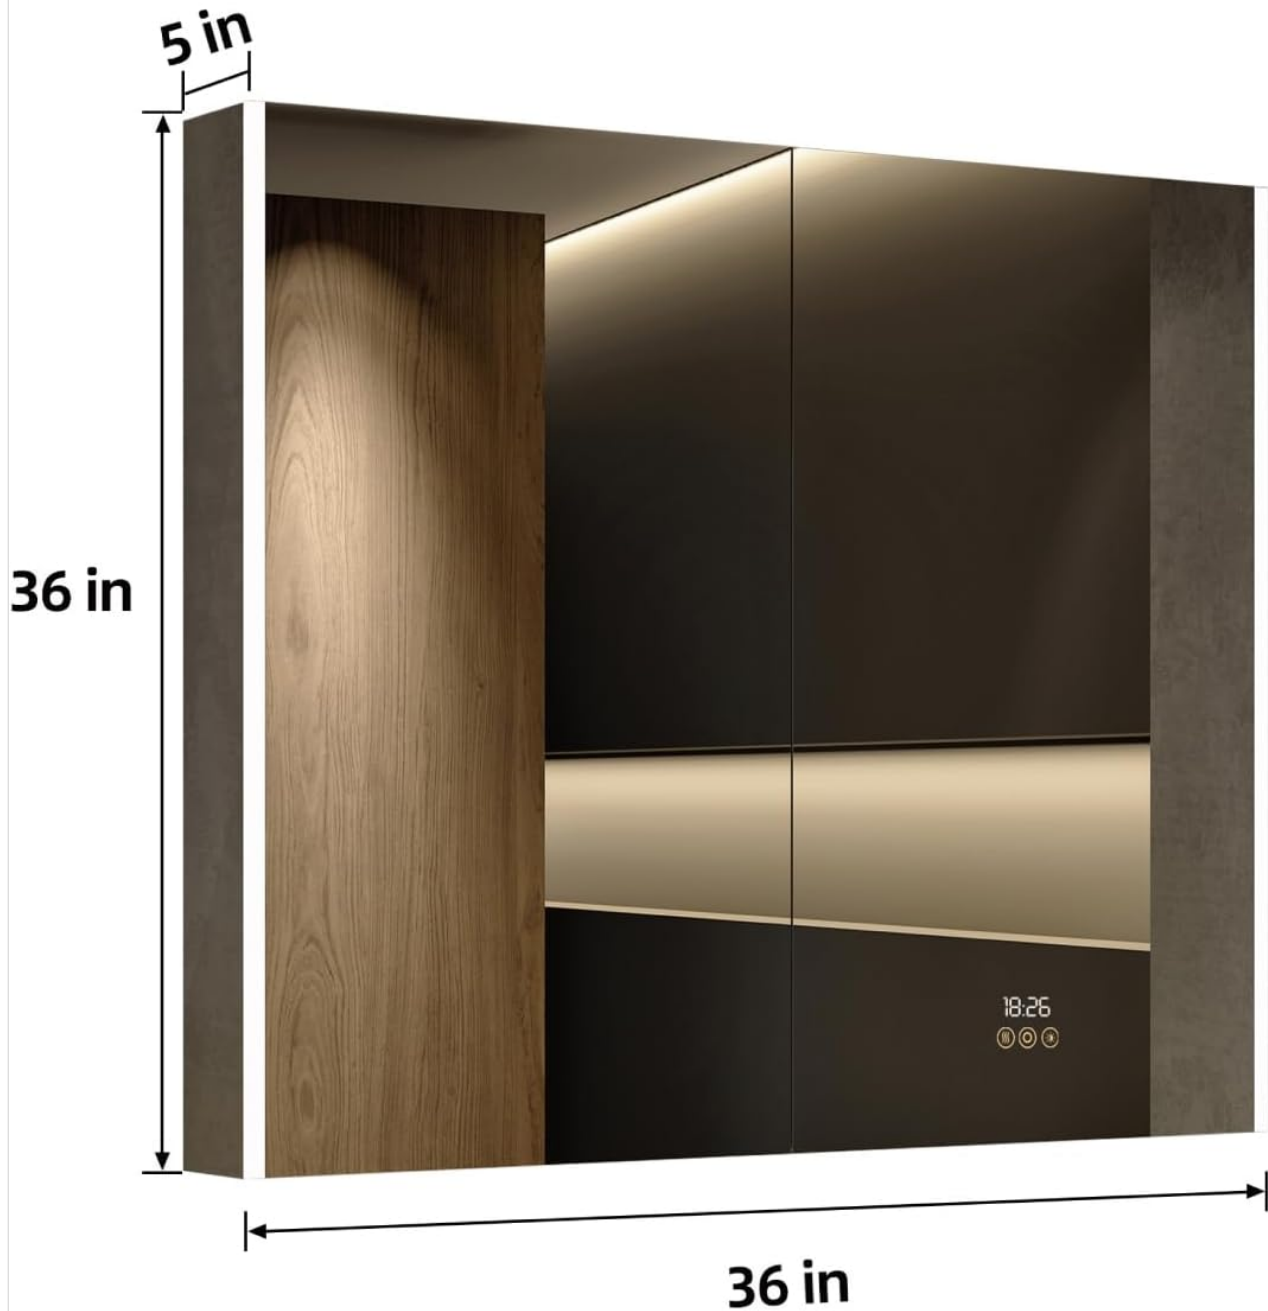

When recessing the medicine cabinet, the rough wall opening size need to be: Width 35.25" Height 35.31" Depth 3.88".


Figure 1: Product Dimensions. The cabinet measures 36 inches in width and height, with a depth of 5 inches. For recessed mounting, the rough wall opening should be 35.25" W x 35.31" H x 3.88" D.

SETUP AND INSTALLATION

The HBEZON medicine cabinet offers versatile installation options: surface wall-mounted or recessed into the wall. Detailed instructions and diagrams are provided in the included mounting hardware guide. Ensure the wall structure can support the cabinet's weight (51 lbs) and that electrical wiring is safely accessible.



Recessed Mount

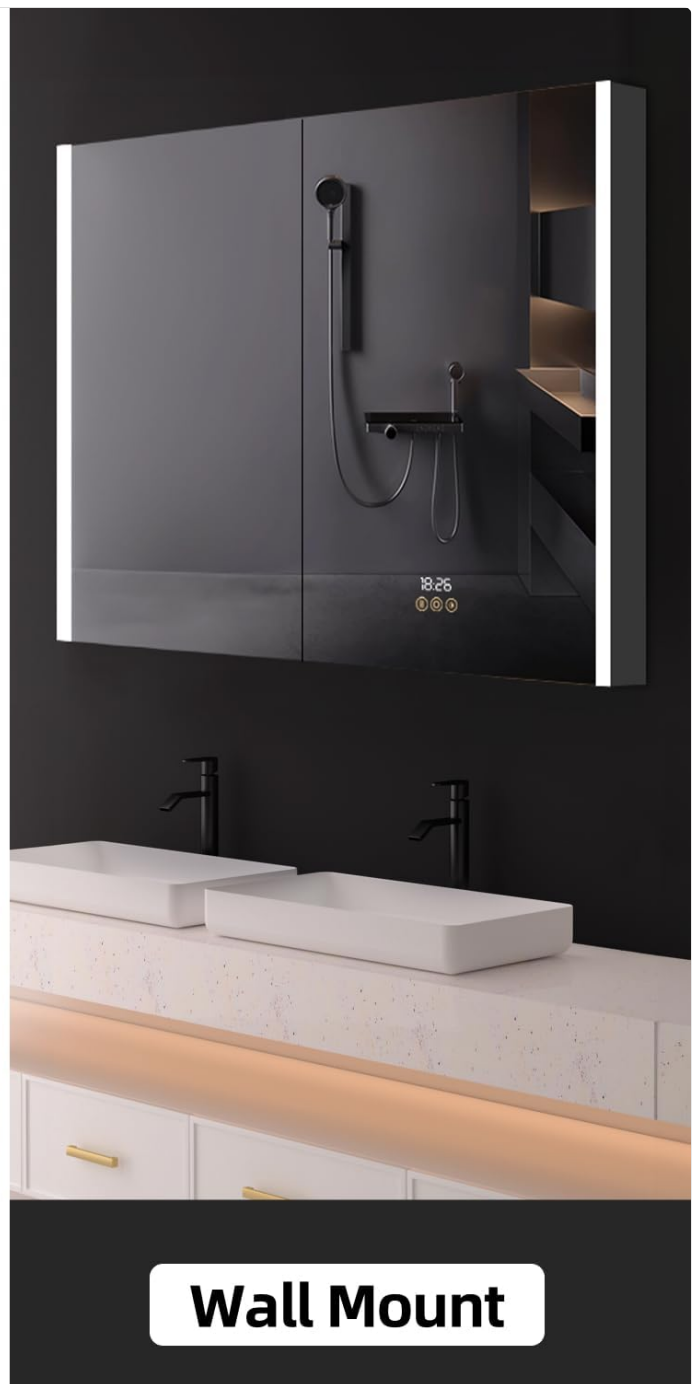

Wall Mount

Figure 2: Illustration of Recessed Mount versus Wall Mount installation options for the medicine cabinet.

Electrical Connection

The cabinet requires hardwired electrical connection. Ensure power is turned off at the circuit breaker before beginning any electrical work. Connect the cabinet's wiring to your bathroom's electrical supply according to local codes. The cabinet includes built-in electrical outlets and USB ports for convenient device charging.

Combining safety with practicality




Built-in Electrical Outlet and USB Ports



Adjustable Tempered Glass Shelves



DTC Soft-Close Hinges

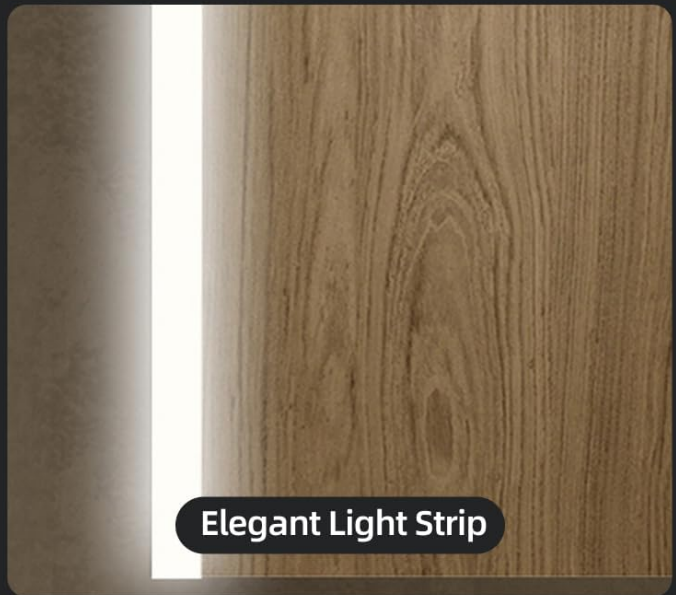

Elegant Light Strip

Figure 3: Close-up view of the built-in electrical outlets and USB ports located inside the medicine cabinet, along with adjustable shelves, soft-close hinges, and the elegant light strip.

Adjusting Shelves

The cabinet features adjustable tempered glass shelves. To adjust, carefully lift the shelf and reposition it into the desired slots. Ensure shelves are securely seated before placing items on them.



Figure 4: Interior view of the medicine cabinet showcasing its spacious storage capacity and adjustable glass shelves, ideal for organizing toiletries and personal items.

OPERATING INSTRUCTIONS

The medicine cabinet is equipped with smart touch controls integrated into the mirror surface for easy operation of its various functions.

LED Lighting Control

- **Power On/Off:** Short press the light icon on the mirror to turn the LED lights on or off.
- **Adjust Brightness:** Long press the light icon to adjust the brightness from 0% to 100%. Release when desired brightness is reached. The cabinet features a memory function that remembers your last light setting.
- **Change Color Temperature:** Short press the color temperature icon to cycle through three lighting modes: warm white (3000K), natural white (4000K), and cold white (6000K).



Figure 5: The LED bathroom mirror offers three color lighting modes: 3000K (warm), 4000K (natural), and 6000K (cold). Short click the touch button to adjust the color temperature.



Figure 6: The brightness of the LED lights can be adjusted from 0% to 100% by long-pressing the touch button. A memory function retains your last brightness setting.

Anti-Fog Function

To activate the anti-fog function, short press the defogger icon on the mirror. This will clear condensation from the mirror surface, ensuring a clear reflection even in steamy bathroom environments. Press again to turn off the anti-fog function and conserve energy.



Anti-Fog Function

Enjoy clear reflections instantly with built-in defogger, ensuring a fog-free mirror even in steamy conditions.

Time & Temp. Display

The upgraded medicine cabinet reduces the brightness of the clock display, and the clock display can be turned off. The new time display is available in both 12-hour and 24-hour formats.

Figure 7: The anti-fog function ensures clear reflections. The upgraded time and temperature display has reduced brightness and can be turned off, supporting both 12-hour and 24-hour formats.

Time and Temperature Display

The cabinet features an integrated digital display for time and temperature. The brightness of this display is reduced to be less intrusive and can be turned off if desired. You can switch between 12-hour and 24-hour formats. Refer to the detailed setup guide for initial time and temperature setting instructions.

Electrical Outlets and USB Ports

Inside the cabinet, you will find built-in electrical outlets and USB ports. These are active when the cabinet is powered. Use them to conveniently charge electric toothbrushes, shavers, smartphones, or other small electronic devices.

Your browser does not support the video tag.

Video 1: An overview of the HBEZON Medicine Cabinet with LED Lights and Mirror, demonstrating its features including the time and temperature display, dimmable lighting, mirrored interior, adjustable shelves, and USB outlets. (Duration: 0:46)

Your browser does not support the video tag.

Video 2: A detailed demonstration of the medicine cabinet’s functionalities, including time and temperature display, brightness dimming, color temperature adjustment, spacious storage, adjustable shelves, electrical outlets, USB ports, soft-close hinges, and anti-fog feature.
(Duration: 1:01)

MAINTENANCE

- **Cleaning the Mirror:** Use a soft, damp cloth with a mild glass cleaner. Avoid abrasive cleaners or harsh chemicals that may damage the mirror surface or electronic components. Ensure the cabinet is unplugged before cleaning.
- **Cleaning the Interior:** Wipe down interior surfaces and shelves with a soft, damp cloth. For stubborn stains, a mild soap solution can be used. Dry thoroughly.
- **Hinge Care:** The soft-close DTC hinges are designed for durability. Periodically check for any loose screws and tighten if necessary. Avoid applying excessive force when opening or closing the doors.
- **Electrical Components:** Do not attempt to service or repair any electrical components yourself. If you experience issues with the lights, outlets, or display, contact qualified service personnel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights not turning on.	No power supply; loose connection; faulty LED strip.	Check circuit breaker. Ensure all electrical connections are secure (consult electrician if unsure). Contact customer support if lights remain off.
Anti-fog function not working.	Function not activated; electrical issue.	Ensure the anti-fog icon is pressed. Check power supply.
Time/Temperature display is too bright or not visible.	Brightness setting; display turned off.	The display has reduced brightness by design. Check if the display has been manually turned off via the touch controls.
Electrical outlets/USB ports not providing power.	No power to cabinet; internal wiring issue.	Verify the cabinet is receiving power. Ensure devices are properly plugged in. If issues persist, consult a qualified electrician.
Doors do not close smoothly.	Hinges need adjustment or lubrication; obstruction.	Check for any obstructions. Inspect hinges for damage or looseness and adjust/tighten as needed.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact HBEZON customer support directly. If you encounter any issues not covered in this manual or require further assistance, please reach out to HBEZON customer service through the contact information provided on their official website or your purchase platform.

HBEZON Store: [Visit HBEZON Store on Amazon](#)

