

HBEZON 2028

HBEZON Medicine Cabinet with LED Lights and Mirror User Manual

Model: 2028

1. INTRODUCTION

Thank you for choosing the HBEZON Medicine Cabinet with LED Lights and Mirror. This manual provides detailed instructions for the safe installation, operation, and maintenance of your new medicine cabinet. Please read this manual thoroughly before installation and retain it for future reference.

This versatile cabinet is designed for both surface and recessed mounting, featuring advanced functionalities such as adjustable LED lighting, an anti-fog system, and integrated power outlets for convenience.

2. SAFETY INFORMATION

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

- Always unplug the cabinet from the power source before cleaning or performing any maintenance.
- Do not install the cabinet in a location where it may come into direct contact with water.
- Always use appropriate personal protective equipment (PPE) when installing the cabinet, including safety glasses and gloves.
- Consult a qualified electrician if you are unsure about any aspect of electrical installation or wiring.
- Ensure all electrical connections comply with local building codes and regulations.
- Do not attempt to modify or repair the cabinet yourself. Refer all servicing to qualified service personnel.

3. PRODUCT FEATURES

The HBEZON Medicine Cabinet is equipped with several innovative features to enhance your bathroom experience:

3 Color Lighting Modes & Adjustable Brightness

The LED cabinet mirror features a high-brightness 6000 Lumens LED light strip. It offers three distinct color modes: warm (3000K), natural (4000K), and cold white (6000K). Brightness is fully adjustable from 0% to 100% to suit your needs. A memory function retains your last light setting.



LED BATHROOM MIRROR

Short click to adjust the color temperature

Image: The mirror displaying three different light color temperatures (warm, natural, cold white) and a hand interacting with the touch controls.



Image: Illustration of the brightness dimmer and memory function, showing the mirror at 30% and 80% brightness.

Anti-fog Function

The built-in anti-fog function ensures a clear reflection even in steamy bathroom environments. Activate or deactivate the anti-fog feature as needed for energy efficiency.



Anti-Fog Function

Enjoy clear reflections instantly with built-in defogger, ensuring a fog-free mirror even in steamy conditions.

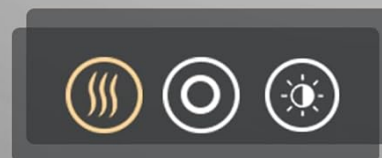


Image: A visual comparison of the mirror with and without the anti-fog function activated, showing a clear reflection.

Electrical Outlet, USB Port & Soft-Close DTC Hinges

Conveniently charge devices with integrated electrical outlets and USB ports. The rustproof soft-close DTC hinges ensure smooth, quiet door operation.

Combining safety with practicality



Image: Detailed view of the internal electrical outlet, USB port, adjustable glass shelves, and soft-close hinges.

Space-Saving Design with Adjustable Shelves

Adjustable shelves maximize storage space, keeping items organized, dust-free, and private within the enclosed design. Ideal for daily essentials.



Image: The interior of the medicine cabinet showcasing its spacious storage and adjustable shelves filled with various items.

Product Feature Overview Video

Your browser does not support the video tag.

Video: An official product video demonstrating the key features of the HBEZON Medicine Cabinet, including lighting, anti-fog, storage, and soft-close hinges.

4. INSTALLATION

The HBEZON Medicine Cabinet can be installed as either a recessed or surface wall-mounted unit. Ensure you have the necessary tools and assistance before beginning installation.

Dimensions and Cutout

Medicine Cabinet Dimensions



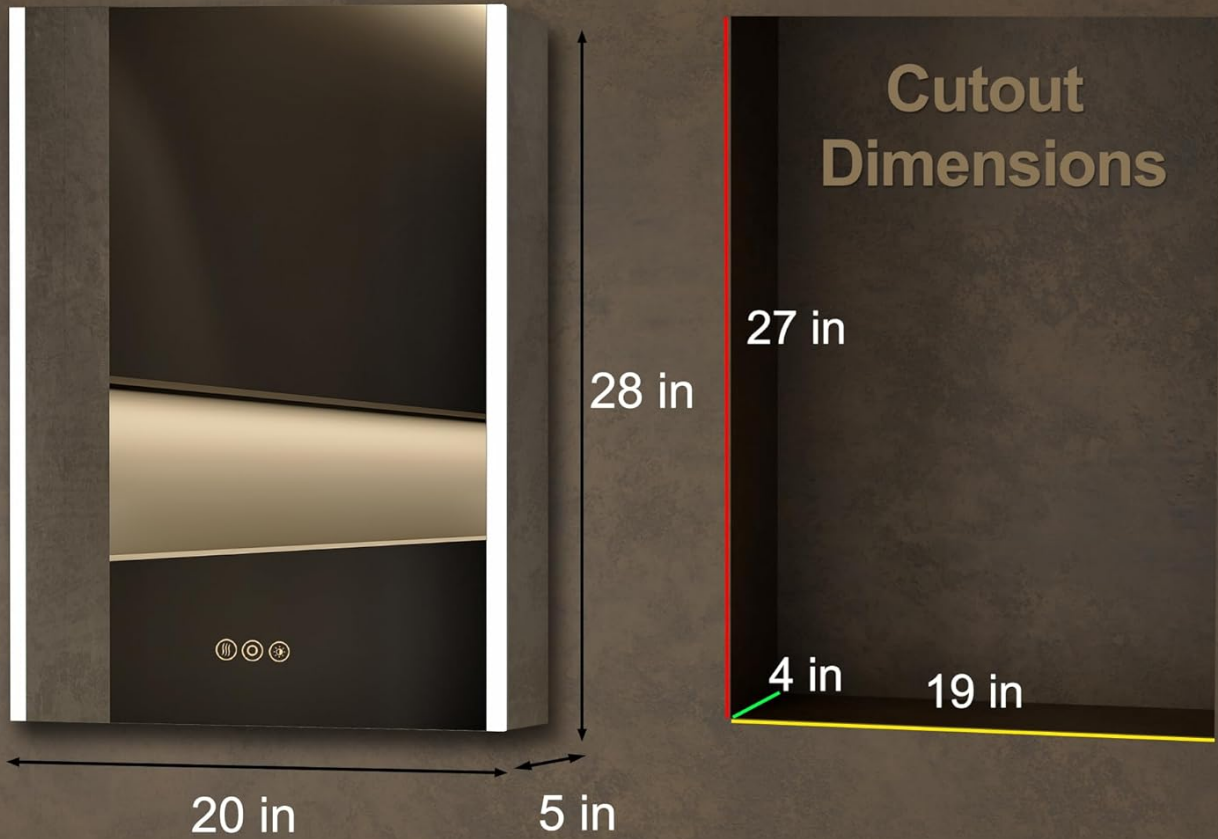


Image: Detailed dimensions for the medicine cabinet and the required wall cutout for recessed installation.

Mounting Options

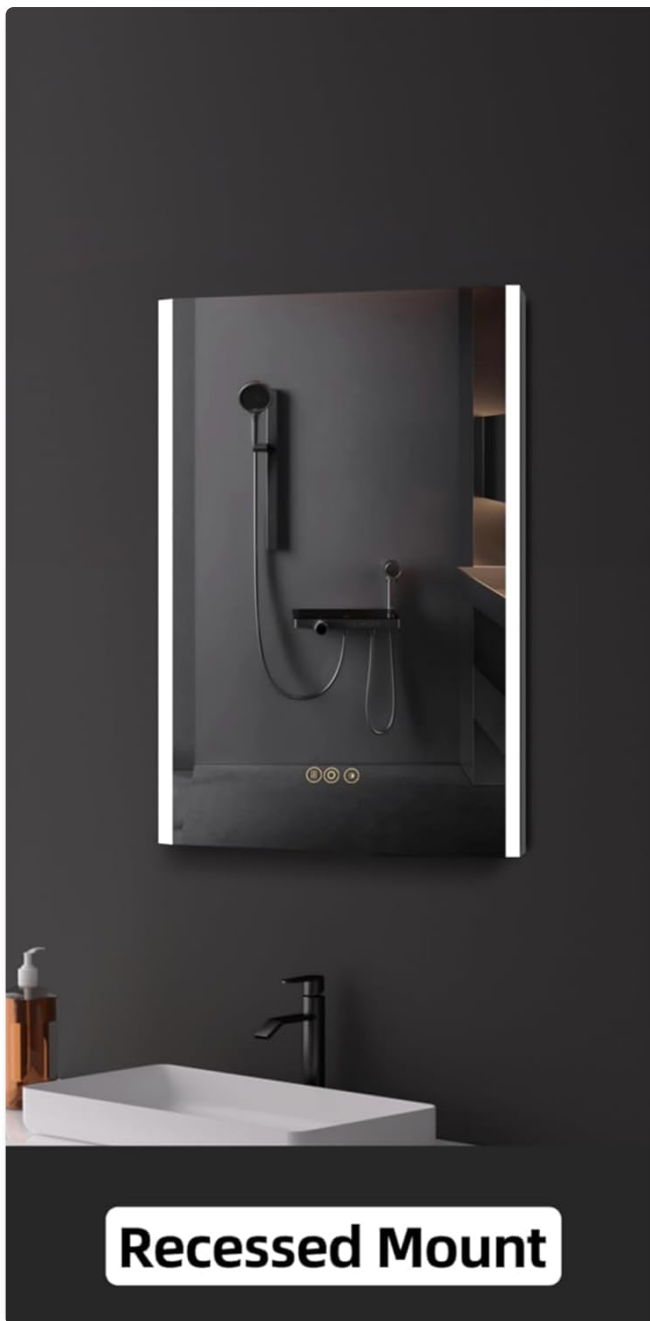

Recessed Mount

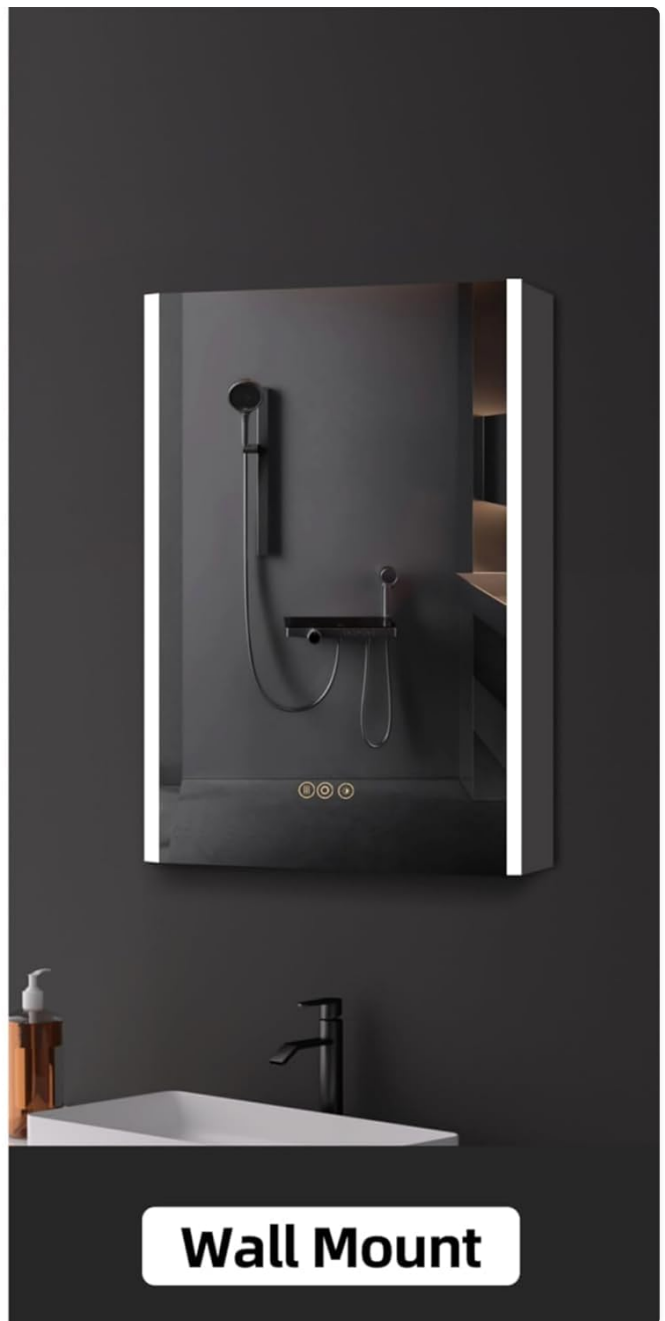

Wall Mount

Image: Visual representation of the medicine cabinet installed in both recessed and wall-mounted configurations.

General Installation Steps:

1. **Preparation:** Turn off power at the circuit breaker. Identify the desired location for the cabinet. For recessed mounting, mark and cut the wall opening according to the specified cutout dimensions. For surface mounting, mark the mounting points.
2. **Wiring:** Route electrical wiring to the installation area. Connect the cabinet's electrical wires to your household wiring according to local electrical codes. Ensure all connections are secure and insulated.
3. **Mounting:** Secure the cabinet to the wall studs using appropriate mounting hardware (included). For recessed installation, ensure the cabinet is flush with the wall. For surface mounting, attach the cabinet directly to the wall.
4. **Final Checks:** Once securely mounted and wired, turn the power back on. Test all functions: lights, defogger, and electrical outlets/USB ports.

5. OPERATING INSTRUCTIONS

The medicine cabinet features intuitive touch controls integrated into the mirror surface.



Image: The medicine cabinet showing the touch control icons on the mirror surface.

- **Power On/Off & Brightness Adjustment:** Touch the power icon (circle with a dot) to turn the lights on or off. Press and hold the power icon to adjust the brightness (dimmer function).
- **Color Temperature Change:** Touch the light bulb icon to cycle through the three color modes: warm white, natural white, and cold white.
- **Anti-Fog Function:** Touch the steam icon (three wavy lines) to activate or deactivate the anti-fog feature.
- **Memory Function:** The cabinet automatically remembers your last light brightness and color temperature settings when powered off and on.
- **Electrical Outlets & USB Ports:** Located inside the cabinet, these ports are active when the cabinet is powered. Use the switch next to the outlets to control their power.

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your medicine cabinet.

- **Cleaning the Mirror:** Use a soft, damp cloth and a non-abrasive glass cleaner. Do not spray cleaner directly onto the mirror surface; apply it to the cloth first. Avoid harsh chemicals or abrasive materials that could damage the

mirror or frame.

- **Cleaning the Interior:** Wipe down the interior surfaces and shelves with a soft, damp cloth. For stubborn stains, use a mild household cleaner. Ensure the cabinet is dry before closing the door.
- **Hinge Maintenance:** The soft-close hinges are designed for durability. Periodically check for any loose screws and tighten if necessary. Avoid applying excessive force when opening or closing the door.
- **Electrical Components:** Do not attempt to clean or service any electrical components while the cabinet is powered. If you notice any issues with the lights, outlets, or USB ports, contact qualified service personnel.

7. TROUBLESHOOTING

If you encounter any issues with your medicine cabinet, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lights not turning on	No power supply; loose connection; faulty LED driver.	Check circuit breaker. Ensure all wiring connections are secure. If problem persists, contact customer support.
Anti-fog not working	Anti-fog function not activated; power issue.	Ensure the anti-fog touch button is pressed. Check power supply to the cabinet.
Brightness not adjusting	Incorrect operation; internal fault.	Press and hold the power button to adjust brightness. If still unresponsive, contact customer support.
Outlets/USB not working	Outlet switch off; no power.	Ensure the internal switch for the outlets is in the ON position. Verify cabinet has power.
Door not closing smoothly	Hinges need adjustment; obstruction.	Check for any obstructions. Inspect hinges for damage or misalignment and adjust if possible.

If the issue is not resolved by the above steps, please contact HBEZON customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	HBEZON
Model Number	2028
Color	Silver
Product Dimensions	5"D x 19.99"W x 28"H
Mounting Type	Wall Mount or Recessed Mount
Weight Limit	60 Pounds
Included Components	Shelves, LED lights, Clock, Temperature display, Defogger, Mounting hardware


Feature	Detail
Finish Type	High-Gloss
Number of Shelves	3
Frame Material	Aluminum
Item Weight	42.1 pounds
Country of Origin	China
Special Features	Smart Touch Control, Lighting Memory Function, Dimmable, 3 Color Lighting Modes, Defogger, Space-saving, Soft-close Hinges, Electrical Outlet & USB Port, Adjustable Shelves

9. WARRANTY AND SUPPORT

HBEZON stands behind the quality of its products. For warranty information, technical support, or replacement parts, please contact HBEZON customer service through the retailer where the product was purchased or visit the official HBEZON website. Please have your model number and purchase date available when contacting support.




© 2024 HBEZON. All rights reserved.

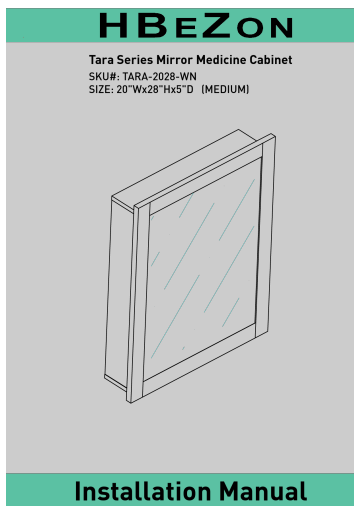

[HBEZON Tara Series Mirror Medicine Cabinet Installation Manual](#)

Step-by-step installation guide for the HBEZON Tara Series Mirror Medicine Cabinet (Model TARA-2028-WN), including parts list, assembly instructions, wall and recessed mounting, and care information.

lang:en **score:15** filesize: 1.36 M page_count: 14 document date: 2025-08-01

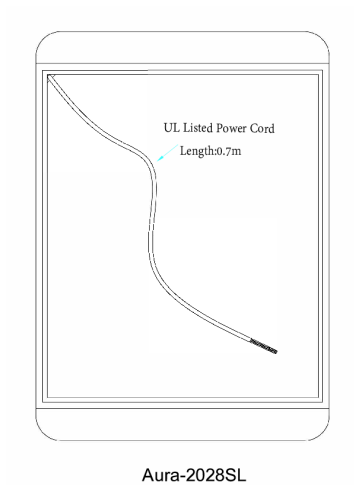

[Aura Series LED Lighting Power Cord Lengths and Specifications](#)

Technical specifications detailing the UL Listed power cord lengths for Aura Series LED lighting models including Aura-2028SL (0.7m), Aura-2436SL (0.9m), Aura-3636SL-D (1.1m), Aura-4836SL-D (1.5m), and Aura-6036SL-T (1.7m).

lang:en **score:9** filesize: 559.69 K page_count: 5 document date: 2024-05-16