

Zopsc Zopsc6fev94rsth

Zopsc Smart Glasses User Manual

Model: Zopsc6fev94rsth

Brand: Zopsc

1. INTRODUCTION

The Zopsc Smart Glasses combine the functionality of sunglasses with integrated audio technology, allowing for hands-free calling and music playback. These glasses feature UV400 protection, Bluetooth 5.3+EDR connectivity, and a lightweight design for comfortable wear during various outdoor activities.

This manual provides essential information for the proper setup, operation, and maintenance of your Zopsc Smart Glasses. Please read it thoroughly before using the product.

2. WHAT'S IN THE BOX

- Zopsc Smart Glasses
- Magnetic Charging Cable
- Cleaning Cloth
- Protective Case
- User Manual



Image: Zopsc Smart Glasses, protective case, magnetic charging cable, and cleaning cloth.

3. PRODUCT OVERVIEW

Key Features

- **Open-Ear Audio:** Listen to music and take calls without blocking ambient sounds.
- **UV400 Protection:** Lenses provide high-level protection against harmful UV rays.
- **Bluetooth 5.3+EDR:** Ensures stable and fast wireless connection up to 10-15 meters.
- **Integrated Microphone:** For clear hands-free calls and voice commands.
- **Magnetic Charging:** Convenient and secure charging mechanism.
- **Lightweight TR Material:** Durable and comfortable frame design.



Image: High-level UV protection provided by the smart glasses.



Image: Bluetooth V5.3+EDR connectivity with a range of 10-15 meters.

Lightweight frame
Comfortable to wear



Image: Detail of the integrated speaker for professional sound.



Image: Lightweight frame designed for comfortable wear.

4. SETUP

4.1 Charging the Glasses

1. Connect the magnetic charging cable to the charging port located on the temple arm of the glasses.
2. Connect the other end of the USB charging cable to a standard USB power adapter (not included) or a computer's USB port.
3. The indicator light on the glasses will illuminate during charging.
4. A full charge typically takes 1.5 to 2 hours. The indicator light will change or turn off once charging is complete.



Image: Magnetic charging port for easy and secure connection.

4.2 Bluetooth Pairing

1. Ensure the glasses are fully charged.
2. Press and hold the power button (usually located on the temple arm) until the indicator light flashes, indicating pairing mode.
3. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
4. Search for available devices and select "Zopsc Smart Glasses" (or similar name) from the list.
5. Once connected, the indicator light on the glasses will stop flashing or change to a steady light.
6. The glasses are now ready for use.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the power button for approximately 3 seconds until you hear a power-on prompt or see the indicator light.
- **Power Off:** Press and hold the power button for approximately 5 seconds until you hear a power-off prompt or the

indicator light turns off.

5.2 Music Playback

- **Play/Pause:** Tap the touch control area (usually on the temple arm) once.
- **Next Track:** Double-tap the touch control area.
- **Previous Track:** Triple-tap the touch control area.
- **Volume Control:** Adjust volume directly from your connected device.

5.3 Call Handling

- **Answer Call:** Tap the touch control area once when an incoming call is received.
- **End Call:** Tap the touch control area once during an active call.
- **Reject Call:** Press and hold the touch control area for 2 seconds when an incoming call is received.

5.4 Voice Assistant

- **Activate Voice Assistant:** Press and hold the touch control area for 2 seconds (when not on a call) to activate your device's voice assistant (e.g., Siri, Google Assistant).

Optimized Operation One button better touch control



Image: Optimized touch control area for various functions.

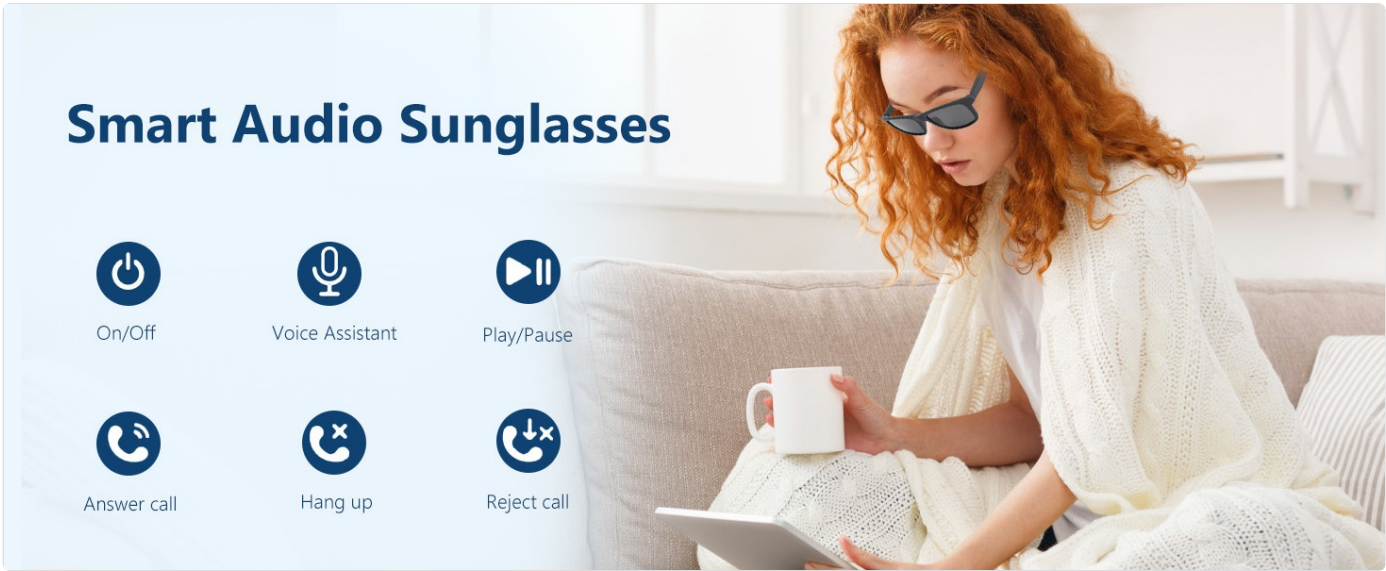


Image: Overview of smart audio sunglasses controls.

6. MAINTENANCE

- **Cleaning Lenses:** Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the lenses. Avoid using abrasive materials or harsh chemicals.
- **Cleaning Frame:** Wipe the frame with a soft, damp cloth. Do not immerse the glasses in water.
- **Storage:** When not in use, store the glasses in their protective case to prevent scratches and damage.
- **Avoid Extreme Conditions:** Do not expose the glasses to extreme temperatures, direct sunlight for prolonged periods, or high humidity.

7. TROUBLESHOOTING

- **Glasses not powering on:** Ensure the glasses are fully charged. Connect to the magnetic charging cable and allow sufficient time to charge.
- **Unable to pair via Bluetooth:**
 - a. Ensure the glasses are in pairing mode (indicator light flashing).
 - b. Make sure Bluetooth is enabled on your device.
 - c. Move the glasses closer to your device (within 10-15 meters).
 - d. Forget the device from your phone's Bluetooth settings and try pairing again.
- **No sound or poor audio quality:**
 - a. Check the volume level on both the glasses and your connected device.
 - b. Ensure the glasses are properly connected to your device via Bluetooth.
 - c. Move closer to your device to avoid interference.
- **Calls not working:** Ensure the glasses are connected and selected as the audio output device for calls on your smartphone.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	Zopsc6fev94rsth
Connectivity Technology	Bluetooth V5.3+EDR
Wireless Range	10-15 meters
Battery Capacity	160 mAh Lithium Ion
Charging Time	1.5 - 2 hours
Playtime	Up to 4 hours
Call Time	Up to 5 hours
Standby Time	Up to 100 hours
UV Protection	UV400 Level
Frame Material	TR Plastic
Human Interface Input	Microphone, Touch Control
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This product comes with a standard warranty. Please refer to the warranty card included in your packaging or contact Zopsc customer support for specific details regarding warranty coverage and duration.

9.2 Customer Support

For technical assistance, troubleshooting, or any questions regarding your Zopsc Smart Glasses, please contact Zopsc customer support. Contact information can typically be found on the product packaging, the official Zopsc website, or through your retailer.

© 2023 Zopsc. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question