

- Manuals.plus /
- › Marsail /
- › Marsail MS01-1 Queen Adjustable Bed Base User Manual

Marsail MSABB01B-Q1-US

Marsail MS01-1 Queen Adjustable Bed Base User Manual

Model: MSABB01B-Q1-US

1. INTRODUCTION

This user manual provides detailed instructions for the assembly, operation, and maintenance of your Marsail MS01-1 Queen Adjustable Bed Base. This adjustable bed base features independent head and foot incline, multiple leg height options, massage functions, USB-A and USB-C charging ports, and an under-bed nightlight. Please read this manual thoroughly before setup and use to ensure safe and proper operation.



Figure 1: Marsail MS01-1 Queen Adjustable Bed Base in an inclined position, showcasing its design and functionality.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- **Weight Capacity:** Do not exceed the maximum weight capacity of 750 lbs. This includes the mattress and occupants.
- **Pinch Points:** Keep hands, feet, and pets clear of moving parts and mechanisms during operation to avoid pinch injuries.
- **Electrical Safety:** Ensure the power cord is not pinched or damaged. Do not operate the bed base if the cord or plug is damaged. Do not attempt to open or service the control box or motors.
- **Children and Pets:** Do not allow children or pets to play on or under the bed base. Supervise children near the bed base.
- **Liquid Exposure:** Avoid spilling liquids on the bed base, especially near electrical components.
- **Medical Devices:** Consult your physician before using this product if you have a pacemaker or similar medical device, as the massage function may interfere with its operation.
- **Proper Use:** This product is designed for use with a mattress. Do not sit or stand on the bed base without a mattress.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Adjustable Bed Base Frame (pre-assembled sections)
- Wireless Remote Control
- Power Adapter and Cord
- Legs (multiple sets for height options: 2", 3", and 8")
- Mattress Retainer Bar
- Installation Manual (this document)

4. SETUP AND ASSEMBLY

The Marsail MS01-1 Adjustable Bed Base is designed for quick and easy assembly, typically taking around 3 minutes for the final product assembly. No additional tools are required.

1. **Unpack:** Carefully remove all components from the packaging. Place the folded bed base on its side in the desired location.
2. **Attach Legs:** Screw the desired leg height options (2", 3", or 8" for total heights of 8", 10", 11", or 13") into the designated threaded holes on the underside of the bed base. Ensure all legs are securely tightened.
3. **Unfold Frame:** Carefully unfold the bed base sections. It is recommended to have assistance for this step due to the weight and size of the unit.
4. **Install Retainer Bar:** Insert the mattress retainer bar into the designated slots at the foot of the bed base. This bar prevents the mattress from sliding during adjustments.
5. **Connect Power:** Plug the power cord into the control box located under the bed base, and then plug the adapter into a grounded electrical outlet.
6. **Pair Remote:** Follow the instructions in the remote control section to pair the wireless remote with the bed base.

3

Minute Quick Installation

Final Product Assembly



Note: It's an approximate time and it depends on the actual situation.

Figure 2: Visual guide for the quick assembly process, primarily involving attaching legs and unfolding the frame.

Suit the Height for All-Age Users

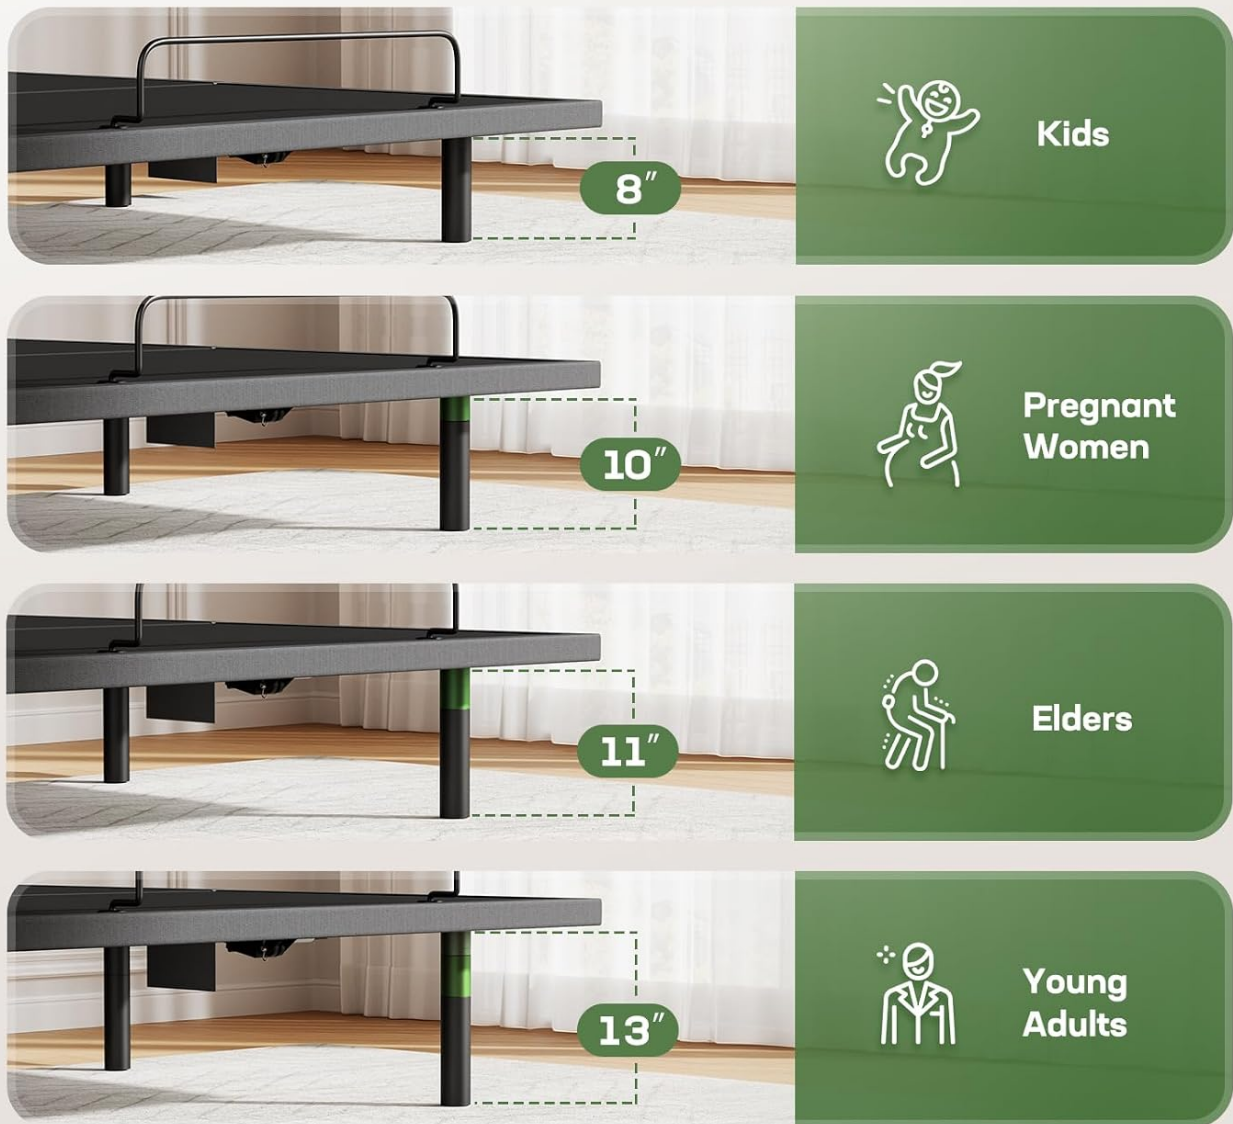


Figure 3: Illustration of the four adjustable leg height options (8", 10", 11", 13") to suit personalized needs and user preferences.

5. OPERATING INSTRUCTIONS

Your Marsail MS01-1 Adjustable Bed Base is operated using the included wireless remote control. Familiarize yourself with the remote's functions for optimal use.

Remote Control Functions:

Easy to Control in Bed

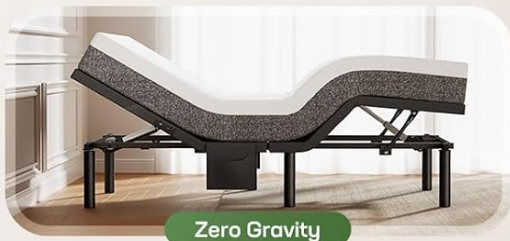
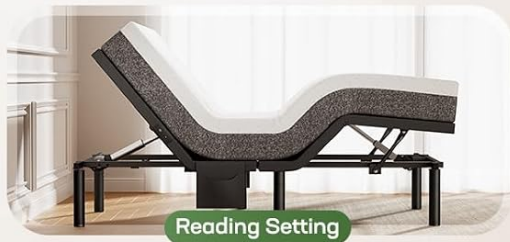
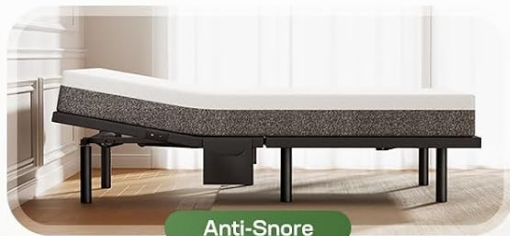


Figure 4: The wireless remote control and its various functions for adjusting the bed base.

- **Head Incline:** Use the head up/down buttons to raise the head of the bed up to 65°.
- **Foot Incline:** Use the foot up/down buttons to raise the foot of the bed up to 45°.
- **Massage:** Activate the soothing wave and intense pulse massage feature. Use the 'MODE' button to cycle through different massage modes and intensity levels.
- **Timer:** Set a timer for the massage function (e.g., 10, 20, or 30 minutes).
- **Memory Presets (M1, M2):** Program and recall your favorite positions. To set a position, adjust the bed to your desired incline, then press and hold M1 or M2 until the bed beeps. To recall, simply press M1 or M2.
- **Zero Gravity (ZG):** Press the ZG button for a pre-programmed position that elevates both the head and feet, designed to relieve pressure on the back.
- **Flat:** Press the 'FLAT' button to return the bed base to a completely flat position.

Convenience Features:

- **USB Charging Ports:** The bed base is equipped with two USB-A and two USB-C ports (two on each side) for convenient device charging.

- **Under-Bed Nightlight:** An integrated LED light illuminates the area under the bed, featuring a 5-minute automatic shut-off function for energy saving.
- **Storage Pockets:** Pockets are located on each side of the bed base for storing the remote control or other small items.



Figure 5: Demonstrates the independent head (0-65°) and foot (0-45°) incline capabilities for improved sleep quality.

Illuminate the Dark

Charge Your Devices in Bed



X2 X2
USB-A and USB-C Ports
on Both Sides

Under Bed
Lighting

Figure 6: The integrated USB-A and USB-C charging ports on both sides, along with the under-bed nightlight feature.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Marsail MS01-1 Adjustable Bed Base, follow these maintenance guidelines:

- **Cleaning:** Wipe the bed base frame with a damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric areas, use a mild fabric cleaner if necessary.
- **Check Connections:** Periodically check all electrical connections (power cord, remote control cable if applicable) to ensure they are secure and undamaged.
- **Lubrication:** The moving parts and motors are designed to be maintenance-free and do not require lubrication.
- **Weight Distribution:** Distribute weight evenly on the bed base to prevent undue stress on the frame and motors.

7. TROUBLESHOOTING

If you encounter any issues with your Marsail MS01-1 Adjustable Bed Base, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Bed does not operate / No power	Power cord disconnected; Remote not paired; Circuit breaker tripped.	Check all power connections; Re-pair remote control (refer to remote section); Check household circuit breaker.
Remote control not responding	Batteries low/dead; Remote not paired; Interference.	Replace remote batteries; Re-pair remote control; Remove sources of interference (e.g., other wireless devices).
USB ports not charging effectively	Cable length/quality; Device power requirements.	Use a shorter, high-quality charging cable (e.g., under 3 feet); Ensure the device is compatible with the port's output.
Motor noise during operation	Normal operation; Obstruction.	Some motor noise is normal. Ensure no objects are obstructing the moving parts under the bed.
Massage function not working	Power issue; Motor issue.	Check power connections. If the issue persists, contact customer support.

If the problem persists after attempting these solutions, please contact Marsail customer support for further assistance.

8. SPECIFICATIONS


Key specifications for the Marsail MS01-1 Queen Adjustable Bed Base:

Feature	Detail
Model Number	MSABB01B-Q1-US
Size	Queen
Product Dimensions	79"L x 59"W x 39"H
Weight Capacity	Up to 750 lbs
Head Incline	Up to 65°
Foot Incline	Up to 45°
Leg Height Options	8", 10", 11", 13"
USB Ports	2x USB-A, 2x USB-C
Special Features	Massage, No Box Spring Needed, Wireless Remote Control, Under-Bed Nightlight
Construction Material	High-strength Steel
Color	Black
Item Weight	124.1 pounds

Quality You Can Trust




Weight Capacity
750LBS

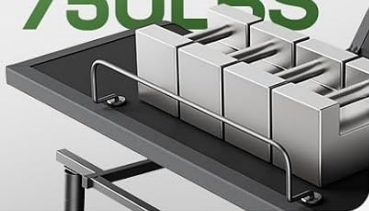

Dual OKIN Motor



15000+
Lift Cycles

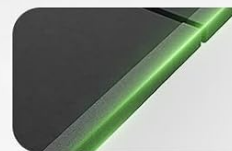

**All-Steel
Structure**

Figure 7: Details on the robust construction and components ensuring durability and performance.

9. WARRANTY AND SUPPORT

Marsail products are designed for quality and durability. Specific warranty information is typically provided with your product packaging. Please refer to the documentation included in your package for details regarding warranty coverage, terms, and conditions.

For any questions, technical support, or warranty claims, please contact Marsail customer support through the retailer where you purchased the product or visit the official Marsail website. Keep your purchase receipt as proof of purchase for warranty purposes. This product is eligible for 30-day easy returns through the seller. Additional protection plans may be available for purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D2V74VTX>

More documents and user manuals: **<https://manuals.plus/>**