

[Manuals.plus](#) /

› [CallToU](#) /

› CallToU Wireless Motion Sensor Alarm Indoor Motion Detector Alarm, Bed Alarms for Elderly Dementia Patients, Motion Sensor Door Chime with 500 FT Range, 5 Adjustable Volume 1 Sensor + 1 Receiver

## CallToU CC01CX+HW12 1-1

# CallToU Wireless Motion Sensor Alarm System

Model: CC01CX+HW12 1-1

## PRODUCT OVERVIEW

---

The CallToU Wireless Motion Sensor Alarm System is designed to enhance safety and monitoring in various indoor environments. This system is particularly useful for caregivers monitoring elderly individuals, providing alerts for movement such as getting out of bed or leaving a room. It also functions as a versatile motion-activated door chime for homes or businesses, and can contribute to general home security by detecting unauthorized entry.

The system consists of a plug-in receiver and one or more motion sensors, offering a wide wireless range and adjustable settings to suit diverse needs. Its expandable design allows for comprehensive coverage across multiple locations.



*Image: The CallToU Wireless Motion Sensor Alarm System, featuring the white plug-in receiver and the compact motion sensor.*

## WHAT'S INCLUDED

---

Your CallToU Wireless Motion Sensor Alarm System package includes the following components:

- 1 x Plug-in Receiver
- 1 x Motion Sensor
- 1 x User Manual
- 3 x AAA Batteries (for motion sensor)
- Screws (for mounting)
- Stickers (for mounting)

Your browser does not support the video tag.

*Video: This video demonstrates the unboxing and contents of the CallToU CC01 Bed Alarm for Elderly system, showing the included receiver, motion sensors, user manual, batteries, screws, and stickers.*


## SETUP AND INSTALLATION

### 1. Motion Sensor Installation & Battery Change

The motion sensor can be installed using either the included double-sided stickers for easy placement or screws for a more permanent fixture. The sensor is designed for easy battery replacement.

1. To install the batteries, slide open the battery cover on the motion sensor.
2. Insert 3 AAA 1.5V batteries (included) into the compartment, ensuring correct polarity.
3. Slide the battery cover back onto the sensor until it clicks into place.
4. For mounting, attach the sensor to a wall or desk using the provided double-sided stickers or by securing it with screws. The sensor offers 180° adjustment and 360° rotation for optimal positioning.

## MOTION SENSOR DOOR CHIME FOR BUSINESS

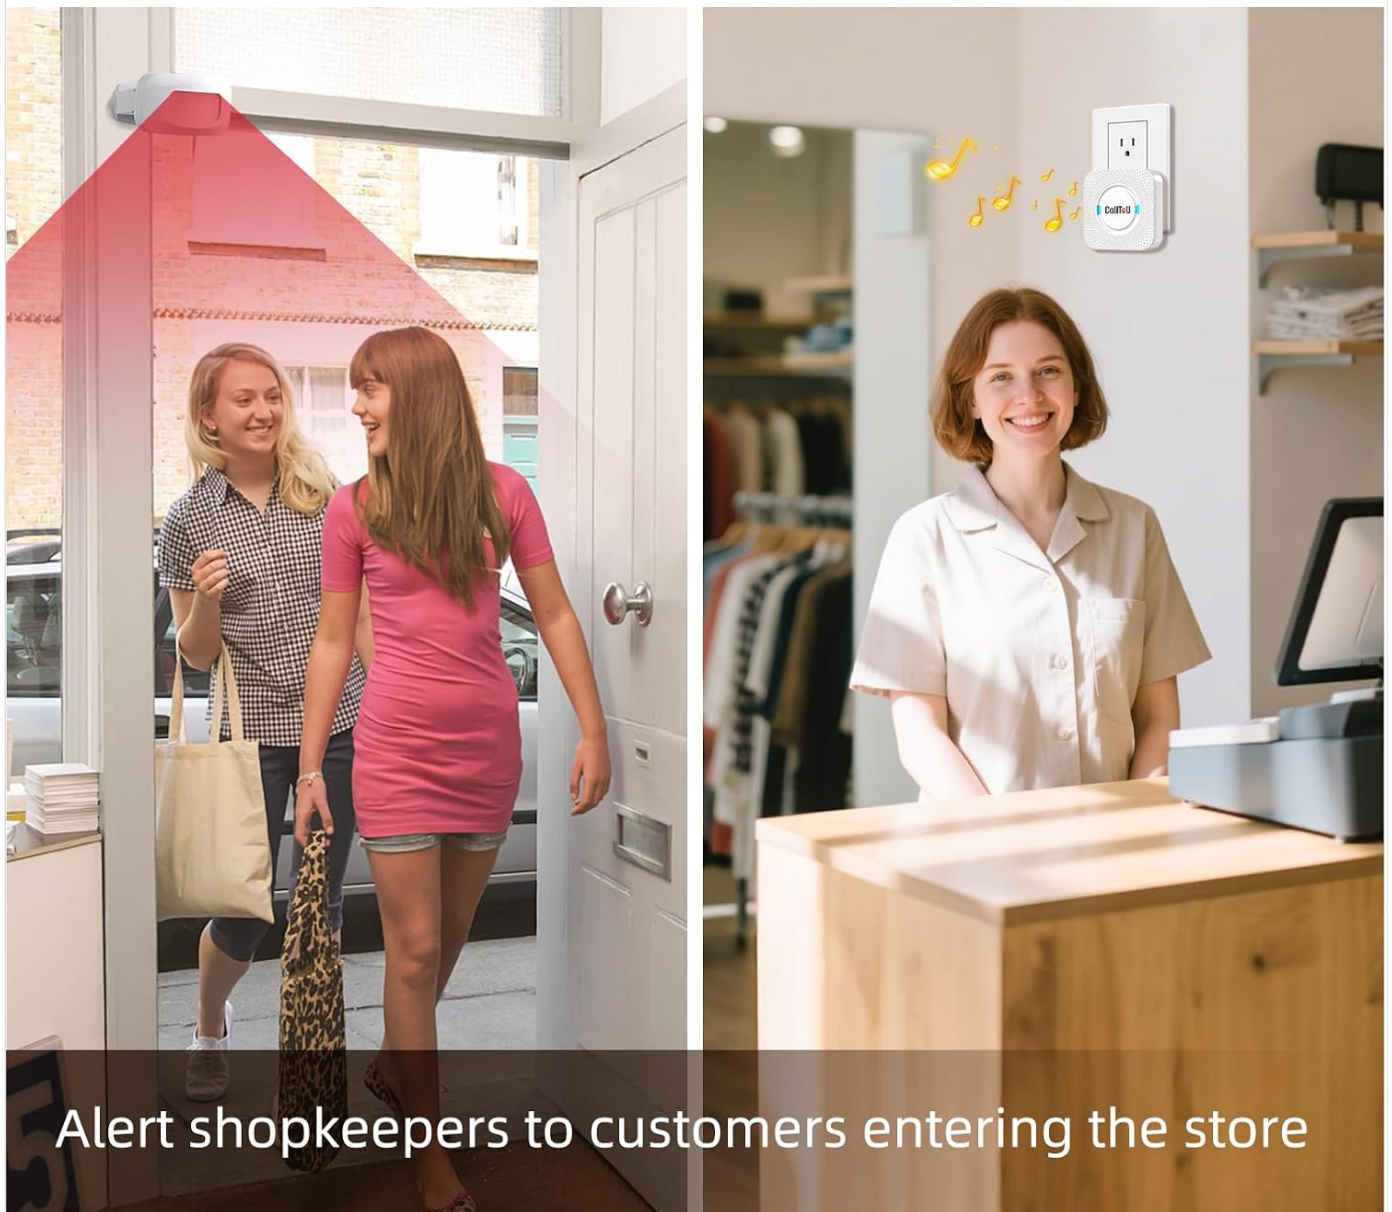

Alert shopkeepers to customers entering the store

*Image: The motion sensor with its adjustable mounting bracket, highlighting 180° adjustment and 360° rotation capabilities, and showing the battery compartment for 3 AAA batteries.*

Your browser does not support the video tag.

*Video: This video provides instructions on how to install the CC01 Series Motion Sensor using either adhesive stickers or screws, and demonstrates the process of changing its AAA batteries.*

## 2. Pairing Motion Sensors with the Receiver

The motion sensor alarm system is pre-programmed at the factory. If re-pairing is needed or additional sensors are added, follow these steps:

1. Ensure the motion sensor switch is turned **OFF**.
2. Plug the receiver into a power outlet.
3. On the receiver, select your desired ringtone using the forward/backward buttons. There are 38 ringtones to choose from.
4. Press and hold the **Volume** key on the receiver for 5 seconds until the LED flashes and you hear a "ding" sound. This indicates the receiver is in pairing mode.
5. Turn **ON** the motion sensor's switch. The sensor will send a signal. The receiver will receive the signal and emit a "ding ding" sound, confirming successful pairing.
6. Test the sensing range and direction before finalizing the sensor's position.

Your browser does not support the video tag.

*Video: This video guides users through the process of pairing CallToU CC01 Motion Sensors with the receiver, including selecting a ringtone and activating the pairing mode.*

## OPERATING INSTRUCTIONS

---

### 1. Changing Receiver's Ringtone

To change the melody played by the receiver when a motion is detected:

1. Press the **Forward** or **Backward** buttons on the receiver to cycle through the 38 available ringtones.
2. Once you hear the desired ringtone, stop pressing the buttons. The selected ringtone will be saved automatically.

# PLUG-IN RECEIVER



Image: The CallToU Plug-in Receiver, illustrating its volume control, backward and forward buttons for ringtone selection, and the blue LED indicator.

Your browser does not support the video tag.

Video: This video demonstrates how to change the ringtone on the CallToU CC01 Motion Sensor Receiver, showcasing the available chime options.

## 2. Clearing All Paired Motion Sensors

To clear all previously paired motion sensors from the receiver's memory:

1. Ensure the motion sensor switch is turned **OFF**.
2. Plug the receiver into a power outlet.
3. Press and hold the **Forward** button on the receiver for 5 seconds until you hear a "ding" sound. This action will clear all existing pairings.

Your browser does not support the video tag.

*Video: This video provides instructions on how to clear all previously paired motion sensors from the CallToU CC01 Motion Detector Receiver.*

## KEY FEATURES

---

### Elderly and Patient Monitoring

The motion sensor can be strategically placed on the floor under a bed to detect when an elderly individual's foot is about to touch the ground, triggering an alarm. Alternatively, it can be positioned at a doorway to monitor if an elderly person is leaving their room, providing timely alerts to caregivers. This feature is crucial for preventing falls and managing wandering, offering peace of mind for families.

# ABSOLUTE PEACE OF MIND



Easy to monitor elderly getting out of bed

*Image: A motion sensor positioned under a bed to detect an elderly person's movement, with the receiver plugged into a nearby wall outlet, illustrating its use for monitoring.*

Your browser does not support the video tag.

*Video: This video highlights the use of the CallToU Wireless Bed Sensor Alarm for monitoring elderly adults, particularly*

*those with dementia, to prevent falls and wandering.*

## Wide Motion Detection Range

The motion alarm can detect moving individuals from up to 33 feet (10 meters) away. It features an improved motion detection chip and adjustable detection angle to minimize false alarms caused by environmental factors like sunlight, wind, or temperature changes. The sensor's swivel mount allows for 360° rotation, enabling versatile positioning to meet various home care needs.

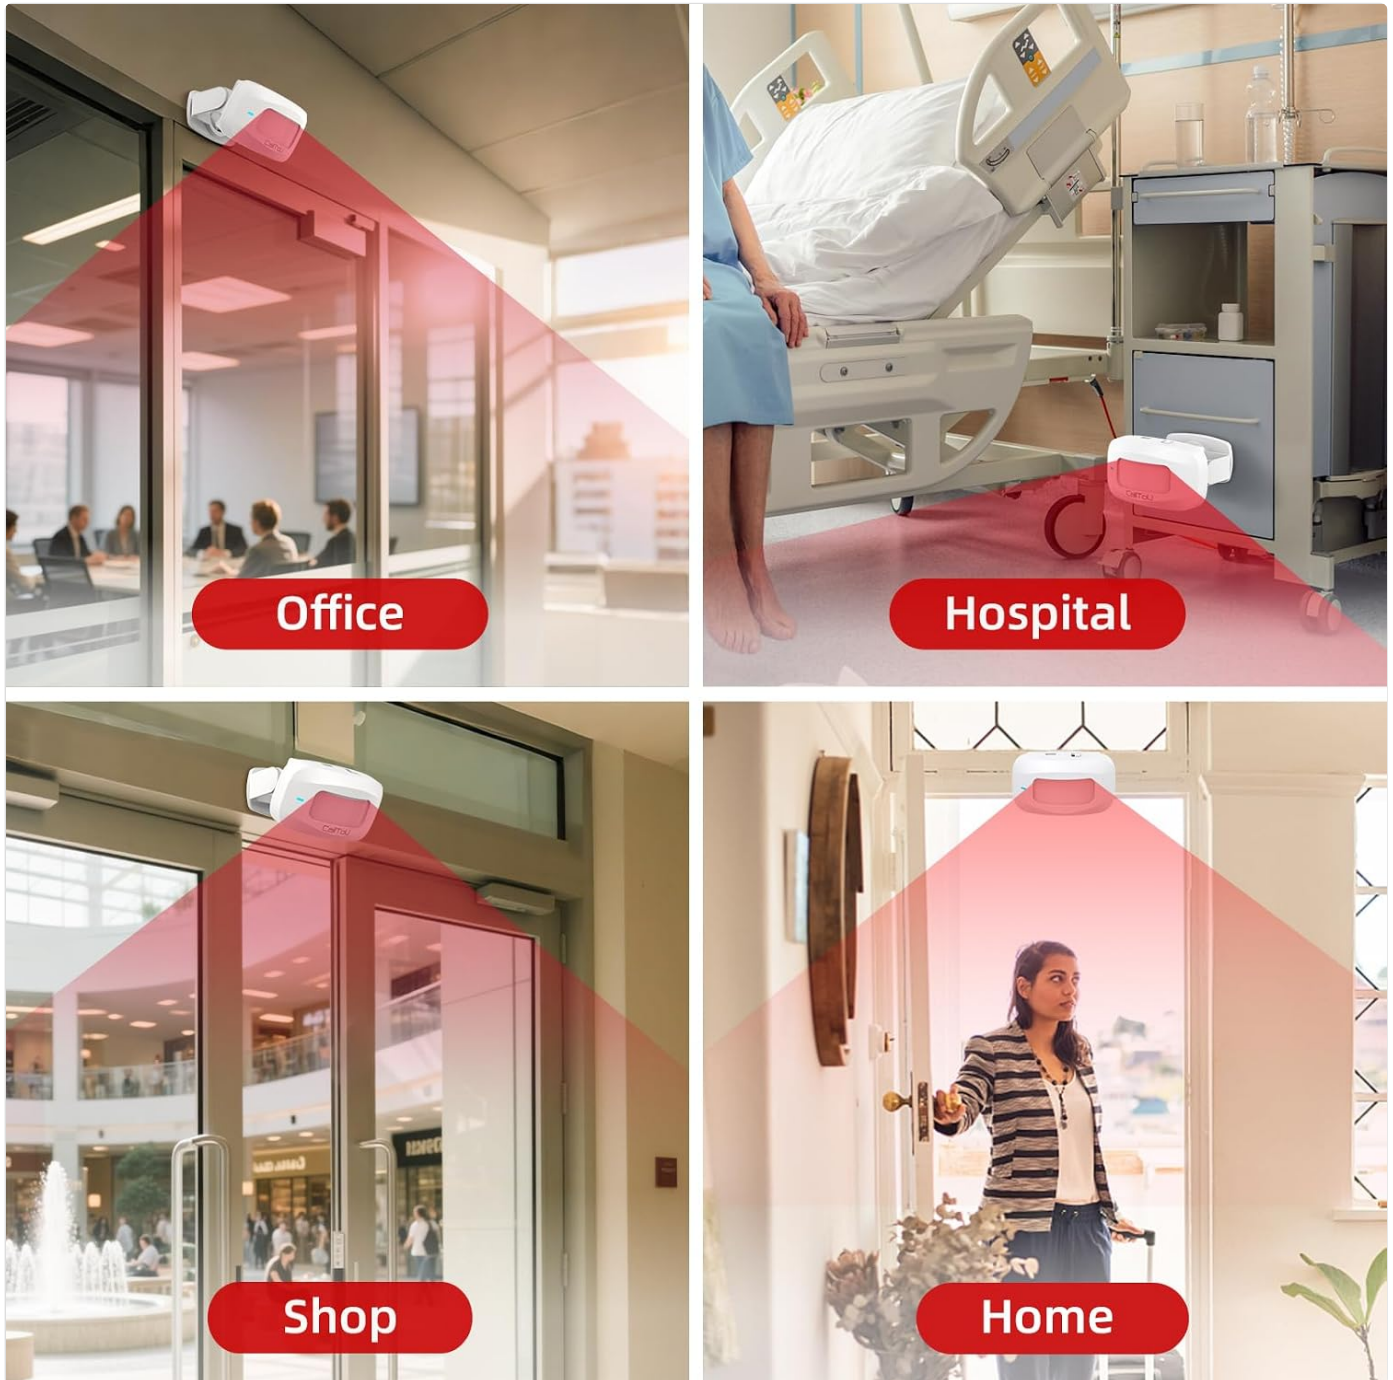


*Image: A collage of four images demonstrating the versatility of the motion sensor in different settings: an office, a hospital room, a retail shop, and a home, indicating its broad applicability.*

## Long Wireless Range

Both the motion detector and the plug-in receiver can communicate over distances up to 500 feet (in an open area). This extensive wireless range ensures that you receive alerts even in larger residences, providing reliable monitoring without missing any alarms. The system utilizes advanced wireless transmission technology to prevent interference from other

devices.

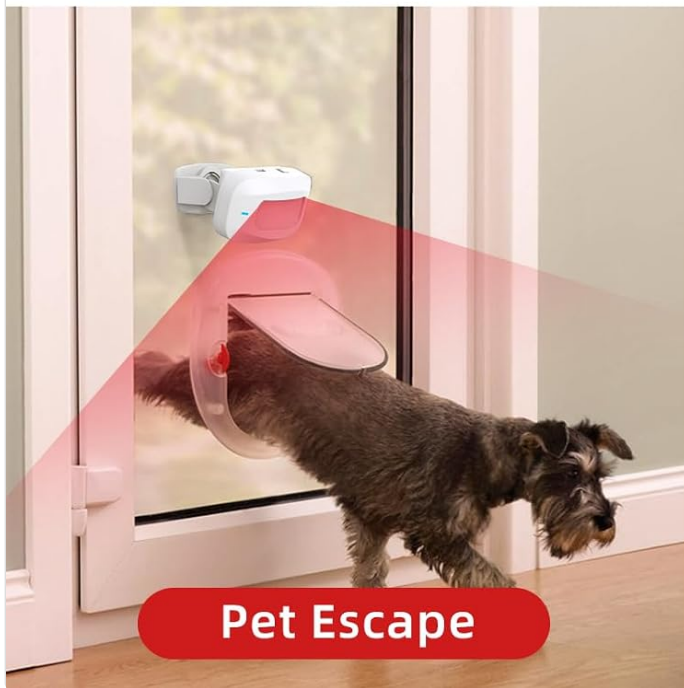
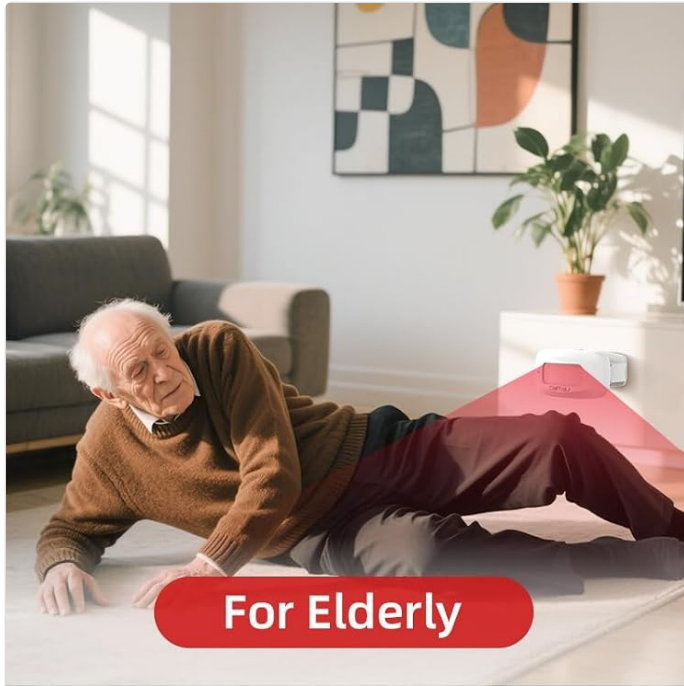


*Image: A diagram illustrating the extensive 500+ FT / 150M transmission range of the CallToU system, showing how multiple motion sensors can communicate with a central receiver across different floors of a building.*

## Fully Expandable System

The system is highly expandable, allowing you to connect up to 30 motion sensors to a single receiver. Additionally, one motion sensor can be paired with an unlimited number of receivers, enabling comprehensive coverage throughout your home or facility.

## Adjustable Volume and Melodies

The receiver offers 5 adjustable volume levels, allowing you to set the alert volume from silent (0dB) to very loud (120dB) to suit your environment and needs. With 38 selectable melodies, you can choose different chimes for different sensors, helping you identify the location of detected motion.

## Versatile Applications

Beyond elderly care, this system is suitable for various applications including child safety (detecting movement near stairs or exits), pet monitoring (alerting to pet escapes), and general family safety (detecting intruders). It can also serve as a motion sensor door chime for businesses, alerting shopkeepers to customers entering the store.

# PROTECTING FAMILY SAFETY



*Image: A visual representation of the system's diverse applications, including monitoring for elderly falls, ensuring child safety, preventing pet escapes, and enhancing overall family security.*

## TROUBLESHOOTING

- **No Alarm Sound:** Ensure the receiver is properly plugged into a working outlet and the volume is not set to 0. Verify that the motion sensor has fresh batteries and is turned on. Re-pair the sensor and receiver if necessary.
- **False Alarms:** Adjust the motion sensor's position and angle to avoid detecting pets, direct sunlight, or moving objects like curtains. Ensure the sensor is not placed near heat sources or air vents.
- **Limited Range:** Check for obstructions like thick walls or large metal objects between the sensor and receiver. Relocate the receiver to a more central location or closer to the sensor.

- **Sensor Not Detecting:** Confirm the sensor is placed within its effective detection range (33 feet/10 meters). Ensure the detection angle is correctly oriented towards the area to be monitored.

## SPECIFICATIONS

| Feature                      | Detail                                                               |
|------------------------------|----------------------------------------------------------------------|
| Brand                        | CallToU                                                              |
| Model Number                 | CC01CX+HW12 1-1                                                      |
| Power Source (Receiver)      | Plug-in (AC)                                                         |
| Power Source (Motion Sensor) | Battery Powered (3 AAA Alkaline, included)                           |
| Maximum Wireless Range       | 500 Feet (in open area)                                              |
| Motion Detection Range       | 33 Feet (10 meters)                                                  |
| Motion Detection Angle       | 100° horizontal, 15° vertical                                        |
| Adjustable Volume Levels     | 5 levels (0dB to 120dB)                                              |
| Selectable Melodies          | 38                                                                   |
| Expandability                | Up to 30 motion sensors per receiver; unlimited receivers per sensor |
| Mounting Type                | Wall Mount (screws or adhesive stickers)                             |
| Product Dimensions           | 6.49"D x 3.66"W x 2.67"H                                             |
| Item Weight                  | 8.8 ounces                                                           |

## WARRANTY AND SUPPORT

CallToU stands behind the quality of its products. This Wireless Motion Sensor Alarm System comes with a **LIFETIME WARRANTY**.

For any questions, technical assistance, or warranty claims, please contact CallToU customer support through the official website or the contact information provided in your product packaging.

© 2025 CallToU. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question