

[manuals.plus](#) /› [Blackview](#) /› [Blackview W60 Military Smart Watch User Manual](#)

Blackview W60

Blackview W60 Military Smart Watch User Manual

Model: W60 Black

1. INTRODUCTION

Thank you for choosing the Blackview W60 Military Smart Watch. This rugged and versatile smartwatch is designed for outdoor enthusiasts and daily users alike, offering advanced features such as call answering/making, comprehensive health monitoring, multiple sports modes, and an ultra-long battery life. This manual will guide you through the setup, operation, and maintenance of your new device.



Figure 1: Blackview W60 Military Smart Watch

2. WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- Blackview W60 Smart Watch x 1
- Silicone Strap x 1
- Nylon Strap x 1
- Magnetic Charging Cable x 1
- Product Manual x 1

Smartwatch Size



Packaging



Figure 2: Package Contents and Smartwatch Dimensions

3. GETTING STARTED (SETUP)

3.1 Charging the Smart Watch

Before first use, fully charge your Blackview W60. The watch features a 900mAh battery, providing up to 100 days of standby time and 30 days of typical usage. Use the provided magnetic charging cable.

1. Connect the USB end of the charging cable to a power adapter (5V/1A recommended) or a computer USB port.
2. Align the magnetic end of the cable with the charging contacts on the back of the watch. It will snap into place.
3. The watch screen will indicate charging status. A full charge typically takes approximately 2.5 hours.

900mAh Huge Battery Capacity & Magnetic Charging

900MAH



Why choose Blackview?



Our

- ✓ 100 Days+ -----
- ✓ 30 Days+ -----
- ✓ 2 Hours -----

- Standby Time
- Battery Life
- Charging Time

Others

- 25 Days+ ✗
- 7 Days+ ✗
- 3 Hours ✗



Figure 3: Magnetic Charging and Battery Life Overview

3.2 App Installation and Pairing

To unlock the full potential of your smartwatch, download and install the **GloryFitPro** app on your smartphone.

1. Scan the QR code in the product manual or search for 'GloryFitPro' in your smartphone's app store (compatible with Android 6.0+ and iOS 9.0+).
2. Open the GloryFitPro app and follow the on-screen instructions to create an account and set up your personal profile.
3. In the app, navigate to 'Device' or 'Add Device' and select your Blackview W60 from the list of available devices. Ensure Bluetooth is enabled on your phone.
4. Confirm the pairing request on both your phone and the watch.

3.3 Attaching/Changing Watch Straps

Your Blackview W60 comes with two comfortable and skin-friendly wristbands: a silicone strap and a nylon strap. You can easily interchange them to suit your preference or activity.

- To attach a strap: Slide the spring bar of the strap into the lug holes on the watch body until it clicks into place.
- To detach a strap: Locate the small lever on the spring bar, pull it inwards, and gently slide the strap out of the lug.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The Blackview W60 features a 2.01-inch HD full touch screen and physical buttons for navigation.

- **Touch Screen:** Swipe left/right to switch between main functions, swipe up/down to access quick settings or notifications. Tap to select.
- **Side Buttons:** Use the 'MENU' button to access the main menu and the 'BACK' button to return to the previous screen or watch face.

4.2 Call Answering/Making

With its built-in HiFi stereo speakers and microphone, you can manage calls directly from your watch when connected via Bluetooth.

- **Answering Calls:** When an incoming call rings, tap the green phone icon on the watch screen to answer.
- **Making Calls:** Access the dial pad or contact list on your watch to initiate a call. The GloryFitPro app allows you to store multiple contacts for quick access.

Breathe Rhythmically to Relax Body

Breathing Exercises

Make you to take scientific deep breaths, helping you better control your breathing rhythm and relax your body.

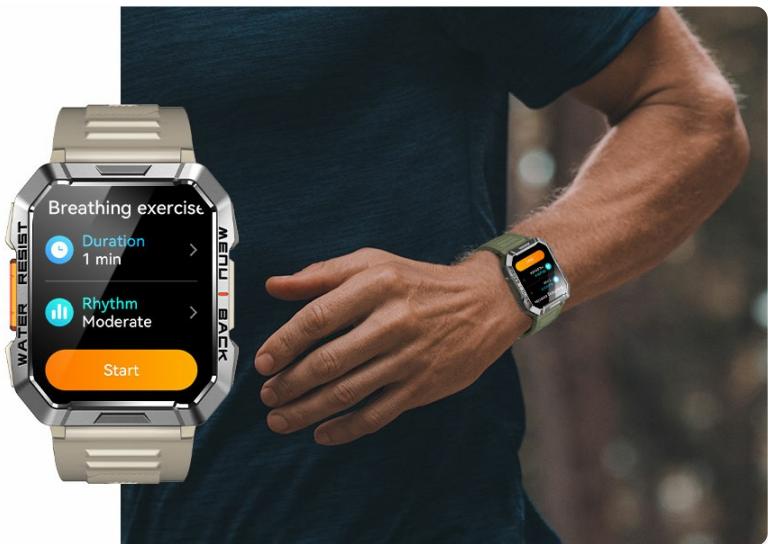


Figure 4: Call Management on Your Smartwatch

4.3 Notifications

Receive real-time notifications for calls, messages (WhatsApp, Facebook, Instagram, etc.), and app alerts directly on your wrist.

- Ensure notification permissions are enabled for the GloryFitPro app in your phone's settings.
- Swipe down from the watch face to view your recent notifications.

Real-time Monitoring of Health Status

24H Heart Rate Monitoring

Use advanced sensors to monitor your heart rate in real time and understand your physical condition in a timely manner.



Figure 5: Receiving Notifications on the Go

4.4 AI Voice Assistant

Interact with your smartwatch using voice commands for quick access to information and functions.

- Activate the AI voice assistant through the watch menu or a designated shortcut.
- Ask questions, check weather forecasts, set alarms, or control music using your voice.



Scientifically Monitor Sleep Quality

Make your sleep more comfortable

Achieve deeper sleep quality through scientific and rigorous sleep monitoring technology.

4.5 LED Flashlight & Compass

The W60 is equipped with practical tools for outdoor adventures.

- **LED Flashlight:** Activate the built-in LED flashlight from the quick settings or menu. It offers a lighting range of up to 6-10m.
- **Compass:** Use the integrated compass feature for navigation, especially useful in outdoor environments.



SOS Emergency Calls

Set the emergency call number in the GloryFit Pro app and quickly contact through the watch in case of emergency.

Figure 7: Built-in LED Flashlight



Compass

When you are lost outdoors, the compass on the watch will guide you in the right direction.



Figure 8: Integrated Compass Feature

4.6 Custom Watch Faces

Personalize your watch with a variety of online dials or create your own custom watch face.

- Through the GloryFitPro app, browse and download various watch faces.
- Upload your favorite photos (family, pets, etc.) to create unique DIY watch faces.

2.01" High-definition Large Screen



280*320
Resolution



IPS Colorful
Touch Screen



High Hardness
Glass Full Screen



100+ Custom
Watch Face



Figure 9: Customizable Watch Faces

5. HEALTH MONITORING

The Blackview W60 provides comprehensive health monitoring features to help you stay informed about your well-being.

5.1 Heart Rate Monitoring

The watch uses high-performance optical sensors for 24/7 real-time heart rate monitoring.

- View your current heart rate on the watch face or through the dedicated heart rate interface.
- Historical data and detailed analysis are available in the GloryFitPro app.

PRODUCT SIZE

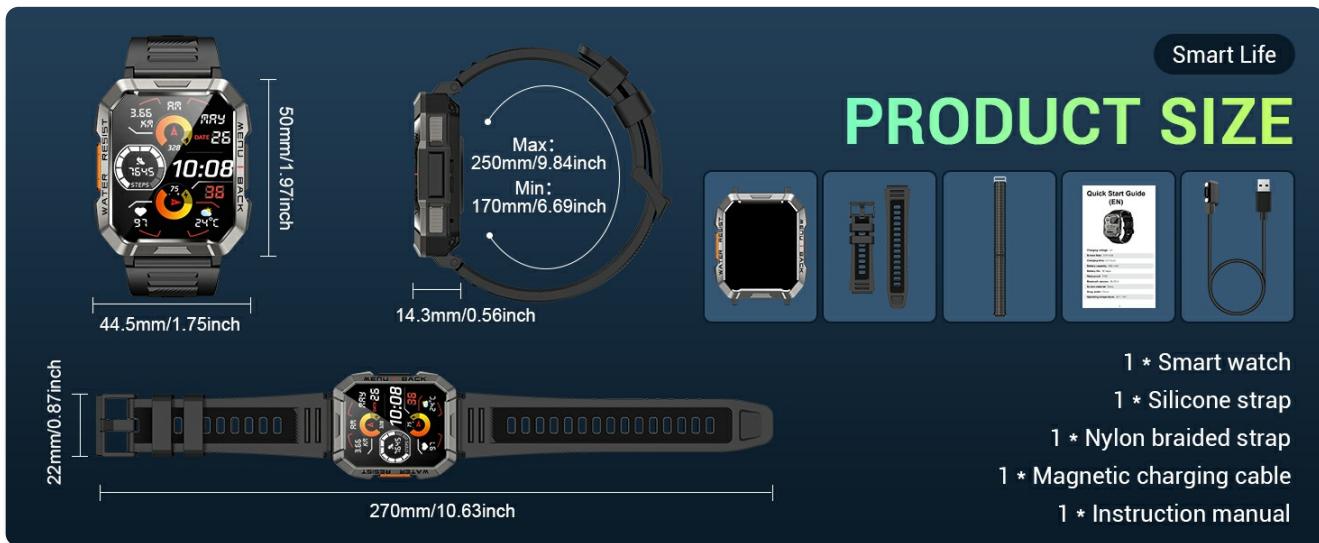


Figure 10: 24H Heart Rate Monitoring

5.2 Blood Oxygen (SpO2) Monitoring

Track your blood oxygen saturation levels to gain insights into your respiratory health.

- Initiate an SpO2 measurement from the watch menu.
- Ensure the watch is worn snugly on your wrist for accurate readings.

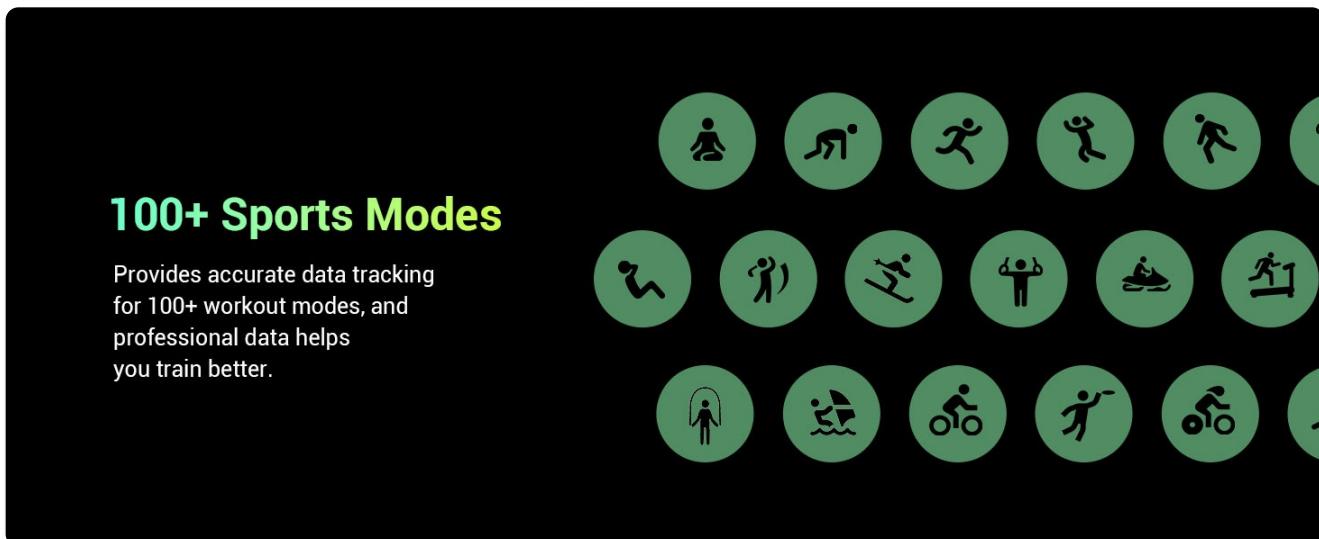


Figure 11: SpO2 Saturation Monitoring

5.3 Sleep Monitoring

The watch automatically tracks your sleep patterns, providing detailed analysis of light, deep, and awake sleep stages.

- Wear the watch to bed for automatic sleep tracking.
- Review your sleep quality report in the GloryFitPro app to help adjust your lifestyle for better rest.

24H Health Monitoring



Figure 12: Scientifically Monitor Sleep Quality

5.4 Stress Monitoring & Breathing Exercises

The watch can detect stress levels and guide you through breathing exercises to help you relax.

- Access the stress monitoring feature from the watch menu.
- Follow the on-screen prompts for guided breathing exercises to help calm your mind and body.



Figure 13: Breathing Exercises to Relax Body

6. SPORTS MODES

The Blackview W60 supports over 100 sports modes, tracking key data such as steps, distance, calories, and time. It can connect to your phone's GPS to record your training routes.

- Select your desired sports mode from the watch menu before starting an activity.
- View real-time exercise data on your watch and detailed summaries in the GloryFitPro app.

100+ Sports Modes



Calories



Distance



Time



Steps



Heart Rate



Figure 14: 100+ Sports Modes

7. MAINTENANCE

To ensure the longevity and optimal performance of your Blackview W60, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the watch screen and straps with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- **Water Resistance:** The watch is IP68 waterproof, suitable for daily use like hand washing or rain. **NOTE:** It is not suitable for sauna, hot water, swimming, or diving. Avoid prolonged exposure to water.
- **Storage:** Store the watch in a cool, dry place when not in use. Avoid extreme temperatures.
- **Charging:** Use only the provided magnetic charging cable. Do not use damaged cables or chargers.



Figure 15: Durability Features (Anti-fall, Dustproof, Waterproof)

8. TROUBLESHOOTING

If you encounter issues with your Blackview W60, please refer to the following common solutions:

| Problem | Possible Cause | Solution |
|----------------------------|--|--|
| Watch not turning on | Low battery; device frozen | Charge the watch for at least 30 minutes. If still unresponsive, press and hold the power button for 10-15 seconds to force restart. |
| Cannot pair with phone | Bluetooth off; app issue; watch not discoverable | Ensure Bluetooth is on for both devices. Restart both the watch and phone. Reinstall the GloryFitPro app. Ensure the watch is in pairing mode. |
| Inaccurate health data | Improper fit; sensor obstruction | Ensure the watch is worn snugly on your wrist, one finger's width above the wrist bone. Keep the sensor clean and free from debris. |
| Notifications not received | App permissions; app not running in background | Check notification permissions for GloryFitPro in your phone settings. Ensure the app is running in the background and not optimized for battery saving. |

9. SPECIFICATIONS

Detailed technical specifications for the Blackview W60 Smart Watch:

| Feature | Detail |
|--------------|---------------------------|
| Model Number | W60 |
| Dimensions | 7.17 x 3.39 x 0.71 inches |


| Feature | Detail |
|--------------------------------|--|
| Item Weight | 4.6 ounces |
| Screen Size | 2.01 Inches |
| Display Type | TFT Color HD Full Touch Screen |
| Battery Capacity | 900 mAh Lithium Metal |
| Battery Life (Typical Use) | Up to 30 days |
| Standby Time | Up to 100 days |
| Charging Time | Approx. 2.5 hours |
| Water Resistance | IP68 |
| Connectivity | Bluetooth |
| Operating System Compatibility | Android 6.0+ / iOS 9.0+ |
| Sports Modes | 100+ (supports GPS via smartphone) |
| Health Monitoring | Heart Rate, SpO2, Sleep, Stress |
| Special Features | LED Flashlight, Compass, Call Answering/Making, AI Voice Assistant, Notifications, Custom Watch Faces, Music Control, Camera Control, Weather Forecast, Sedentary Reminder, Alarm Clock, Stopwatch, Timer, Calculator, Menstrual Cycle Tracker |

10. WARRANTY AND SUPPORT

Blackview is committed to providing high-quality products and excellent customer service.

- **Warranty Information:** Please refer to the warranty card included in your product packaging or visit the official Blackview website for detailed warranty terms and conditions.
- **Customer Support:** If you have any questions, concerns, or require technical assistance, please contact Blackview customer support through the contact information provided on our official website or within the GloryFitPro app.

Related Documents - W60

| | |
|---|--|
|  | <p><u>W60 Smartwatch Quick Start Guide and User Manual</u></p> <p>A comprehensive guide to setting up, using, and customizing your W60 smartwatch, covering device features, settings, app integration, and important safety information.</p> |
|  | <p><u>Blackview R5 Smartwatch User Manual and Features</u></p> <p>Comprehensive guide to the Blackview R5 smartwatch, covering connection, features like heart rate and blood oxygen monitoring, sports modes, notifications, and troubleshooting.</p> |
|  | <p><u>GloryFit Smartwatch Connection Guide: Android & iOS Setup</u></p> <p>A comprehensive guide to connecting your Blackview smartwatch using the GloryFit app. This guide covers setup procedures for both Android and iOS devices, including app installation, device pairing, permission settings, and troubleshooting common connection issues.</p> |
|  | <p><u>R30Pro Smart Watch Quick Start Guide - Setup and Usage</u></p> <p>A comprehensive quick start guide for the R30Pro Smart Watch, covering charging, app installation, device pairing, watch controls, settings, and important safety information. Learn how to use your R30Pro for fitness tracking and smart features.</p> |
|  | <p><u>W60 Smartwatch Quick Start Guide and User Manual</u></p> <p>A comprehensive guide to setting up, using, and customizing your W60 smartwatch, covering device features, settings, app integration, and important safety information.</p> |
|  | <p><u>Upute i Jamstvo za Pametni Sat Cubot GT1 Sva Značajka i Podrška</u></p> <p>Detaljne upute za korištenje, povezivanje i održavanje pametnog sata Cubot GT1. Saznajte o značajkama, jamstvu i često postavljanim pitanjima.</p> |

AGC®

УДОСТОВЕРЕНИЕ ЗА СЪОТВЕТСТВИЕ

Регистрационен номер:
Заявлен
Сгл. 2021, Сграда A, Weidonglong Business Building, № 2125,
Meitong Avenue, Pekion Longhua, Shenzhen, Китай

Продукт
Търговски марки
Модели
Производител

Сгл. 2021, Сграда A, Weidonglong Business Building, № 2125,
Meitong Avenue, Pekion Longhua, Shenzhen, Китай

| Категория | Стандарти | Доказателства | Резултат |
|-------------|-----------|---------------|-----------|
| Заряд | | Тестов отчет | Съвместим |
| Безопасност | | Тестов отчет | Съвместим |
| | | Тестов отчет | Съвместим |
| Радио | | Тестов отчет | Съвместим |

CE

Подписано от: Генерален директор (Kong Zheng)
Дата на подаване: 26 септември 2023 г.



The attestation doesn't imply assessment of the product




[Declaration of Conformity - Shenzhen Hairuichuang Technology Co., Ltd.](#)

[Smartwatches](#)

This document is a Declaration of Conformity for smartwatches manufactured by Shenzhen Hairuichuang Technology Co., Ltd. It lists product models, trademarks, and compliance with relevant EU standards including RED Directive 2014/53/EU.


lang:en score:23 filesize: 868.37 K page_count: 1 document date: 2025-02-10

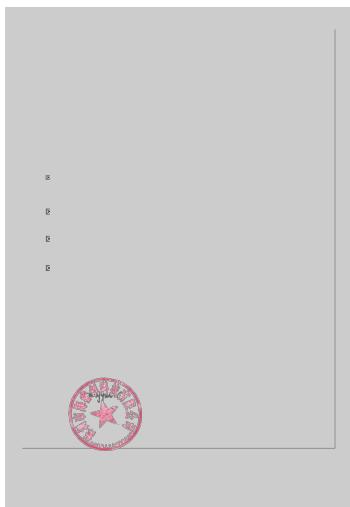

[EU Declaration of Conformity - Blackview IOWODO FeiPuQu Baolubao](#)

Official EU Declaration of Conformity for Blackview IOWODO FeiPuQu Baolubao mobile devices, confirming compliance with RED Directive 2014/53/EU and 2011/65/EU, and listing applicable safety, health, EMC, and radio standards.

lang:en score:22 filesize: 59.91 K page_count: 2 document date: 2025-01-17

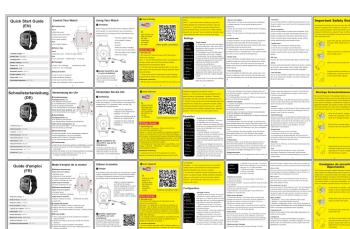

[\[pdf\] User Manual Quick Start Guide Guide](#)


User manual BLACKVIEW ATS3085L Blackview Outdoor Waterproof Smartwatch with Emergency Light 900mAh Battery 2.01 HD Screen Bluetooth Watches for Men

WomenS92880b49ebfd4f2c9facc4af9934b4e3Qae01 alicdn kf S92880b49ebfd4f2c9facc4af9934b4e3Q

III

Quick Start Guide EN Charging voltage: 5V Screen Size: 2.01 inch Charging time: 2.5 hours Battery ... e whether to enable the watch password. If you Important Safety Guide Charging Before using your **W60** for the first time, charge the battery to its full capacity. It is recommended to use a convert...

lang:en score:20 filesize: 1.1 M page_count: 2 document date: 2024-10-07

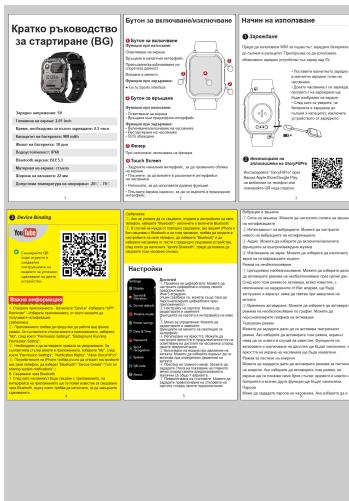

[pdf] Quick Start Guide

W60 A4 BG Кратко ръководство за стартиране BGW60 QSG BGfiles asbis BLACKVIEW Smartwatches

|||

BG / 1 : . 1 / . . 3 4 : 2 Go to Sports interface : 5V : 2 . . . SOS 3 : . 4 Touch Screen , , . . , , . 2 W60 , . 5V. . . , , , 2 GloryFitPro Glory...

lang:en score:19 filesize: 6.86 M page_count: 2 document date: 2024-06-19



[Shenzhen Hairuichuang Smart Watch ROHS Compliance Certificate](#)

Certificate of Conformity for Shenzhen Hairuichuang smart watches, confirming compliance with EC ROHS Directive 2011/65/EU and (EU) 2015/863, tested against relevant IEC standards.

lang:tl score:19 filesize: 850.4 K page_count: 1 document date: 2025-02-10



[Декларация за съответствие на EC - Blackview IOWODO FeiPuQu Baolubao](#)

Декларация за съответствие за продуктите Blackview IOWODO FeiPuQu Baolubao, потвърждаваща съответствието с Директива на ЕС RED 2014/53/EC и съответните стандарти за безопасност, здраве и радио.

lang:tl score:19 filesize: 256.03 K page_count: 1 document date: 2025-05-19



[EC Declaration of Conformity - Blackview IOWODO FeiPuQu Baolubao](#)

Official EC Declaration of Conformity for Blackview IOWODO FeiPuQu Baolubao devices, confirming compliance with RED 2014/53/EU, 2011/65/EU, and harmonized standards for safety, health, EMC, and radio.

lang:tl score:18 filesize: 154.31 K page_count: 1 document date: 2025-01-17



[Blackview 2024 Product Catalog: Smartphones, Rugged Phones, Tablets & More](#)

Explore the comprehensive 2024 product lineup from Blackview, featuring a wide range of smartphones, rugged outdoor phones, versatile tablets, powerful mini PCs, efficient laptops, and stylish smart wearables. Discover detailed specifications and features for each device.

lang:en score:15 filesize: 11.78 M page_count: 74 document date: 2024-05-21



[\[pdf\] Test Report SAR Rating](#)


Measurement Report Kent SunskyBlackview Test Model COLOR 6 Series N A Blackview Name W60 802

11n HT40 38 Top Side WIFI HT0 95 83MPH2925 CE SARupload sunsky online res certificate MPH2925

SAR |||

CE SAR TEST REPORT Report No. : Product Name : Brand Name : Test Model : Series Model : D ... 625 1.264 1.456 W58 802.11n HT40 46 Top Side 0 WIFI HT0 95.83 13.0 12.57 -0.01 5.630 1.550 1.786 **W60** 802.11n HT40 38 Top Side 0 WIFI HT0 95.83 13.0 11.84 -0.02 5.440 1.340 1.826 W62 802.11ac VHT8...

lang:en score:12 filesize: 7.57 M page_count: 130 document date: 2025-05-27

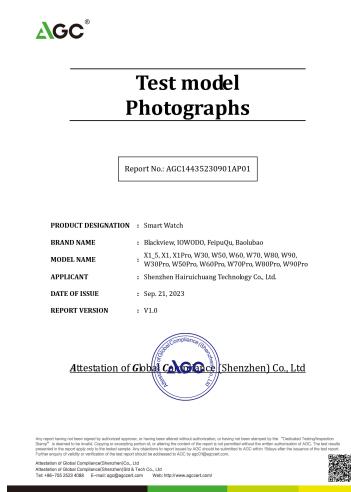


[\[pdf\]](#)

Test model Photographs PRODUCT DESIGNATION Smart Watch BRAND NAME Blackview IOWODO FeipuQu Baolubao MODEL X1 5 X1Pro W30 W50 W60 W70 W80 W90 W30Pro EUT Photo files asbis BLACKVIEW BG Smartwatches |||

...

lang:en score:11 filesize: 3.38 M page_count: 10 document date: 2023-09-26

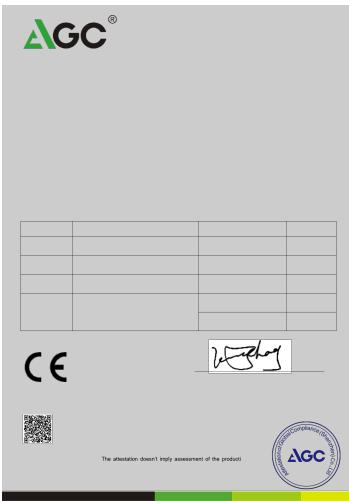


[\[pdf\] Declaration of Conformity](#)

USER Attestation of Conformity Smart Watch Brand Name Blackview IOWODO FeipuQu Baolubao Model Series Models X1 5 X1Pro W30 W50 W60 W70 W80 W90 W30Pro W50Pro W60Pro CE files asbis BLACKVIEW BG Smartwatches |||

...


lang:en score:11 filesize: 832.46 K page_count: 1 document date: 2023-09-26

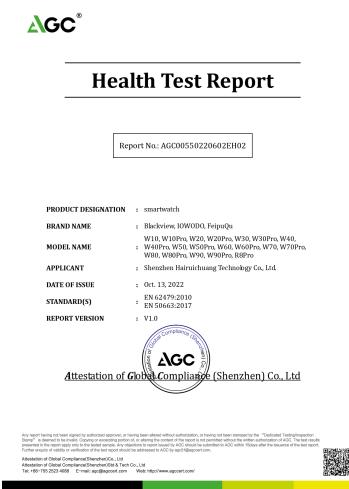

[Health Test Report for Blackview Smartwatch Models \(W10, RH281-V03\) - AGC Compliance](#)

This health test report from AGC details compliance testing for Blackview, IOWODO, and FeipuQu smartwatches, including models W10, W10Pro, W20, W20Pro, W30, W30Pro, W40, W40Pro, W50, W50Pro, W60, W60Pro, W70, W70Pro, W80, W80Pro, W90, W90Pro, R8Pro, and the specific test model RH281-V03. It covers technical specifications and test results against EN 62479:2010 and EN 50663:2017 standards.

lang:en score:11 filesize: 1.99 M page_count: 7 document date: 2022-11-01

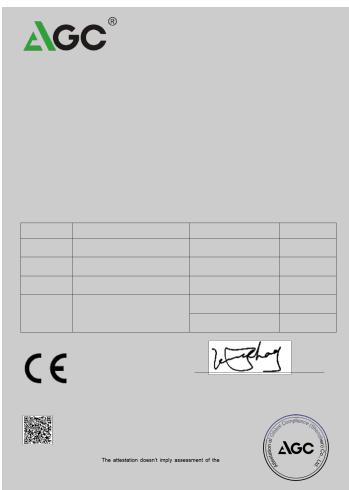

[Attestation of Conformity for Blackview, IOWODO, FeipuQu Smartwatches](#)

Official Attestation of Conformity for Shenzhen Hairuichuang Technology Co., Ltd.'s smartwatches, including Blackview, IOWODO, and FeipuQu brands. Details compliance with RED Directive 2014/53/EU for models W10 series through R8Pro, referencing specific EN and ETSI standards.

lang:en score:11 filesize: 1.28 M page_count: 1 document date: 2022-11-01

Test model Photographs

Report No.: AGC0550228602A01

PRODUCT DESIGNATION : smartwatch
 BRAND NAME : Blackview, IOWODO, FeipuQu
 MODEL NAME : W10, W10Pro, W20, W20Pro, W30, W30Pro, W40, W40Pro, W50, W50Pro, W60, W60Pro, W70, W70Pro, W80, W80Pro
 APPLICANT : Shenzhen Hairuichang Technology Co., Ltd.
 DATE OF ISSUE : Oct. 13, 2022
 REPORT VERSION : V1.0

Attestation of Global Compliance (Shenzhen) Co., Ltd.



Any report, testing and results reported by an authorized approver, or having been altered without authorization, or having not been stamped by the "Global Compliance (Shenzhen) Co., Ltd." is deemed to be invalid. Copying or reproducing part of, or altering the content of the report, is not permitted without the written authorization of AGC. The test results are the property of AGC and shall not be reproduced or distributed without the written permission of AGC. All rights reserved by AGC. All rights reserved by AGC. All rights reserved by AGC.

Attestation of Global Compliance (Shenzhen) Co., Ltd.
 Tel: +86-755-2321-6368 E-mail: agc@agc-test.com http://www.agc-test.com



RF Test Report

Report No.: AGC14435230901ER02

PRODUCT DESIGNATION : Smart Watch
 BRAND NAME : Blackview, IOWODO, FeipuQu, Baolubao
 MODEL NAME : X1, X1, X1Pro, W30, W50, W60, W70, W80, W90, W100, W10Pro, W50Pro, W60Pro, W70Pro, W80Pro, W90Pro
 APPLICANT : Shenzhen Hairuichang Technology Co., Ltd.
 DATE OF ISSUE : Sep. 21, 2023
 STANDARD(S) : ETSI EN 300 328 V2.2.2 (2019-07)
 REPORT VERSION : V1.0

Attestation of Global Compliance (Shenzhen) Co., Ltd.



Any report, testing and results reported by an authorized approver, or having been altered without authorization, or having not been stamped by the "Global Compliance (Shenzhen) Co., Ltd." is deemed to be invalid. Copying or reproducing part of, or altering the content of the report, is not permitted without the written authorization of AGC. The test results are the property of AGC and shall not be reproduced or distributed without the written permission of AGC. All rights reserved by AGC. All rights reserved by AGC. All rights reserved by AGC.

Attestation of Global Compliance (Shenzhen) Co., Ltd.
 Tel: +86-755-2321-6368 E-mail: agc@agc-test.com http://www.agc-test.com



RF Test Report

Report No.: AGC14435230901ER02

PRODUCT DESIGNATION : Smart Watch
 BRAND NAME : Blackview, IOWODO, FeipuQu, Baolubao
 MODEL NAME : X1, X1, X1Pro, W30, W50, W60, W70, W80, W90, W100, W10Pro, W50Pro, W60Pro, W70Pro, W80Pro, W90Pro
 APPLICANT : Shenzhen Hairuichang Technology Co., Ltd.
 DATE OF ISSUE : Sep. 21, 2023
 STANDARD(S) : ETSI EN 300 328 V2.2.2 (2019-07)
 REPORT VERSION : V1.0

Attestation of Global Compliance (Shenzhen) Co., Ltd.



Any report, testing and results reported by an authorized approver, or having been altered without authorization, or having not been stamped by the "Global Compliance (Shenzhen) Co., Ltd." is deemed to be invalid. Copying or reproducing part of, or altering the content of the report, is not permitted without the written authorization of AGC. The test results are the property of AGC and shall not be reproduced or distributed without the written permission of AGC. All rights reserved by AGC. All rights reserved by AGC. All rights reserved by AGC.

Attestation of Global Compliance (Shenzhen) Co., Ltd.
 Tel: +86-755-2321-6368 E-mail: agc@agc-test.com http://www.agc-test.com



AGC Test Model Photographs: Blackview, IOWODO, FeipuQu Smartwatch Models

This document contains test model photographs and setup details for various smartwatch models including Blackview W10 series, IOWODO W10 series, and FeipuQu W10 series, as reported by AGC. It details EMC, Radiated Emission, ESD, Immunity, and RF test setups, along with comprehensive views of the Equipment Under Test (EUT) and its internal components.

lang:en score:11 filesize: 4.24 M page_count: 16 document date: 2022-11-01

[pdf] Test Report

RF Test Report PRODUCT DESIGNATION Smart Watch BRAND NAME Blackview IOWODO FeipuQu Baolubao MODEL X1 5 X1Pro W30 W50 W60 W70 W80 W90 W30ProX1 Radio Report for BR EDR files asbis BLACKVIEW BG Smartwatches CE EDR |||

...

lang:en score:11 filesize: 3.16 M page_count: 52 document date: 2023-09-26

[pdf] Test Report

RF Test Report Sep 21 2023 · Blackview IOWODO FeipuQu Baolubao MODEL NAME X1 5 X1Pro W30 W50 W60 W70 W80 W90 W30Pro W50Pro W60Pro W70Pro W80Pro W90Pro Radio for BR EDR files asbis BLACKVIEW BG Smartwatches |||

...

lang:en score:11 filesize: 3.16 M page_count: 52 document date: 2023-09-26

EMC Test Report

Report No: AGC14435230901ER01

| | |
|---------------------|---|
| PRODUCT DESIGNATION | : Smart Watch |
| BRAND NAME | : Blackview, 10W090, FeipuQu, BaoJiaBo |
| MODEL NAME | : X1, X1, X1Pro, W30, W50, W60, W70, W80, W90, W30Pro, W50Pro, W60Pro, W70Pro, W80Pro, W90Pro |
| APPLICANT | : Shenzhen Haining Technology Co., Ltd |
| DATE OF ISSUE | : Sep 21, 2023 |
| STANDARD(S) | : ETTS EN 301-409-1 V2.2.3 (2019-11) ETTS EN 301-409-17 V2.2.4 (2020-09) |
| REPORT VERSION | : V1.0 |

Attestation of Global Compliance (Shenzhen) Co., Ltd

Any report having been issued by another authority, or having been altered after submission, or having not been stamped by the "Certified by Testing Department" stamp, is to be treated as invalid. Crossing or erasing portion of, or altering any portion of the report is not permitted without the written authorization of AGC. The test results in this report apply only to the test specimen. Any requests to report issued by AGC should be submitted to AGC within 10 days after the issuance of the test report. Further, any report issued by AGC is to be considered valid only if it is accompanied by AGC's signature at agc@agc.com.

AGG®

Test model Photographs

Report No.: AGC14435230901AP01

| | |
|---------------------|--|
| PRODUCT DESIGNATION | : Smart Watch |
| BRAND NAME | : Blackview, KIWODD, FeipuQiu, Baolubao |
| MODEL NAME | : X1, X5, X10Pro, W30, W50, W60, W70, W80, W90, W30Pro, W50Pro, W60Pro, W70Pro, W80Pro, W90Pro |
| APPLICANT | : Shenzhen Hairuihuang Technology Co., Ltd |
| DATE OF ISSUE | : Sep. 21, 2023 |
| REPORT UESRPN | : V3.0 |

Attestation of Global Compliance (Shenzhen) Co., Ltd.

Any request for testing or inspection by a government, or other entity, shall be referred directly to the "Customer Relations Department". It is reserved for the individual, company or organization, or, when referring the content of the report, to the person who provided the information to AGC. The test results presented in the report apply only to the tested sample. Any objections to a report issued by AGC should be submitted to AGC within 15 days after the issuance of the test report. Any objection to a report issued by AGC should be addressed to AGC by agc@agcgroup.com.

Attestation of Global Compliance Services, Ltd.
Attestation of Global Compliance Services Ltd & Tech Co., Ltd
Tel: +66-75 5532 406 Email: agc@agcgroup.com Web: <http://www.agcgroup.com/>

AGC®

Health Test Report

Report No: AGC00550320603EU03

| | |
|----------------------------|---|
| PRODUCT DESIGNATION | : smartwatch |
| BRAND NAME | : Blackview, 10W10D0, FeijiuQs |
| MODEL NAME | : W10, W10Pro, W20, W20Pro, W30, W30Pro W40, W40Pro, W50, W50Pro, W60, W60Pro, W70, W70Pro W80, W80Pro, W90, W90Pro, R88Pro |
| APPLICANT | : Shenzhen Hairuihong Technology Co., Ltd |
| DATE OF ISSUE | : Oct. 13, 2022 |
| STANDARD(S) | : EN 62479-2010 EN 50663:2015 |

Attestation of Global Compliance (Shenzhen) Co., Ltd.

Report having been signed by authorized executive, or having been affixed without authentication, or having not been stamped by the "Dated/Initials Test/Inspection stamp" is deemed to be invalid. Copyright of ACOG, or the original of the report is not protected by the writer's authentication of ACOG. The test results and the report apply only to the test facility, any objections to report issued by ACOG should be submitted to ACOG within 150 days after the issuance of the test report. Any correspondence regarding the test results or the report should be addressed to ACOG at acog@fipcon.com.

EMC Test Report for Smart Watch Models by Blackview, IOWODO, FeipuQu, Baolubao

This EMC test report details the electromagnetic interference and susceptibility testing performed on various Smart Watch models, including X1_5, X1, X1Pro, W30, W50, W60, W70, W80, W90, W30Pro, W50Pro, W60Pro, W70Pro, W80Pro, W90Pro, manufactured by Shenzhen Hairuichuang Technology Co., Ltd. The tests were conducted by Attestation of Global Compliance (Shenzhen) Co., Ltd. according to ETSI EN 301 489 standards.

lang:en score:11 filesize: 2.98 M page count: 49 document date: 2023-09-26

[Smart Watch Test Model Photographs - AGC Report](#)

Detailed photographs of various smart watch models, including external views and internal components, presented in a test report by Attestation of Global Compliance (Shenzhen) Co., Ltd.

Health Test Report: Smartwatch Compliance with EN 62479 and EN 50663

This document details the health test report for various smartwatch models from Blackview, IOWODO, and FeipuQu, conducted by AGC. It confirms compliance with European standards EN 62479:2010 and EN 50663:2017, including technical specifications and Bluetooth output power test results.

lang:en score:9 filesize: 1.99 M page_count: 7 document date: 2022-11-01

Report No. : AGC14435230901-001S1

SAMPLE NAME : Smart Watch
MODEL NAME : X1, 3, X1, XPro, W10, W50, W60, W70, W80, W90, W30Pro, W50Pro, W60Pro, W70Pro, W80Pro, W90Pro
APPLICANT : Shenzhen Hainichuang Technology Co., Ltd.
STANDARD(S) : Please refer to the following page(s).
DATE OF ISSUE : Sep. 28, 2023

[pdf] Test Report

AGC14435230901 001S1 agc Test Report Sep 28 2023 · on the submitted sample s said to be Sample
Name Smart Watch Model X1 5 X1Pro W30 W50 W60 W70 W80 W90 W30Pro files asbis BLACKVIEW
BG Smartwatches |||

Attestation of Global Compliance (Shenzhen) Std & Tech Co., Ltd.



10

lang:en score:9 filesize: 3.12 M page_count: 27 document date: 2023-09-28

Any report having not been signed by authorized approver, or having been altered without authentication stamp, is deemed to be invalid. Copying or extracting portions of, or altering the content of the report, presented in the report apply only to the test sample. Any disputes to report issued by ADC should further ensure of validity or verification of the test report should be addressed to ADC by ag07@agcc.com

Attestation of Global Compliance Services Co., Ltd
Attestation of Global Compliance Services Co., Ltd & Tech Co., Ltd
Tel: +86-755-2523 8888 E-mail: agcc@agcc.com [Web: http://www.agcc.com/](http://www.agcc.com/)

Page 1 of 27