

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [HBEZON](#) /

› [HBEZON Medicine Cabinet User Manual](#)

HBEZON 3230GD

HBEZON Medicine Cabinet with LED Lights and Mirror

Model: 3230GD

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **Electrical Safety:** Installation must be performed by a qualified electrician in accordance with all local electrical codes. Ensure power is disconnected at the circuit breaker before any installation or maintenance.
- **Glass Handling:** The mirror is made of glass. Handle with care to prevent breakage and injury. Wear appropriate protective gear during installation.
- **Mounting:** Ensure the mounting surface is structurally sound and capable of supporting the weight of the cabinet and its contents. Use appropriate hardware for your wall type.
- **Cleaning:** Use only soft, damp cloths and mild, non-abrasive cleaners. Avoid harsh chemicals or abrasive materials that could damage the mirror or finish.

PRODUCT OVERVIEW

The HBEZON Medicine Cabinet with LED Lights and Mirror is designed to provide both illumination and storage for your bathroom. It features smart touch controls for lighting, an anti-fog function, and a memory function for light settings.

Key Features

- Smart Touch Control for lighting and defogger.
- Adjustable Brightness (0% to 100%).
- 3 Color Lighting Modes: Warm (3000K), Natural (4500K), Cold White (6000K).
- Built-in Anti-fog Function for clear reflection.
- Memory Function to retain last light settings.
- Wall-Mounted or Recessed Installation options.
- Soft-close hinges for quiet operation.
- High-quality metal frame with powder coating.
- Spacious interior storage with multiple shelves.

Included Components

- Medicine Cabinet Unit
- Adjustable Shelves (3)
- Mounting Hardware (specific to installation type)

Product Dimensions

The overall dimensions of the cabinet are approximately 4.8"D x 32"W x 30"H.

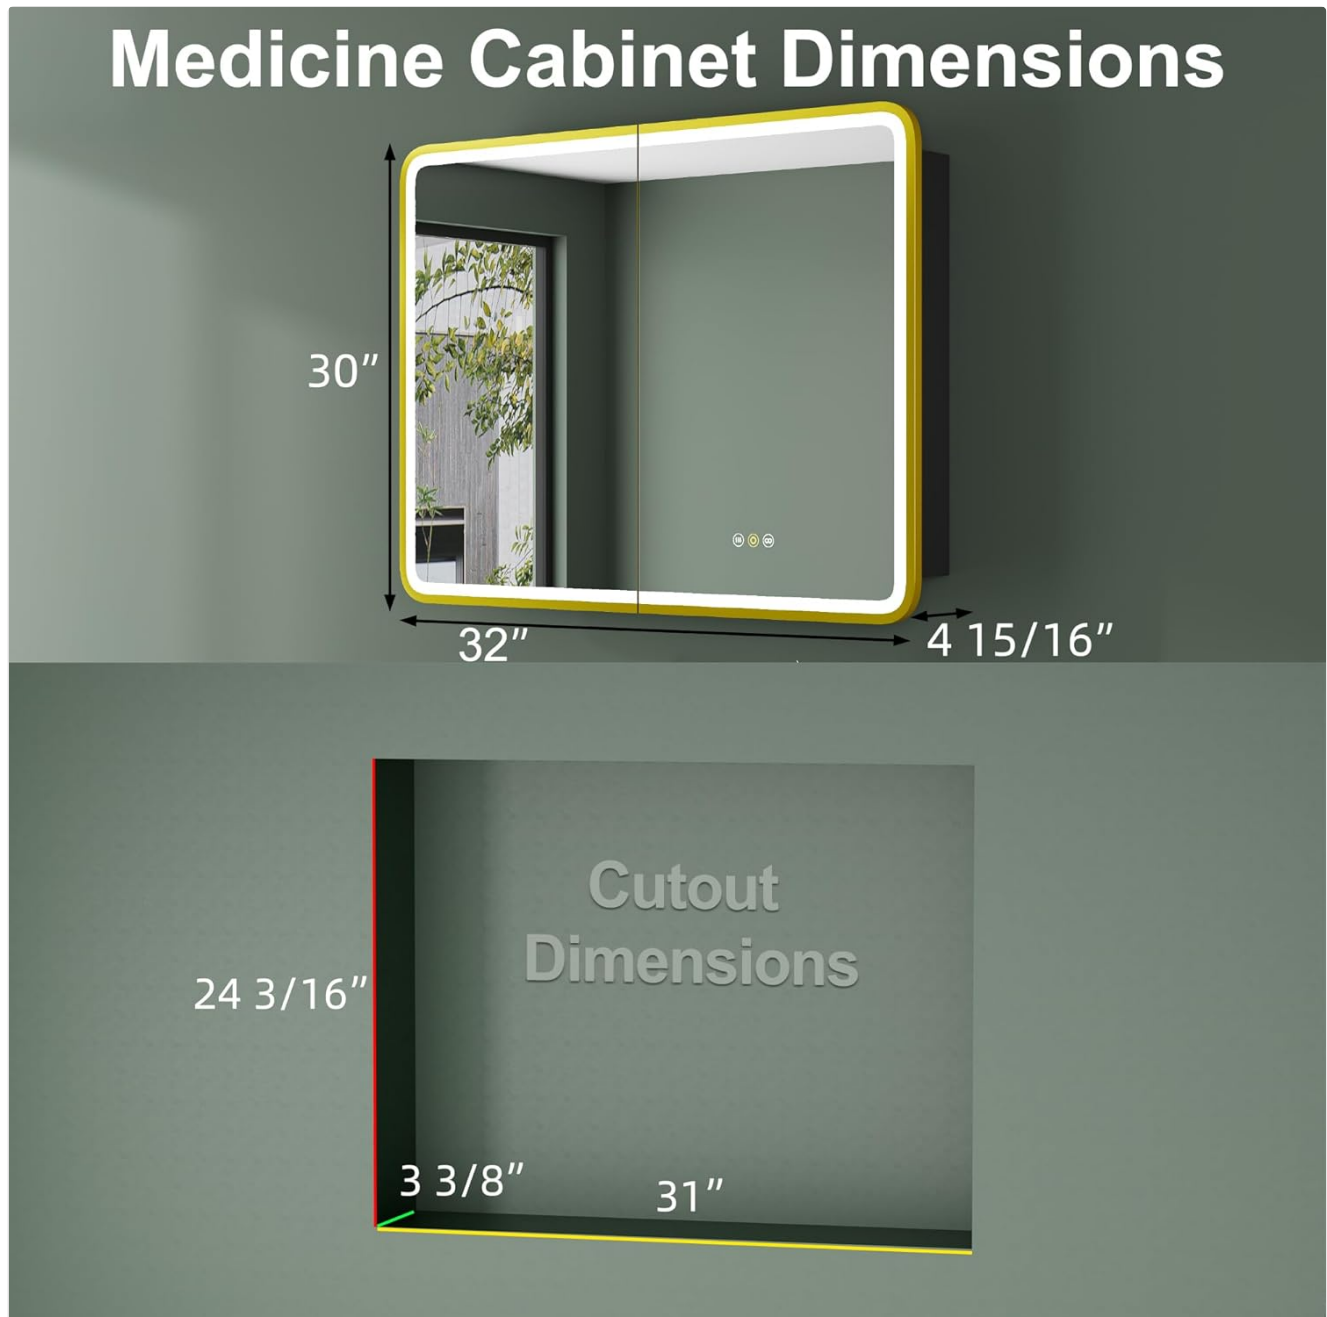


Figure 1: Medicine Cabinet Dimensions and Recessed Cutout Dimensions.

HBEZON



Colors Adjustable



Dimmable



Quiet Hinges



Hardwired



Touch Button



Memory



Anit-fog



Sorting & Stoage



Figure 2: Overview of HBEZON Medicine Cabinet Features.

INSTALLATION

The medicine cabinet can be installed either wall-mounted or recessed. Recessed installation is recommended for a seamless appearance. Always ensure the power supply is turned off before beginning installation.

Installation Options

- **Wall Mount:** The cabinet is mounted directly onto the wall surface.
- **Recessed Mount:** A cutout is made in the wall, and the cabinet is inserted into the wall cavity, with only the mirror frame protruding. Refer to Figure 1 for cutout dimensions.

Detailed installation instructions and hardware are provided in the separate installation guide included with your product. Professional electrical installation is highly recommended for hardwired connections.

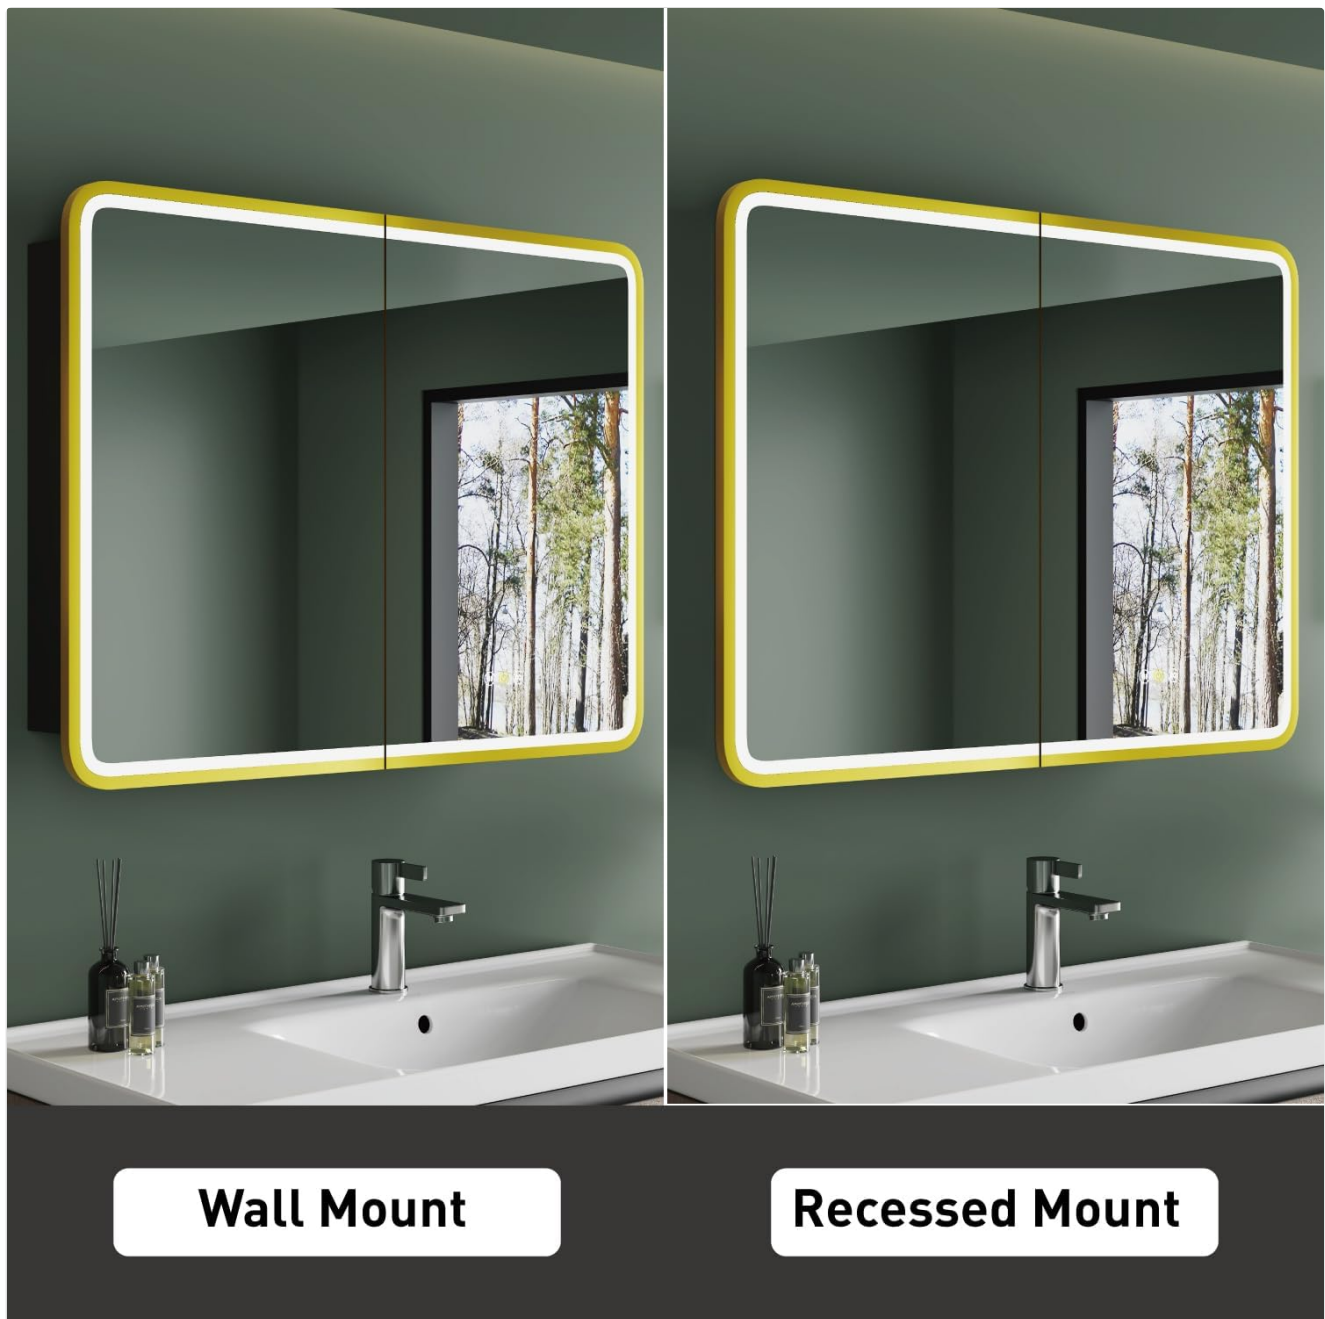


Figure 3: Wall Mount vs. Recessed Mount Installation.

OPERATING INSTRUCTIONS

The medicine cabinet features intuitive smart touch controls integrated into the mirror surface.

Smart Touch Control

The mirror has three touch buttons for controlling the lighting and defogger functions.

- **Middle Button (Power/Brightness):**
 - Short press to turn the LED lights ON or OFF.
 - Long press to adjust the brightness from 0% to 100%. The light will cycle through brightness levels. Release to set.
- **Right Button (Color Temperature):**
 - Short press to cycle through the three color modes: Warm (3000K), Natural (4500K), and Cold White (6000K).
- **Left Button (Anti-fog):**

- Short press to turn the anti-fog function ON or OFF. This function operates independently of the lighting.

Adjustable Color Temperature

Choose from three color temperatures: 3000K, 4500K, and 6000K

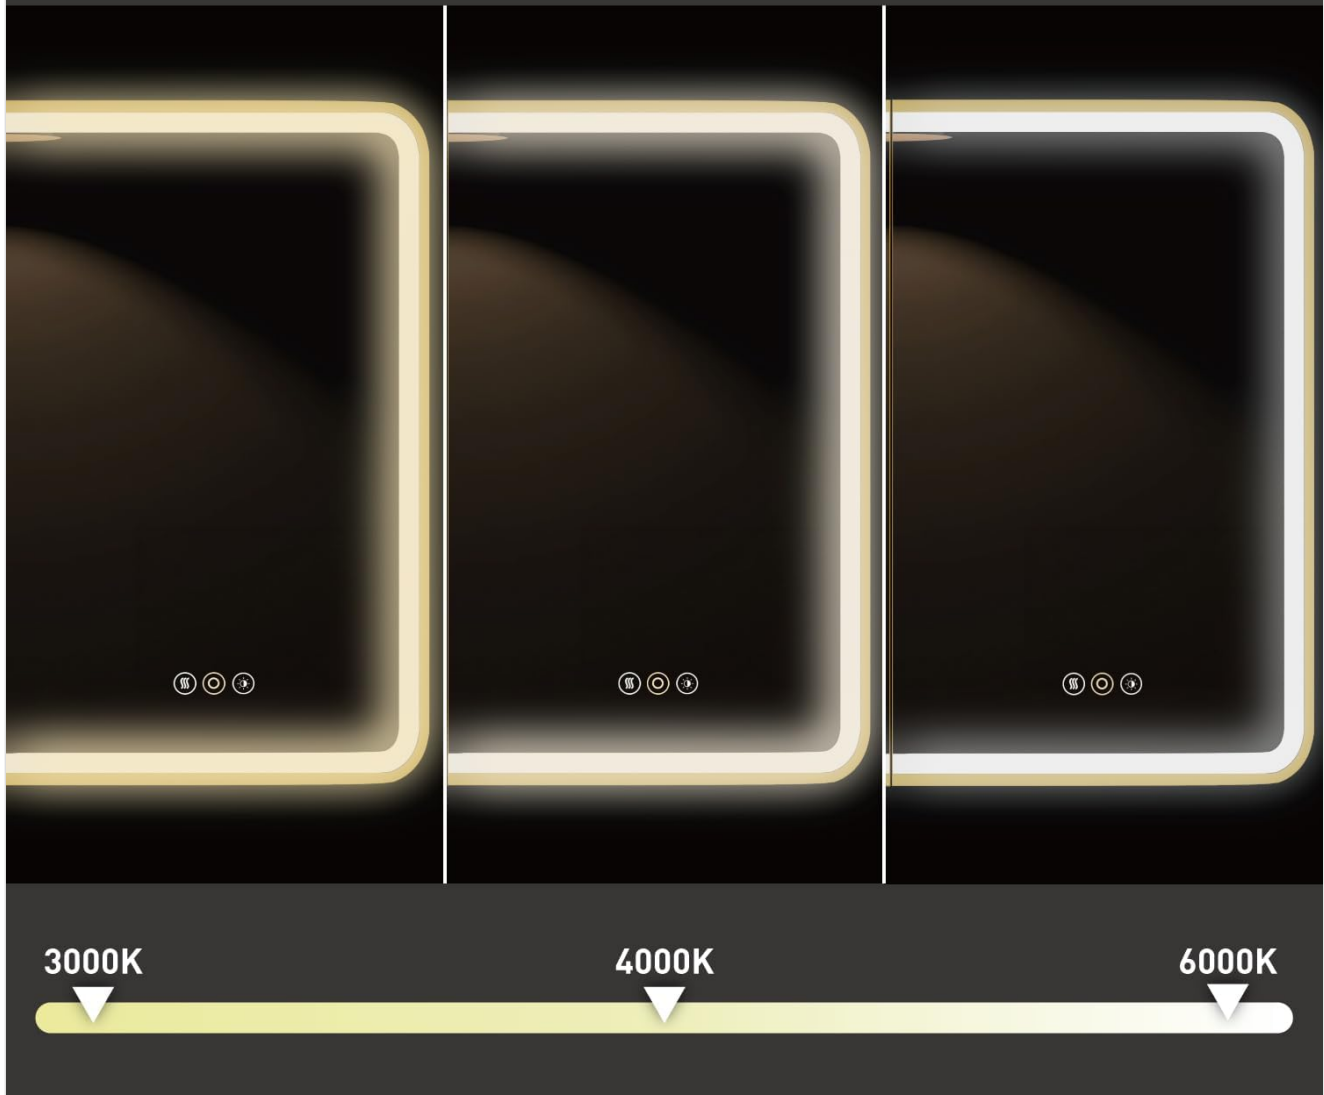


Figure 4: Adjustable Color Temperature Modes.

Adjustable Brightness

Longpress to adjust the brightness from 10% to 100%



Figure 5: Adjustable Brightness Levels.

Memory Function

The cabinet is equipped with a memory function. When the light is turned off and then back on, it will recall the last used brightness and color temperature settings, eliminating the need to readjust them each time.

Anti-Fog Function

Activate the anti-fog function by pressing the dedicated touch button. This feature heats a specific area of the mirror to prevent condensation, ensuring a clear reflection even in steamy bathroom conditions. Turn off the anti-fog function when not needed to conserve energy.



Figure 6: Anti-Fog Function in operation.

Your browser does not support the video tag.

Video 1: Demonstration of the medicine cabinet's smart touch controls for light and defogger, soft-close hinges, and spacious interior storage.

MAINTENANCE AND CARE

Regular cleaning and proper care will ensure the longevity and optimal performance of your medicine cabinet.

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into the electrical components.
- **Cleaning the Frame and Interior:** Wipe down the metal frame and interior shelves with a soft, damp cloth. For stubborn spots, a mild soap solution can be used. Dry thoroughly immediately after cleaning.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, ammonia-based products, or solvents as they can damage

the mirror coating, frame finish, or internal components.

- **Hinge Care:** The soft-close hinges are designed for durability. Avoid forcing the doors open or closed. Periodically check hinge screws for tightness.



Figure 7: Spacious Interior Storage.

TROUBLESHOOTING

If you encounter issues with your medicine cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
LED lights do not turn on.	No power supply; loose wiring; faulty touch sensor.	Check circuit breaker. Ensure all wiring connections are secure (consult an electrician). Try touching the sensor firmly.
Brightness or color temperature cannot be adjusted.	Incorrect touch operation; sensor malfunction.	Ensure you are long-pressing for brightness and short-pressing for color. Clean the sensor area.
Anti-fog function is not working.	Anti-fog function not activated; power issue.	Press the dedicated anti-fog touch button. Verify power supply to the unit.
Doors do not close smoothly.	Hinges are dirty or loose; obstruction.	Clean hinges. Check for any obstructions. Tighten hinge screws if loose.

If the problem persists after attempting these solutions, please contact HBEZON customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	HBEZON
Model Number	3230GD

Feature	Detail
Product Dimensions	4.8"D x 32"W x 30"H
Color	Gold
Mounting Type	Wall Mounted or Recessed Mounted
Special Features	Smart Touch Control, Lighting Memory Function, Dimmable, 3 Color Lighting Modes, Defogger, Space-saving
Number of Shelves	3
Frame Material	Metal
Item Weight	20 Pounds
Assembly Required	Yes


CUSTOMER SUPPORT

For any questions, technical assistance, or warranty inquiries, please contact HBEZON customer support. Refer to your purchase documentation for specific contact details or visit the official HBEZON store on Amazon:

[Visit the HBEZON Store](#)

© 2024 HBEZON. All rights reserved.

Related Documents - 3230GD

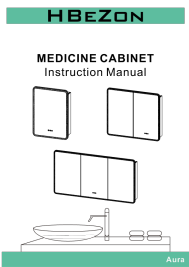	<p>HBEZON Aura Medicine Cabinet Instruction Manual</p> <p>This instruction manual provides detailed guidance for installing and operating the HBEZON Aura Medicine Cabinet. It includes specifications, packing lists, safety warnings, surface and recessed mounting instructions, hinge and shelf adjustments, and operation details for lighting, anti-fog, and color temperature features.</p>
---	--

<div><div>HBEZON</div><div>MEDICINE CABINET Instruction Manual</div><div><div>Roll</div></div></div>	<p>HBEZON Medicine Cabinet Installation and Operation Guide</p> <p>Comprehensive instruction manual for HBEZON medicine cabinets, covering installation (surface and recessed), safety, operation, and maintenance. Includes specifications and packing lists for various models.</p>
<div><div>Tara Series Mirror Medicine Cabinet SKU# TARA-1624-WN SIZE 16" WIDE 24" H (SMALL)</div><div></div><div>Installation Manual</div></div>	<p>Tara Series Mirror Medicine Cabinet Installation Manual - HBEZON TARA-1624-WN</p> <p>Comprehensive installation manual for the HBEZON Tara Series Mirror Medicine Cabinet (SKU: TARA-1624-WN). Features step-by-step assembly instructions, parts list, hardware guide, wall and recessed mounting procedures, care and maintenance tips, and warranty information.</p>
<div><div>HBEZON</div><div>MEDICINE CABINET Instruction Manual</div><div><div>Roll</div></div></div>	<p>HBEZON Medicine Cabinet: Installation and Maintenance Guide</p> <p>Comprehensive instruction manual for HBEZON medicine cabinets, covering installation (surface and recessed mount), maintenance, shelf adjustment, packing list, and specifications.</p>
<div><div>HBEZON</div><div>MEDICINE CABINET Instruction Manual</div><div><div>Aris</div></div></div>	<p>HBEZON Aris Medicine Cabinet Instruction Manual</p> <p>Comprehensive instruction manual for the HBEZON Aris medicine cabinet, covering installation (surface and recessed mount), operation, safety guidelines, and warranty information.</p>
<div><div>Tara Series Mirror Medicine Cabinet SKU# TARA-2028-WN SIZE 20" WIDE 28" H (MEDIUM)</div><div></div><div>Installation Manual</div></div>	<p>Tara Series Mirror Medicine Cabinet Installation Guide</p> <p>Comprehensive installation guide for the Tara Series Mirror Medicine Cabinet (SKU: TARA-2028-WN) by HBEZON. Includes step-by-step assembly instructions, parts list, hardware details, wall and recessed mounting options, hinge adjustments, care instructions, and warranty information.</p>