

manuals.plus /

> [Letshuoer](#) /

> [Letshuoer S08 In-Ear Monitor Earphones User Manual](#)

## Letshuoer S08

# Letshuoer S08 In-Ear Monitor Earphones User Manual

Model: S08

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

## 1. INTRODUCTION

---

The Letshuoer S08 In-Ear Monitor Earphones are designed to deliver high-fidelity audio reproduction. These earphones feature a fourth-generation dual-coil 13mm planar magnetic driver, engineered for enhanced sound performance and diaphragm stability. The S08 incorporates advanced technologies such as nanoscopic magnetron sputtering and PTR elastic film surrounds to optimize sound clarity, bass response, and overall audio transient speed. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your Letshuoer S08 earphones.



Figure 1: Letshuoer S08 In-Ear Monitor Earphones (Silver)

## 2. SETUP

---

### 2.1 Package Contents

Before proceeding, ensure all items are present in the package:

- Letshuoer S08 Earphones (Left and Right units)
- Detachable 2-pin Silver-plated Copper Cable
- Modular 3.5mm and 4.4mm Plugs
- Protective Case
- User Manual (this document)
- Multiple Ear Tips (various sizes)

### 2.2 Connecting the Cable

The S08 earphones feature a detachable 2-pin cable for easy replacement and maintenance. Follow these steps to connect the cable:

1. Identify the left (L) and right (R) earphone units and the corresponding connectors on the cable. Ensure the pins are correctly oriented.
2. Align the 2-pin connector on the cable with the receptacle on the earphone unit. Gently push the connector into the earphone receptacle until it is securely seated. Do not force the connection.
3. Repeat for the other earphone unit.
4. Attach the desired modular plug (3.5mm or 4.4mm) to the cable's main connector. The twist-lock design ensures a secure connection.

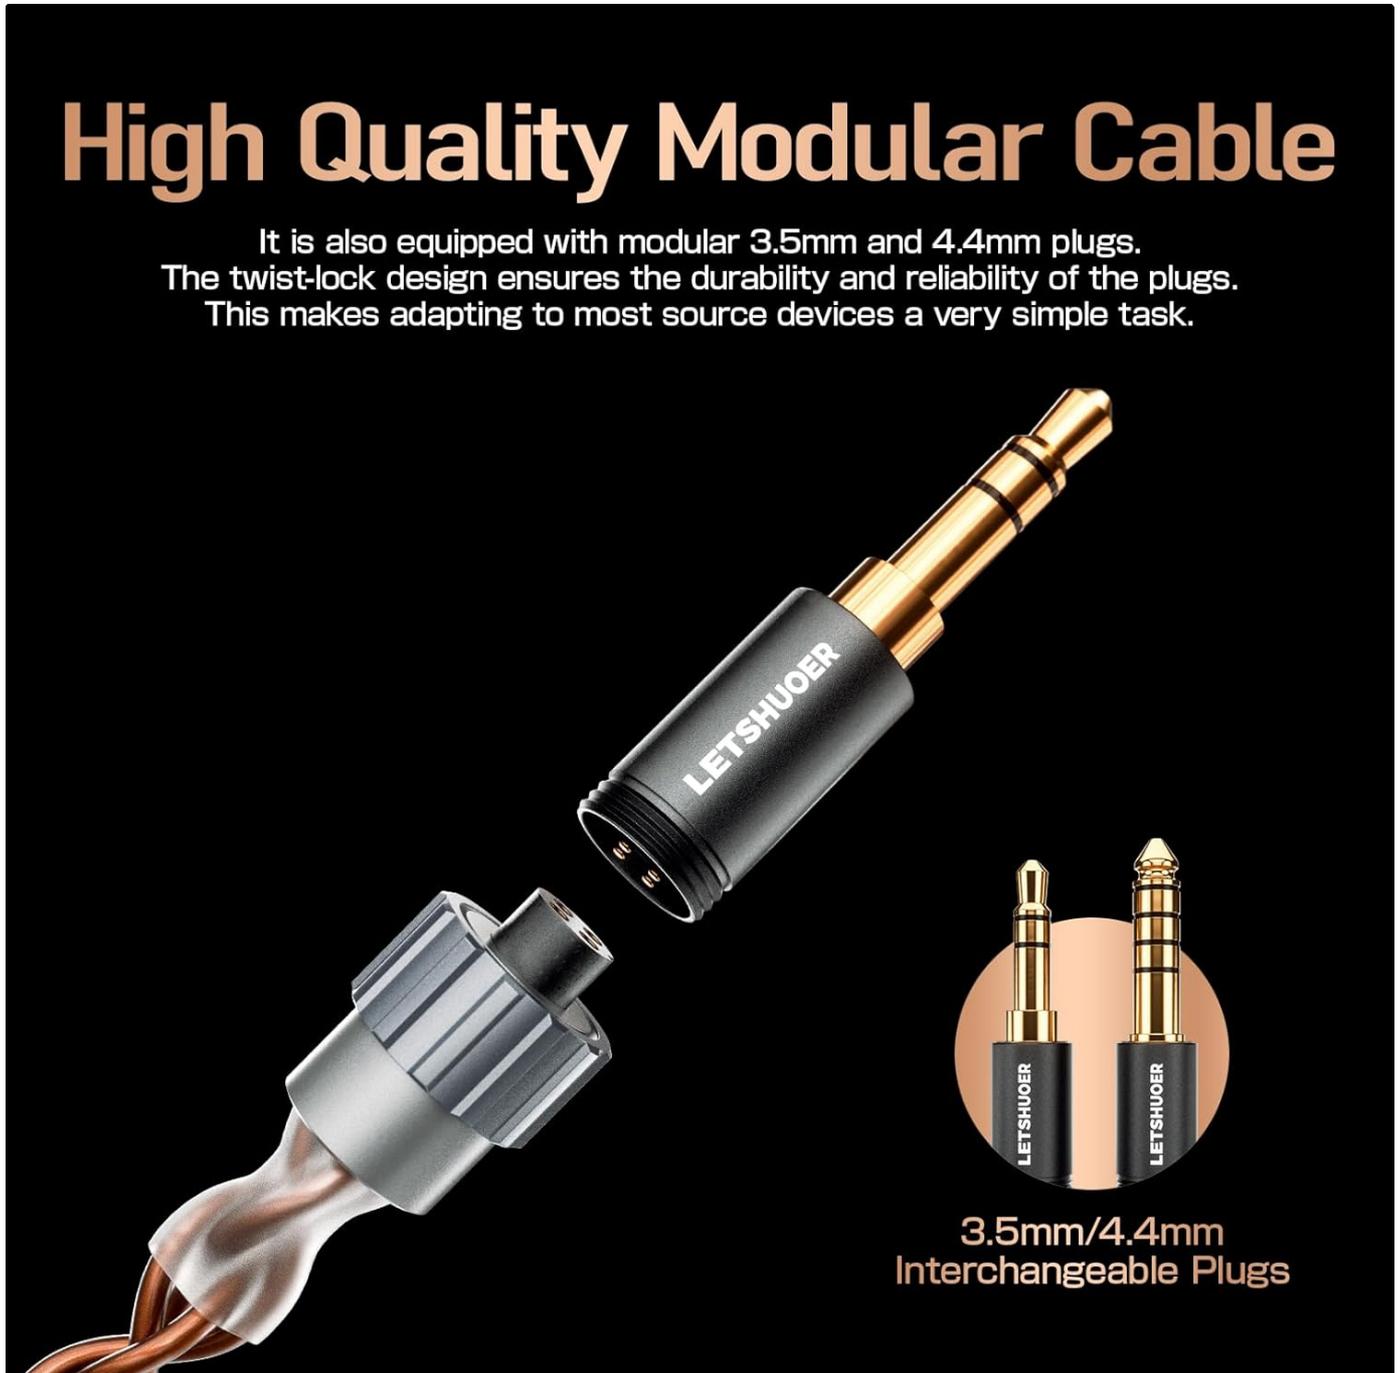


Figure 2: Detachable Modular Cable with Interchangeable Plugs

### 2.3 Choosing and Installing Ear Tips

Selecting the correct ear tips is crucial for optimal sound quality and comfort. Experiment with the included ear tips to find the best fit for your ears:

1. Gently remove the pre-installed ear tips from the earphone nozzles.
2. Select a pair of ear tips that feel comfortable and provide a good seal in your ear canal. A proper seal enhances

bass response and passive noise isolation.

3. Carefully push the chosen ear tips onto the earphone nozzles until they are firmly attached.

## 2.4 Wearing the Earphones

The S08 earphones are designed to be worn with the cable over your ear for a secure and comfortable fit:

1. Insert the earphone unit into your ear canal.
2. Loop the cable over the top of your ear, guiding it downwards behind your ear. The pre-formed ear hooks on the cable help secure the fit.
3. Adjust the earphones until they feel snug and comfortable, ensuring a good seal.



Figure 3: Proper Wearing of Letshuoer S08 Earphones

## 3. OPERATION

---

### 3.1 Audio Playback

Connect the 3.5mm or 4.4mm plug to your audio source (e.g., smartphone, digital audio player, amplifier). Begin audio playback from your device. Adjust the volume on your audio source to a comfortable listening level.

## 3.2 Media Control

The S08 earphones support media control via the remote on the cable. Specific functions may vary slightly depending on your connected device and operating system:

- **Single Press:** Play/Pause audio, Answer/End call.
- **Double Press:** Skip to next track.
- **Triple Press:** Skip to previous track.
- **Long Press:** Activate voice assistant (if supported by device).

Your browser does not support the video tag.

Video 1: Overview of Letshuoer S08 In-Ear Monitor Earphones features and design.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Earphones

Regular cleaning helps maintain sound quality and hygiene:

- **Ear Tips:** Remove ear tips and clean them with mild soap and water. Rinse thoroughly and allow them to dry completely before reattaching.
- **Earphone Nozzles:** Gently wipe the earphone nozzles with a dry, soft cloth. Use a small brush or cleaning tool to carefully remove any earwax or debris from the mesh filters. Avoid using liquids directly on the nozzles.
- **Earphone Shells:** Wipe the metallic shells with a soft, dry cloth.

### 4.2 Cable Care

To prolong the life of your cable:

- Avoid sharp bends or excessive pulling on the cable.
- When disconnecting, always grasp the plug or connector, not the cable itself.
- Store the cable neatly, preferably coiled, to prevent tangling.

### 4.3 Storage

When not in use, store your S08 earphones in the provided protective case to prevent damage from dust, impacts, or tangling.

## 5. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No sound or low volume	<ul style="list-style-type: none"><li>◦ Cable not fully connected.</li><li>◦ Incorrect ear tip size/poor seal.</li><li>◦ Audio source volume too low.</li><li>◦ Earphone nozzle blocked.</li></ul>	<ul style="list-style-type: none"><li>◦ Ensure 2-pin connectors and modular plug are securely attached.</li><li>◦ Try different ear tip sizes for a better seal.</li><li>◦ Increase volume on your audio source.</li><li>◦ Clean earphone nozzles and mesh filters.</li></ul>

Problem	Possible Cause	Solution
Sound imbalance (one side louder/softer)	<ul style="list-style-type: none"> <li>o Cable connection issue.</li> <li>o Earphone nozzle blocked on one side.</li> <li>o Audio source balance settings.</li> </ul>	<ul style="list-style-type: none"> <li>o Re-seat both 2-pin connectors and the modular plug.</li> <li>o Clean both earphone nozzles thoroughly.</li> <li>o Check audio balance settings on your device.</li> </ul>
Distorted sound	<ul style="list-style-type: none"> <li>o Volume too high.</li> <li>o Poor audio file quality.</li> <li>o Damaged cable or earphone unit.</li> </ul>	<ul style="list-style-type: none"> <li>o Reduce volume on your audio source.</li> <li>o Try a different audio file or source.</li> <li>o Inspect cable and earphones for visible damage. Contact support if damage is found.</li> </ul>

## 6. SPECIFICATIONS

The Letshuoer S08 In-Ear Monitor Earphones feature advanced components for superior audio performance:

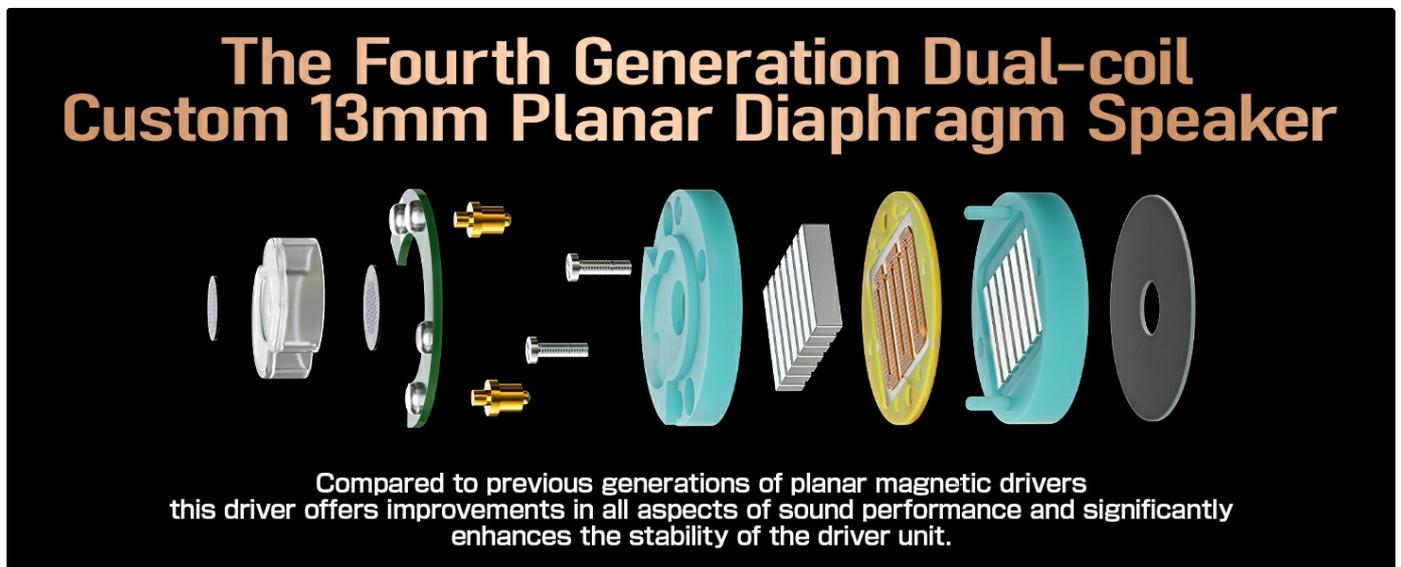


Figure 4: Exploded View of S08 Planar Magnetic Driver

Feature	Detail
Model Name	Letshuoer S08
Audio Driver Type	Fourth Generation 13mm Planar Magnetic Driver (Dual-coil)
Connectivity Technology	Wired
Headphones Jack	3.5 mm Jack (Modular with 4.4mm option)
Cable	4 cores of 30-strands 0.05mm silver-plated copper, Detachable 2-pin
Shell Material	CNC anodized aluminum
Special Features	Nanoscopic magnetron sputtering technology, PTR elastic film surrounds
Item Weight	8.4 ounces (approx. 0.24 Kilograms)
Water Resistance Level	Not Water Resistant

## 7. WARRANTY & SUPPORT

## 7.1 Warranty Information

Letshuoer products are typically covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging or visit the official Letshuoer website for detailed warranty terms and conditions. Proof of purchase is required for all warranty claims.

## 7.2 Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Letshuoer customer support through their official channels. You can usually find contact information on the Letshuoer website or within your product documentation.

