

PeriPage P90

PeriPage P90 Wireless Tattoo Stencil Printer User Manual

Model: P90 | Brand: PeriPage

1. INTRODUCTION

The PeriPage P90 is a portable, inkless thermal printer designed for creating tattoo stencils. Its compact size and wireless capabilities make it an ideal tool for tattoo artists and enthusiasts seeking efficiency and convenience in stencil preparation. This manual provides detailed instructions for setting up, operating, and maintaining your P90 printer.

2. SAFETY INFORMATION

Please read all safety instructions carefully before using the device. Keep the printer away from water, excessive heat, and direct sunlight. Use only the provided charging cable and adapter. Do not attempt to disassemble or repair the device yourself. Keep out of reach of children.

3. PACKAGE CONTENTS

- PeriPage P90 Wireless Tattoo Stencil Printer
- Tattoo Stencil Paper (sample sheets)
- USB-C Charging Cable
- USB-A to USB-C Adapter
- User Manual

4. PRODUCT OVERVIEW AND FEATURES

The P90 printer is designed for portability and ease of use. It features inkless thermal technology, eliminating the need for ink cartridges. The built-in 2000mAh rechargeable battery allows for approximately 200 pages of prints per charge. It supports both Bluetooth and USB connectivity, making it compatible with a wide range of devices.



Image: The PeriPage P90 printer demonstrating its versatile connectivity options, including Bluetooth for mobile devices and USB for computers.



Image: A detailed view of the PeriPage P90, emphasizing its key attributes such as being inkless, portable, rechargeable, and highly efficient.

5. SETUP GUIDE

5.1 Charging the Printer

Connect the provided USB-C charging cable to the printer's charging port and the other end to a compatible USB power source. The indicator light will show charging status.

5.2 Powering On/Off

Press and hold the power button (located on the side) for 2 seconds to turn the printer on or off. The indicator light will illuminate when the device is on.

5.3 App Download and Bluetooth Connection

Download the "PeriPage APP" from your device's app store (available for Android and iOS). Open the app and follow the on-screen prompts to connect your P90 printer via Bluetooth. Ensure Bluetooth is enabled on your device.

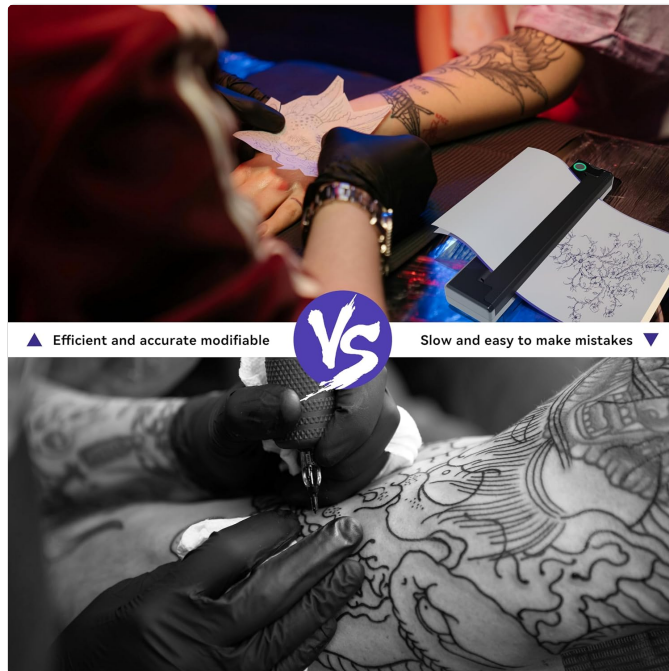


Image: A step-by-step visual guide illustrating the process of preparing and using the PeriPage P90 printer, from paper preparation to final stencil application.

5.4 Loading Stencil Paper

1. Tear off the yellow layer paper from the stencil sheet.
2. Remove the protective layer paper, exposing the blue transfer side.
3. Switch on the machine and insert the blue side of the transfer paper downwards into the paper feed slot. The printer will automatically pull the paper in.

6. OPERATING INSTRUCTIONS

6.1 Printing a Stencil

Once connected via the PeriPage APP, you can select from abundant built-in tattoo templates or upload your personal designs. Adjust the size and orientation as needed within the app, then click "Print" to send the design to the printer.

Video: A demonstration of the PeriPage P90 Tattoo Printer in action, showcasing the printing process of a stencil design.



Image: The PeriPage P90 printer actively producing a large eagle stencil, with the companion app visible on a smartphone screen and additional stencil paper.

6.2 Applying the Stencil

1. Cleanse the skin thoroughly where the tattoo will be applied.
2. Apply a thin, even layer of tattoo transfer cream to the prepared skin.
3. Carefully place the printed tattoo transfer paper onto the skin, pressing gently for a few seconds.
4. Gently and slowly remove the transfer paper to leave the tattoo design on the skin.



Image: A close-up of a tattoo stencil being carefully applied to a person's arm, highlighting the precision of the transfer.

7. MAINTENANCE

7.1 Cleaning

Wipe the exterior of the printer with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

7.2 Storage

Store the printer in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the paper feed slot is clear of any debris.

7.3 Paper Handling

Thermal paper is sensitive to heat and light. Store unused stencil paper in its original packaging in a cool, dark place to preserve its quality.

8. TROUBLESHOOTING

8.1 Printer Not Turning On

- Ensure the battery is charged. Connect the printer to a power source and allow it to charge for at least 30 minutes.

8.2 Connection Issues

- Verify Bluetooth is enabled on both the printer and your device.
- Restart the PeriPage APP and attempt to reconnect.
- Ensure the printer is within the Bluetooth range of your device.

8.3 Print Quality Issues

- Check that the stencil paper is loaded correctly, with the blue side facing down.
- Adjust the print concentration settings within the PeriPage APP for clearer results.



Image: A visual comparison demonstrating the difference between high-quality and poor-quality stencil prints from the device.

8.4 Paper Jams

- Turn off the printer immediately.
- Gently pull out any jammed paper from the feed slot.
- Ensure the paper is aligned correctly before re-inserting.

9. SPECIFICATIONS

- **Product Dimensions:** 10.4 x 2.2 x 1.2 inches

- **Item Model Number:** P90
- **Batteries:** 1 Lithium Ion battery required (included)
- **Manufacturer:** PeriPage

10. WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official PeriPage website or contact their customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0D56PNX1J>

More documents and user manuals: <https://manuals.plus/>