

- Manuals.plus /
- › Mobility Lab /
- › Mobility Lab ML314044 Universal Travel Adapter with 2 USB and 1 USB-C Port - 20W Fast Charging Instruction Manual

Mobility Lab ML314044

Mobility Lab ML314044 Universal Travel Adapter Instruction Manual


Model: ML314044

1. PRODUCT OVERVIEW

The Mobility Lab ML314044 is a versatile universal travel adapter designed to power and charge your electronic devices in over 200 countries. It features a main AC outlet, two USB-A ports, and one USB-C port with 20W Power Delivery for rapid charging. Its compact, all-in-one design makes it an essential accessory for international travel, allowing you to charge up to four devices simultaneously.



Front view of the Mobility Lab ML314044 universal travel adapter, showing its compact black design with two USB-A ports and one USB-C port.

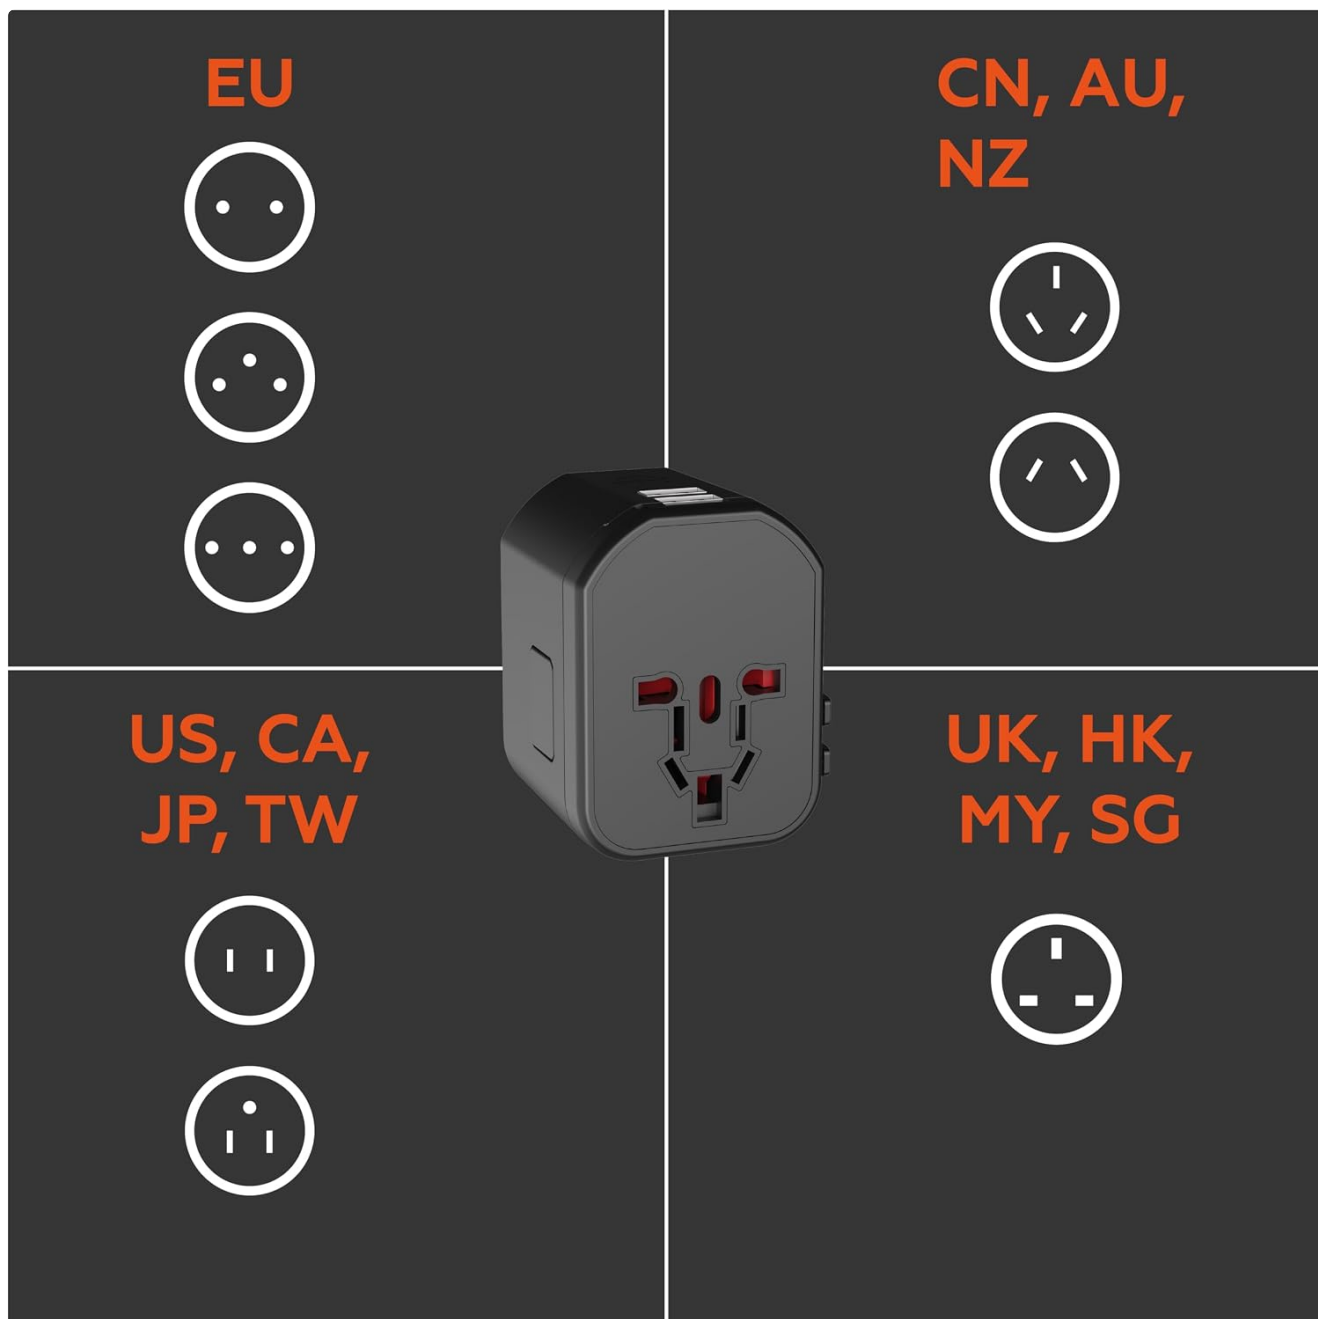

A diagram illustrating the different international plug types (EU, CN/AU/NZ, US/CA/JP/TW, UK/HK/MY/SG) that the universal travel adapter can accommodate.



EU



**CN, AU,
NZ**



**US, CA,
JP, TW**



**UK, HK,
MY, SG**




Detailed images showing the adapter with its various retractable plug configurations for EU, CN/AU/NZ, US/CA/JP/TW, and UK/HK/MY/SG outlets.



CHARGE HYPER RAPIDE 20W

2 USB + USB-C Power Delivery

The adapter showcasing its 20W fast charging capability, featuring two USB-A ports and one USB-C port with Power Delivery.

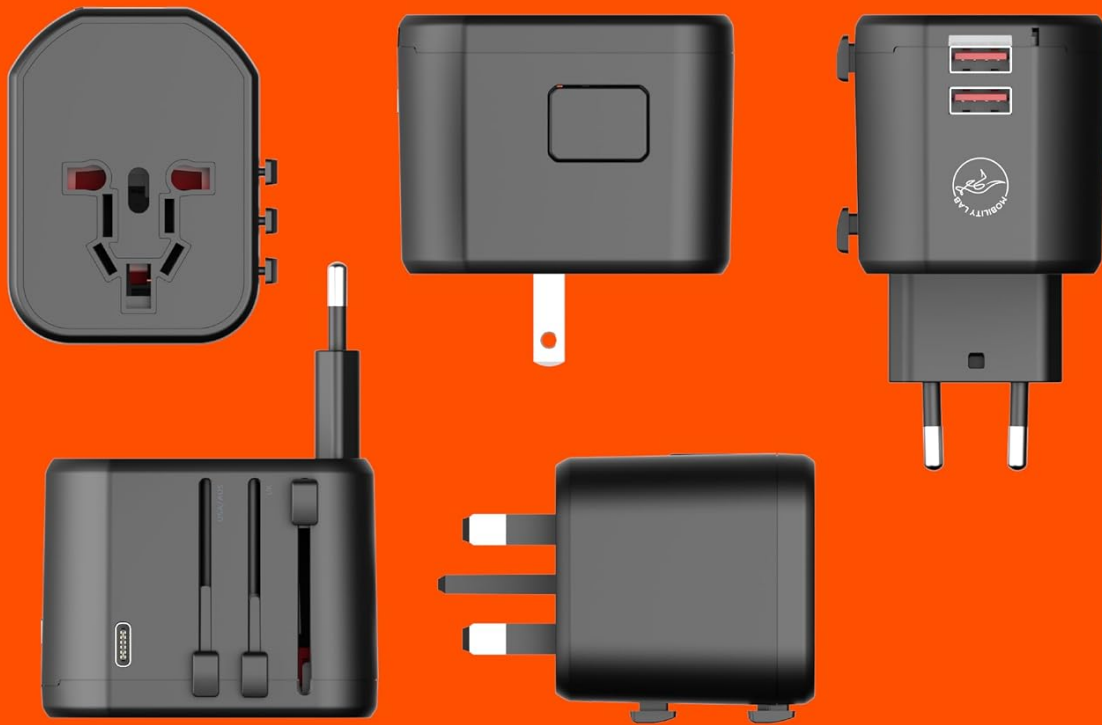

PUISSANCE MAXIMUM 1840W

Sécurité surtension

An image emphasizing the adapter's maximum power output of 1840W and its integrated surge protection feature.

2. SAFETY INFORMATION

- This product is an adapter, not a voltage converter. Ensure your devices are compatible with the local voltage before use.
- For indoor use only. Do not expose to moisture or extreme temperatures.
- Keep out of reach of children.
- Do not disassemble or modify the adapter.
- Avoid overloading the adapter. Refer to the maximum power rating (1840W).
- The adapter includes surge protection for connected devices.



COMPATIBLE

Appareil photo, iPad, iPhone, MacBook, smartphone, batterie externe, casque, écouteurs sans fil, Switch, rasoir, GPS, montres...



NON COMPATIBLE

Sèche cheveux, lave-linge, micro-onde, aspirateur, lisseur...

A clear list indicating compatible devices such as phones, tablets, and cameras, and non-compatible high-power appliances like hair dryers and washing machines.

3. SETUP

To use the Mobility Lab ML314044 universal travel adapter, follow these steps:

1. **Select the Correct Plug:** Identify the type of wall outlet in your destination country. The adapter features retractable pins for EU, UK, USA/AUS, and other common standards. Slide the appropriate lever on the side of the adapter to extend the correct plug pins.
2. **Connect to Wall Outlet:** Firmly insert the extended plug pins into the wall outlet. A blue indicator light may illuminate to confirm power connection.
3. **Connect Your Devices:** Plug your device's power cord into the universal AC socket on the front of the adapter. For USB-powered devices, connect your USB-A or USB-C cables into the corresponding ports.

Your browser does not support the video tag.

This video illustrates how to connect various international plugs (UK, US) into a universal adapter, converting them for use with European outlets. It highlights the adapter's versatility for different regions.

4. OPERATING INSTRUCTIONS

Once the adapter is correctly plugged into a wall outlet and your devices are connected, charging will begin automatically. The adapter supports simultaneous charging of up to four devices (one via AC outlet, two via USB-A, and one via USB-C).

- The USB-C port supports 20W Power Delivery for faster charging of compatible devices.
- Ensure that the total power consumption of all connected devices does not exceed the adapter's maximum rating of 1840W.



The universal travel adapter plugged into a wall outlet, simultaneously charging a smartphone, a tablet, and a laptop.


5. MAINTENANCE

To ensure the longevity and optimal performance of your Mobility Lab ML314044 adapter:

- **Cleaning:** Disconnect the adapter from the power source and all devices before cleaning. Use a dry, soft cloth to wipe the surface. Do not use liquid cleaners or abrasive materials.

- **Storage:** When not in use, retract all plug pins into the adapter's body. Store the adapter in its included travel pouch in a cool, dry place away from direct sunlight.

DESIGN COMPACT

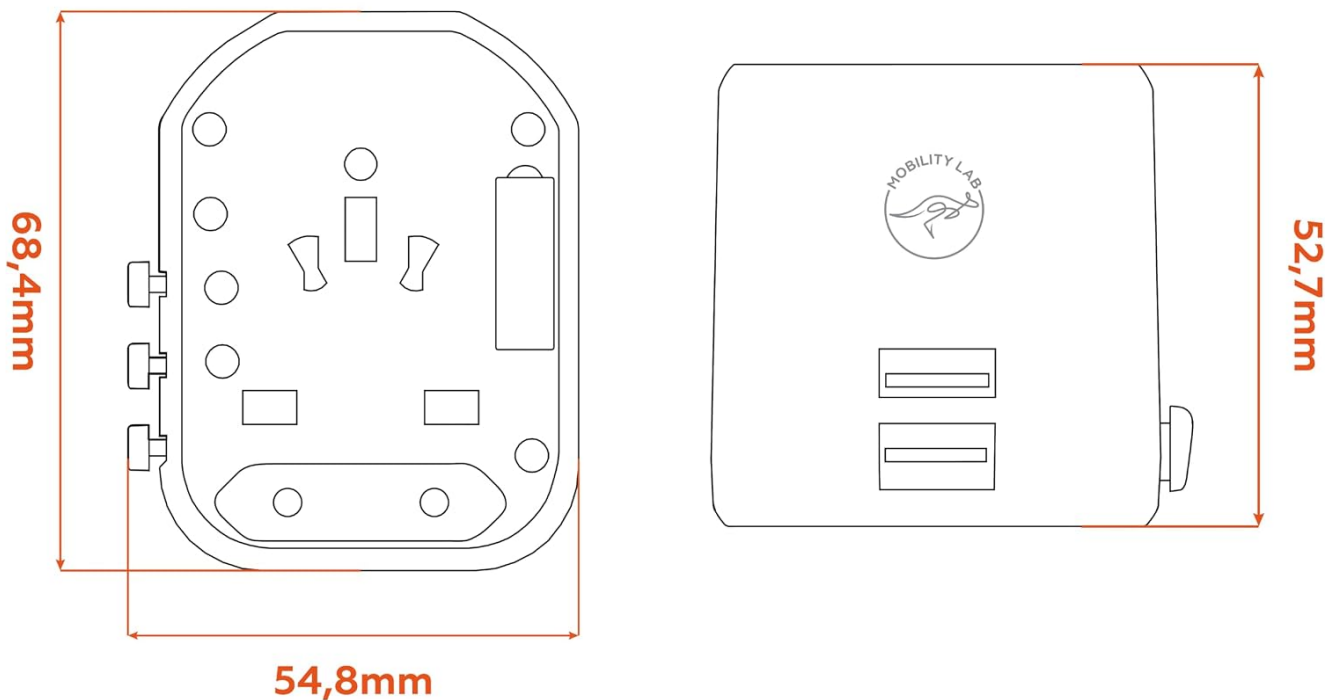

A black, textured travel pouch designed to store and protect the universal travel adapter.

6. TROUBLESHOOTING

If you encounter issues with your adapter, please refer to the following common problems and solutions:

- **No Power/Charging:**
 - Ensure the adapter is fully inserted into the wall outlet.
 - Verify that the wall outlet is active by testing it with another device.
 - Check if the correct plug pins are extended for the region.
 - Ensure your device's charging cable is properly connected to the adapter.
- **Slow Charging:**
 - Confirm your device supports fast charging via USB-C Power Delivery to utilize the 20W output.
 - Charging multiple devices simultaneously may reduce individual charging speeds.
- **Adapter Overheating:**
 - Disconnect all devices and the adapter from the wall. Allow it to cool down.
 - Ensure the total power consumption of connected devices does not exceed 1840W.

7. SPECIFICATIONS



SACOCHE DE TRANSPORT INCLUSE

A technical drawing providing the precise dimensions of the universal travel adapter in millimeters.

Feature	Detail
Brand	Mobility Lab
Model Number	ML314044
Color	Black
Weight	137 Grams
Dimensions (L x W x H)	5.4 x 4 x 3.8 centimeters
Output Voltage	20 Volts (USB-C PD)
Plug Types Supported	Type E (EU), Type G (UK), Type A (USA/AUS)
Total Power Outlets	4 (1 AC, 2 USB-A, 1 USB-C)
Max Power Rating	1840W

8. WARRANTY AND SUPPORT

The Mobility Lab ML314044 Universal Travel Adapter comes with a 2-year manufacturer's warranty.

For technical support, warranty claims, or additional product information, please visit the official Mobility Lab store or contact their customer service directly.

Mobility Lab Store: <https://www.amazon.fr/stores/MobilityLab/page/F27E1A97-C375-4007-9193-875FE438EE30>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D5BQP4KW>

More documents and user manuals: <https://manuals.plus/>