



[Manuals.plus](#) /

> [LINKLIFE](#) /

> LINKLIFE Bidet Toilet Seat Electric Warm Water Bidet with Warm Air Drying, Heated Seat Bidet with Self-cleaning Nozzle Temperature Adjustable White (Round) - Instruction Manual

## LINKLIFE PW20162

# LINKLIFE Bidet Toilet Seat Instruction Manual

Model: PW20162 - Round

## PRODUCT OVERVIEW

---

The LINKLIFE Electric Warm Water Bidet Toilet Seat is designed to enhance personal hygiene and comfort. This smart toilet seat features adjustable warm water washing, a heated seat, and warm air drying. It includes a self-cleaning stainless steel nozzle and a convenient night light for ease of use. Its ultra-thin design allows for seamless integration with various bathroom styles.



Figure 1: Overview of the LINKLIFE Bidet Toilet Seat.

## SETUP AND INSTALLATION

### Pre-installation Checklist

- Ensure your toilet is a **Round** shape for proper fit. Refer to the fitment guide below.
- Verify a 120-volt electrical outlet is available within 1.5 meters (4.9 ft) of the toilet.
- Basic tools: Screwdriver, adjustable wrench.
- Access to the toilet's water supply valve.

# Toilet Fit Check Guide

PLEASE CHECK  
THE SIZE BEFORE  
PURCHASING

Product fit may differ from the picture as shape and size of the tank and bowl may differ



outlet may fit or may not fit



120 - volt outlet is required  
Power Cord Length 1.5M (4.9ft.)

Figure 2: Toilet Fit Check Guide. Ensure your toilet matches the "Round" dimensions for optimal fit.

## Installation Steps

For a visual guide, please refer to the official installation video provided below. Follow these steps carefully for a successful installation:

- 1. Remove Existing Toilet Seat:** Lift the hinge covers and use a screwdriver to loosen and remove the bolts holding the current toilet seat. Remove the seat and lid.
- 2. Install Mounting Plate:** Place the bidet seat's mounting plate over the toilet bowl holes. Insert the rubber expansion nuts into the holes and secure them with the provided screws. Ensure the plate is firmly in place.
- 3. Attach Bidet Seat:** Slide the bidet toilet seat onto the mounting plate until it clicks into place.
- 4. Connect Water Supply:**
  - o Turn off the water supply to the toilet at the shut-off valve.
  - o Flush the toilet to drain the tank.

- Disconnect the existing water supply hose from the toilet tank.
- Install the T-valve (water splitter) to the toilet tank's fill valve.
- Connect the existing water supply hose to the bottom of the T-valve.
- Connect the bidet's water supply hose to the side of the T-valve and to the bidet seat's water inlet.
- Optionally, install the inline water filter if included, connecting it between the T-valve and the bidet's water inlet.

5. **Connect Power:** Plug the bidet seat's power cord into a grounded 120-volt electrical outlet.

6. **Restore Water Supply:** Slowly turn on the water supply valve to the toilet. Check for any leaks.

Your browser does not support the video tag.

Video 1: Official installation guide for the bidet toilet seat, demonstrating the steps for mounting, water connection, and power setup.



Figure 3: The bidet seat installed on a toilet.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

The bidet seat is operated via a side-mounted control panel. Familiarize yourself with the buttons and their functions:

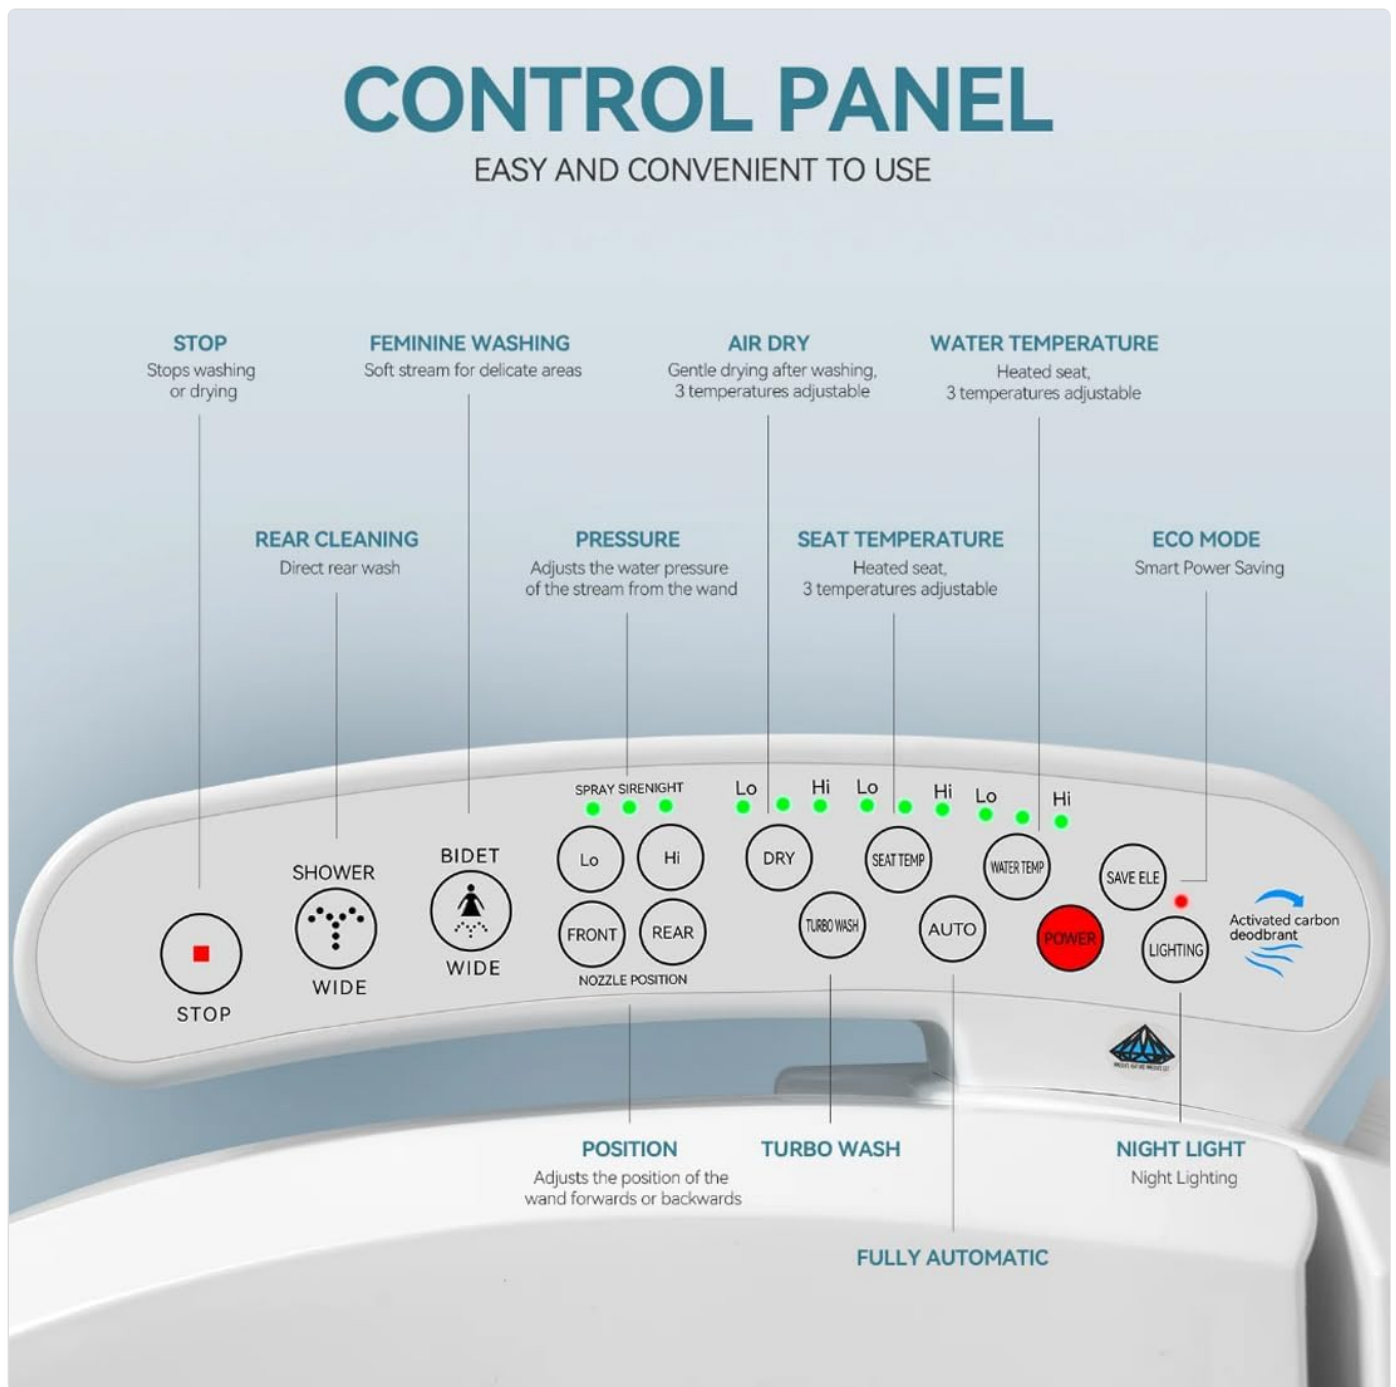


Figure 4: Detailed view of the control panel buttons and their corresponding functions.

- **STOP:** Stops all washing or drying functions.
- **FEMININE WASHING:** Activates a soft stream for delicate areas.
- **REAR CLEANING:** Activates a direct rear wash.
- **AIR DRY:** Initiates warm air drying with 3 adjustable temperature levels.
- **WATER TEMPERATURE:** Adjusts the water temperature for washing (3 settings).
- **PRESSURE (Lo/Hi):** Adjusts the water pressure from the nozzle.
- **SEAT TEMPERATURE:** Adjusts the heated seat temperature (3 settings).
- **ECO MODE (SAVE ELE):** Activates smart power saving mode.
- **NOZZLE POSITION (FRONT/REAR):** Adjusts the position of the wash wand forwards or backwards.
- **TURBO WASH:** Provides a stronger, more focused wash.
- **NIGHT LIGHT (LIGHTING):** Turns the soft night light on/off for visibility in the dark.
- **POWER:** Turns the unit on/off.

## Key Functions in Detail

The bidet seat offers several comfort and hygiene features:

- **Adjustable Water Temperature and Pressure:** Customize your wash experience with multiple settings for water temperature and spray intensity.
- **Heated Seat:** Enjoy comfort, especially in colder environments, with an adjustable heated seat.
- **Warm Air Drying:** Reduce toilet paper usage and enhance hygiene with the integrated warm air dryer.
- **Self-Cleaning Stainless Steel Nozzle:** The nozzle automatically cleans itself before and after each use, ensuring optimal hygiene.
- **Night Light:** A gentle blue LED light illuminates the bowl, providing convenience for nighttime use without disturbing sleep.



Figure 5: Illustration of the heated seat and warm air drying features.



Figure 6: The integrated night light provides subtle illumination.

# Adjustable spray volume and pressure

Better cleaning results




## Female cleaning

Porous and gentle cleansing spray private health care more intimate




## Buttocks washing

Independent cleaning nozzle adjustable water flow, fully clean buttocks

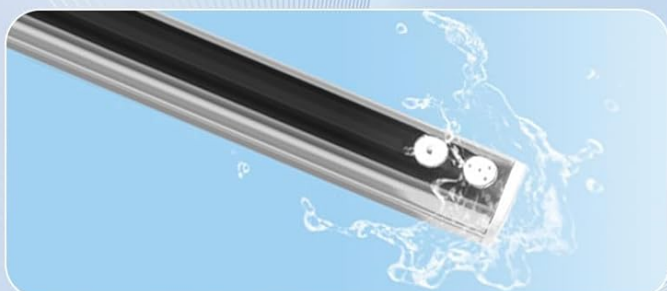

## Self-cleaning nozzle

Automatically clean the nozzle before use, allowing you to clean more at ease

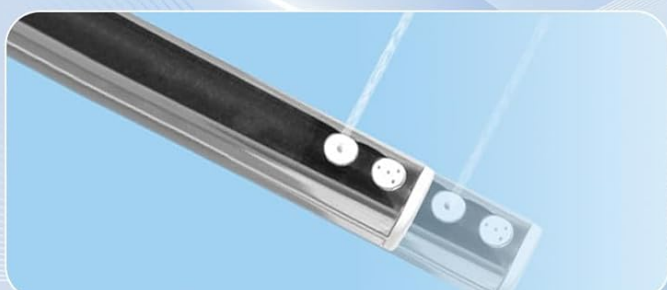

## Mobile massage cleaning

Move back and forth repeatedly to clean, giving you a comfortable SPA experience

Figure 7: Nozzle functions including self-cleaning and various wash modes.

## MAINTENANCE

### Cleaning the Bidet Seat

- **Exterior Cleaning:** Use a soft, damp cloth and a mild, non-abrasive cleaner to wipe down the exterior surfaces of the bidet seat. Avoid harsh chemicals or abrasive pads, as they can damage the finish.
- **Nozzle Cleaning:** The stainless steel nozzle has a self-cleaning function. For additional cleaning, gently pull out the nozzle and wipe it with a soft cloth. Do not use excessive force.
- **Filter Maintenance:** If an inline water filter is used, follow the filter manufacturer's instructions for replacement intervals.

Always unplug the bidet seat from the power outlet and turn off the water supply before performing any cleaning or maintenance.

## TROUBLESHOOTING

If you encounter issues with your LINKLIFE bidet toilet seat, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No water spray or weak spray.	Water supply valve closed; clogged nozzle; low water pressure.	Ensure water supply valve is fully open. Clean the nozzle. Check household water pressure.
Heated seat or warm water not working.	Power not connected; temperature setting too low; unit in ECO mode.	Check power connection. Adjust temperature settings. Disable ECO mode if active. Ensure skin sensor is engaged (user is seated).
Warm air dryer not effective.	Air temperature setting too low; insufficient drying time.	Increase air temperature setting. Allow sufficient time for drying.
Lid does not stay open.	Improper installation or alignment; toilet tank shape interference.	Re-check installation and alignment of the seat on the mounting plate. Ensure there is no interference from the toilet tank or flushing handle.
Unit is completely unresponsive.	No power; circuit breaker tripped.	Check if the power cord is securely plugged in. Check your household's circuit breaker.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	LINKLIFE
Model Number	PW20162
Shape	Round
Color	White
Material	Polypropylene (PP)
Product Dimensions (L x W)	18.9"L x 15.7"W
Item Weight	11 Pounds
Operation Mode	Automatic
Power Source	Corded Electric (120V)
Heated Seat	Yes, 3 temperature settings
Warm Water Wash	Yes, 3 temperature settings
Warm Air Dryer	Yes, 3 temperature levels
Nozzle Type	Self-cleaning Stainless Steel
Night Light	Yes



Figure 8: Product dimensions for the Round model.

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or contact LINKLIFE customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, you may visit the official LINKLIFE store on Amazon: [LINKLIFE Store](#)