

[Manuals.plus](#) /

› [KWW](#) /

› KWW LED Lighted Bathroom Medicine Cabinet (Model MC01B-3034) User Manual

KWW MC01B-3034

KWW LED Lighted Bathroom Medicine Cabinet User Manual

Model: MC01B-3034

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- Always unplug the cabinet from the power source before performing any installation, maintenance, or cleaning.
- Use appropriate safety gear, such as gloves and eye protection, when handling electrical components or glass.
- Ensure the cabinet is securely mounted to a sturdy wall structure to prevent tipping or falling.
- Do not overload the cabinet. The maximum weight capacity is 35 pounds. Overloading may cause structural damage or tipping.
- Keep the cabinet away from direct heat sources and flammable materials.
- If you are unsure about any aspect of installation, electrical wiring, or maintenance, consult a qualified professional electrician or installer.
- If you receive a broken mirror cabinet, do not attempt to install it. Contact the seller immediately for assistance.

2. SETUP AND INSTALLATION

This KWW medicine cabinet is designed for wall-mounted installation and comes pre-assembled for convenience. It can be either plug-in or hardwired.

2.1 Included Components

- 1 x LED Bathroom Mirror Cabinet
- 2 x Glass Partitions (Adjustable Shelves)
- 1 x Installation Iron Sheet
- 1 x Package of Installation Accessories (screws, anchors)
- 1 x Installation Manual (this document)
- 1 x Installation Paper Card (for positioning)

2.2 Installation Steps

1. **Prepare the Wall:** Identify a suitable location on your bathroom wall. Ensure there are no hidden electrical wires or plumbing in the drilling area. The cabinet is designed for wall-mounted installation.
2. **Positioning:** Use the provided installation paper card as a template to mark the drilling points on the wall. The card is equivalent in length and height to the cabinet for accurate placement.
3. **Mounting the Iron Sheet:** Drill holes at the marked points and insert wall anchors. Secure the installation iron sheet to the wall using the provided screws. Ensure it is level and firmly attached.
4. **Mounting the Cabinet:** Carefully lift the cabinet and align its mounting points with the installed iron sheet. Secure the cabinet to the iron sheet according to the instructions in the included installation accessories package.
5. **Electrical Connection:** The cabinet can be connected via a standard plug or hardwired by a qualified electrician. Ensure all electrical connections comply with local codes. The unit features a reserved wire groove for neat wiring.
6. **Install Glass Shelves:** Insert the two adjustable glass partitions into the desired slots within the cabinet.

Produktdatenblatt			
DELEGIERTE VERORDNUNG (EU) 2019/2015 DER KOMMISSION zur Energieverbrauchskennzeichnung von Lichtquellen			
Name oder Handelsmarke des Lieferanten: KWM			
Anschrift des Lieferanten: eVatm - der Consulting GmbH, Bismarckstr. 30, 60325 Frankfurt am Main, DE			
Modellkennung: KWM2031			
Art der Lichtquelle:			
Verwendete Lichttechnologie:	LED	Ungeündelt oder gebündelt:	NDLS
Art des Sockels der Lichtquelle (oder andere mechanische Schnittstelle)	N/A		
Netzspannung/Nicht direkt an die Netzspannung angeschlossen:	MIS	Vernetzte Lichtquelle (CLS):	Nein
Farblich abstimmbare Lichtquelle:	Nein	Hülle:	-
Lichtquelle mit hoher Leuchtdichte:	Nein		
Blendschutzschild:	Nein	Dimmbar:	Nein
Produktparameter			
Parameter	Wert	Parameter	Wert
Allgemeine Produktparameter:			
Energieverbrauch im Ein-Zustand (kWh/1000 h), auf die nächstliegende ganze Zahl gerundet	50	Energieeffizienzklasse	F
Nutzlichtstrom (Lumen) mit Angabe, ob sich der Wert auf den Lichtstrom in einer Kugel (360°), in einem breiten Kegel (120°) oder in einem schmalen Kegel (90°) bezieht	5 050 in Kugel (360°)	ähnliche Farbtemperatur, gerundet auf die nächstliegenden 100 K, oder Spanne der einstellbaren ähnlichen Farbtemperaturen, gerundet auf die nächstliegenden 100 K	5 000
Leistungsaufnahme im Ein-Zustand (P _{in}) in W	50,0	Leistungsaufnahme im Bereitschaftszustand (P _{by}) in W, auf die zweite Dezimalstelle gerundet	0,00
Leistungsaufnahme im vernetzten Bereitschaftsbetrieb (P _{net})	-	Farbwiedergabeindex, auf die	90
für CLS in W, auf die zweite Dezimalstelle gerundet		nächstliegende ganze Zahl gerundet, oder Spanne der einstellbaren CR _a -Werte	
äußere Abmessungen, ggf. ohne separates Betriebsgerät, Beleuchtungssteuerungsteile und Nicht-Beleuchtungsteile (Millimeter)	Höhe: 800 Breite: 800 Tiefe: 30	Spektrale Strahlungsverteilung, im Bereich 250 nm bis 750 nm bei Vollleistung	Siehe Bild auf letzter Seite
Angabe zu gleichwertigen Leistungsaufnahmen	-	Falls ja, gleichwertige Leistungsaufnahme (W)	-
		Farbwertanteile (x und y)	0,346 0,359
Parameter für LED- und OLED-Lichtquellen:			
Wert des R9-Farbwiedergabeindex	80	Lebensdauerfaktor	1,00
Lichtstromerhalt	0,96		
Parameter für LED- und OLED-Netzspannungslichtquellen:			
Verschiebungsfaktor (cos φ1)	0,90	Farbkonsistenz in MacAdam-Ellipsen	6
Angabe, dass eine LED-Lichtquelle eine Leuchtstofflichtquelle ohne eingebautes Vorschaltgerät mit einer bestimmten Leistungsaufnahme ersetzt.	-	Falls ja, Angabe zur ersetzten Leistungsaufnahme (W)	-
Flimmer-Messgröße (Pst LM)	1,0	Messgröße für Stroboskop-Effekte (SVM)	0,4

[1] „-“: nicht zutreffend;

[2] „-“: nicht zutreffend;

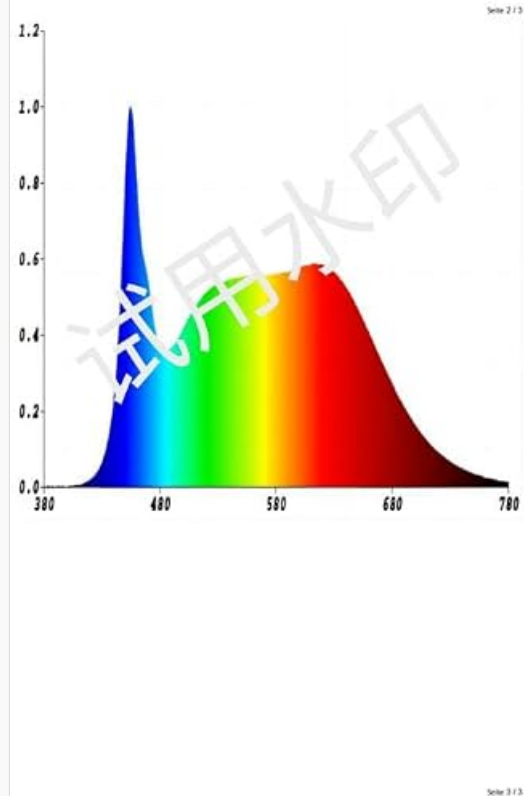


Figure 2.2.1: Easy Installation Process with Positioning Card



Figure 2.2.2: Adjustable Shelves and Soft-Close Hinges

3. OPERATING INSTRUCTIONS

The KWW LED Lighted Bathroom Medicine Cabinet features intuitive touch controls for its various functions.

3.1 Lighting Control

- **Power On/Off:** Tap the light touch button on the mirror surface to turn the LED lighting on or off.
- **Color Temperature Adjustment:** Double-click the light touch button to cycle through three color temperatures: 3000K (warm light), 4000K (natural light), and 6500K (white light).
- **Brightness Dimming:** Long-press the light touch button to adjust the brightness from 10% to 100%. Release when the desired brightness is reached.
- **Memory Function:** The cabinet will remember your last selected color temperature and brightness settings when


powered off and on.



Figure 3.1.1: Lighting Adjustment Controls


3.2 Defogger Function

- **Activation:** The defogger works in conjunction with the lighting. You can also click the dedicated defogging touch button on the mirror to activate or deactivate the defogging function independently.
- The defogger helps maintain a clear mirror surface in humid bathroom conditions.

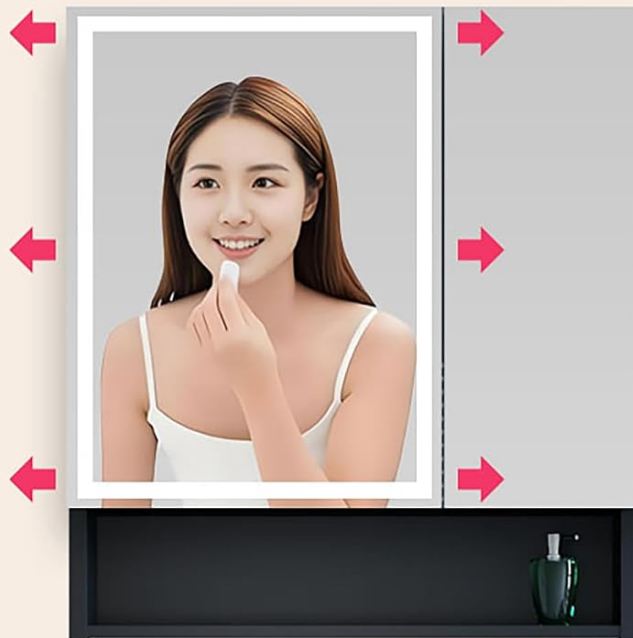

Ours

The gap in the cupboard door does not interrupt the reflection in the mirror

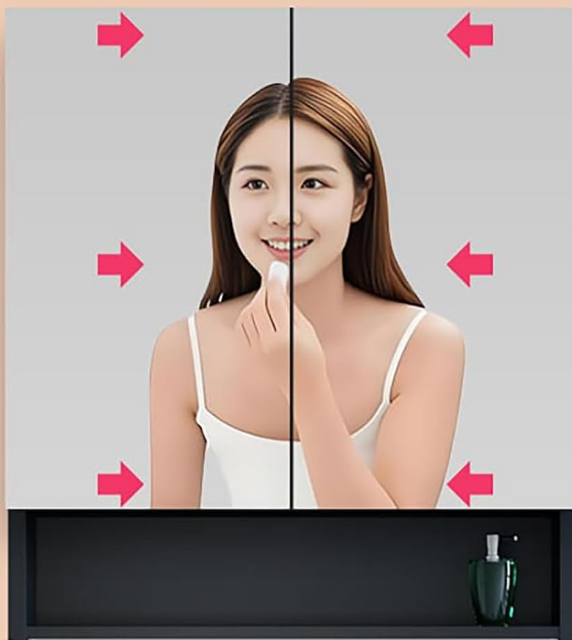

Others

The gap in the cupboard door breaks up the reflection in the mirror into fragments

Figure 3.2.1: Anti-Fog Function in Use

3.3 Integrated Sockets and USB Ports

- The interior of the cabinet includes electrical sockets and USB ports for convenient charging of electronic devices such as electric toothbrushes or shavers.
- These ports are active when the cabinet is powered.

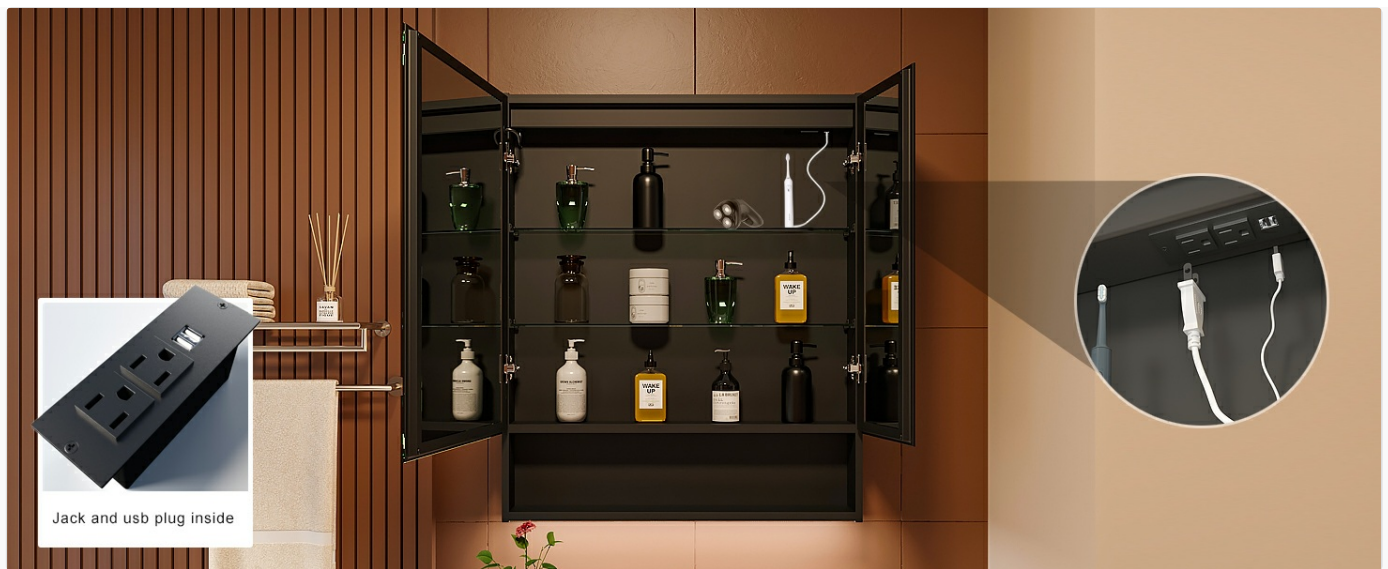


Figure 3.3.1: Internal Sockets and USB Ports

3.4 Adjustable Shelves

- The cabinet includes two glass partitions that can be adjusted to different heights to accommodate various item sizes.

4. MAINTENANCE

4.1 Cleaning

- To clean the cabinet, including the mirror surfaces and interior, wipe with a soft, damp cloth.
- Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish or mirror coating.
- Ensure the cabinet is unplugged before cleaning, especially near electrical components.

4.2 Hinge Adjustment

- If the cabinet doors appear misaligned, this can often be corrected by adjusting the hinges. Minor misalignments can occur due to transportation or settling.
- Use a screwdriver to make small adjustments to the hinge screws. There are typically screws for adjusting the door's position horizontally (left/right), vertically (up/down), and in depth (in/out).
- Adjust one screw at a time and check the door alignment until satisfactory.



Figure 4.2.1: Adjusting Cabinet Door Hinges

5. TROUBLESHOOTING

- **Cabinet Doors Not Aligned:** This is typically caused by vibration during transportation. Adjust the hinges as described in Section 4.2. This is not considered a malfunction.
- **Broken Mirror Cabinet:** If the cabinet arrives broken, do not attempt to repair or install it. Contact KWW customer support immediately for resolution.
- **Lighting or Defogger Not Working:** Ensure the cabinet is properly connected to a power source. Check if the power outlet is functional. If issues persist, contact customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	KWW
Model Name	MC01B-3034
Product Dimensions	5"D x 30"W x 34"H
Material	Aluminum, Glass
Color	2 Door-30*34 (Black frame)
Weight Capacity	35 Pounds
Number of Doors	2

Number of Shelves	2 (Adjustable Tempered Glass)
Lighting Features	3 Color Temperature (3000K-4000K-6500K), Stepless Dimming (10%-100%), Memory Function, Interior Sensor Light, Additional bottom light source
Defogger Function	Yes, Anti-fog Function
Electrical Features	2 Sockets + 2 USB Ports (internal), ETL Listed, UL Certified Electric Driver, Plug-in or Hardwired
Hinges	Soft Close Hinges
Installation Type	Wall-mounted
Product Care	Wipe with Damp Cloth
GTIN	749838298325

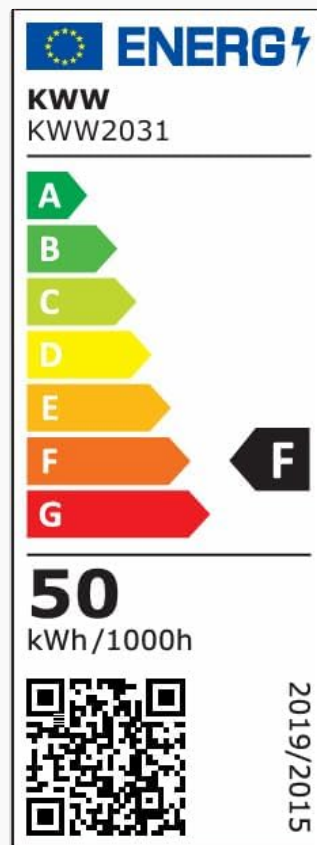


Figure 6.1.1: Energy Label (KWW2031)

For more details, visit the EPREL database: <https://eprel.ec.europa.eu/qr/1537883>

7. WARRANTY AND SUPPORT

- **1-Year Warranty:** This product comes with a one-year warranty. Free replacement of parts is available for one year from the date of purchase.

- **30-Day Return Policy:** Free returns are available within 30 days of purchase.
- **Customer Support:** For any questions about the product, installation, or warranty claims, please contact KWW customer support via Amazon.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D9Y48D8K>

More documents and user manuals: <https://manuals.plus/>