

Nimble Nimble Device

Nimble Device User Manual

Model: Nimble Device

Brand: Nimble

INTRODUCTION

The Nimble Device is the world's first smart nail polish device, designed to scan, paint, and dry your nails at home using advanced AI technology and robotics. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Nimble Device to ensure optimal performance and a seamless at-home manicure experience.



The Nimble Device, a compact white smart nail polish machine, shown with a black polish capsule holder and a smartphone displaying the Nimble app interface. This image displays the Nimble Device, a white, cube-shaped automated nail polish machine. It features an opening for hand insertion and control buttons on top. A separate black polish capsule holder is visible in the foreground, alongside a smartphone screen showing the Nimble app, which guides users through the manicure process.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using the Nimble Device. Failure to follow these instructions may result in injury or damage to the device.

- Do not use the device while sleeping or unattended.
- Keep the device away from flammable materials.
- Always unplug the device when not in use or before cleaning.
- The Nimble Device is intended for use on clean, natural nails only. Do not use with artificial nails such as acrylics or gel extensions.
- This device is recommended for users aged 16 and above.

PRODUCT OVERVIEW

Components

The Nimble system consists of the main device, a mobile application, and specialized polish capsules.



This diagram highlights the core components of the Nimble system. It features the main Nimble Device, a smartphone representing the accompanying mobile application, and several small polish capsules, illustrating how these elements work together for automated nail care.

- **Nimble Device:** The primary unit that scans, paints, and dries your nails.
- **Nimble Mobile App:** A companion application for your smartphone that guides you through the manicure process, allows shade selection, and tracks usage.
- **Polish Capsules:** Single-use capsules containing base coat, color polish, and top coat.

SETUP GUIDE

1. Unpacking

1. Carefully remove all components from the packaging.
2. Ensure all parts are present: Nimble Device, power adapter, and any included polish capsules.
3. Place the device on a stable, flat surface with adequate clearance around it.

2. Initial Power On

1. Connect the power adapter to the device and plug it into a wall outlet.
2. Press the power button on the device. The indicator lights will illuminate.

3. App Installation and Pairing

1. Download the Nimble app from your smartphone's app store (iOS or Android).
2. Open the app and follow the on-screen instructions to create an account or log in.
3. The app will guide you through the process of pairing your device via Bluetooth. Ensure Bluetooth is enabled on your smartphone.
4. It is highly recommended to pay close attention to the app's guidance during your first practice manicure to familiarize yourself with the process and avoid wasting polish capsules.

easy as 1-2-3

01



Insert base, color
and top coat
capsules

02



Insert your hand
into the Nimble
& press start

03



Nimble scans,
paints & dries
your manicure

This visual guide illustrates the three main steps of using the Nimble Device. The first image shows a hand inserting a pink polish capsule into the device. The second image shows a hand being placed into the device's opening, with a finger pressing the start button. The third image depicts a woman's hand with freshly painted nails, indicating the device's scanning, painting, and drying functions.

OPERATING INSTRUCTIONS

1. Preparing for a Manicure

- Ensure your nails are clean, dry, and free of any old polish.
- Trim and file your nails to your desired length and shape. For best results, allow nails to grow slightly beyond the fingertip.
- Select your desired polish capsules (base, color, top coat) based on the manicure type you wish to perform.


2. Performing a Manicure

1. **Insert Polish Capsules:** Open the capsule compartment on the device and insert the required polish capsules. Ensure they are securely seated.



EXPRESS MANICURE

Two Polish Coats
20-25 minutes

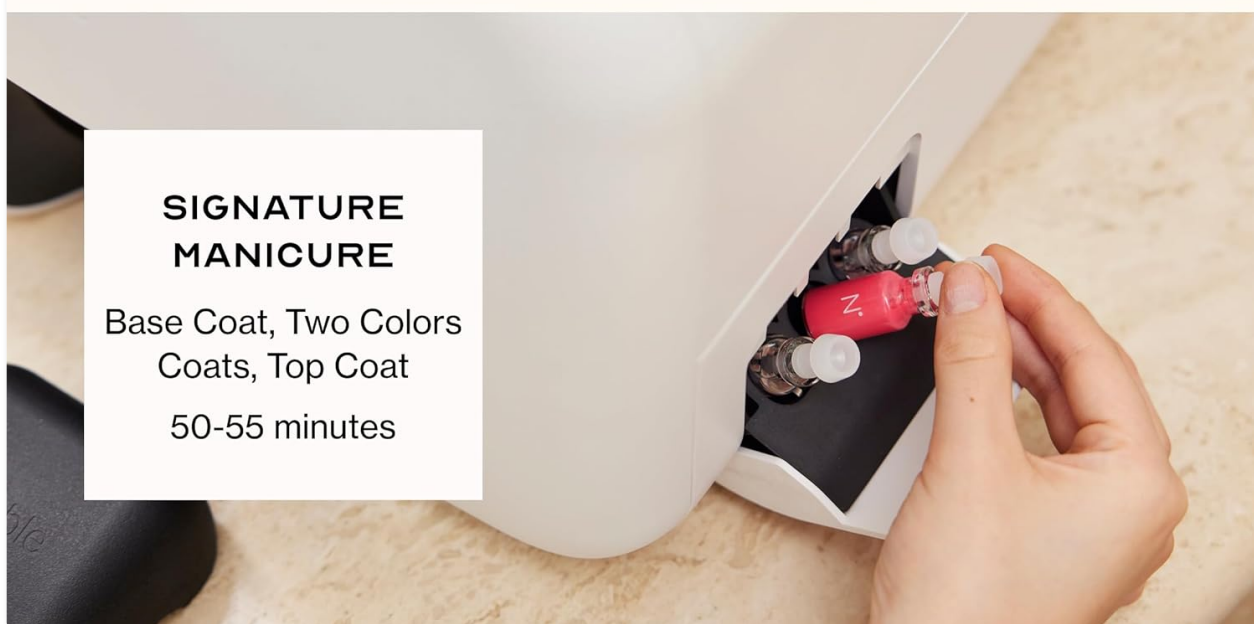

SIGNATURE MANICURE

Base Coat, Two Colors
Coats, Top Coat
50-55 minutes

The top image shows a hand inserting a single clear polish capsule for an 'Express Manicure', which involves two polish coats and takes 20-25 minutes. The bottom image shows a hand inserting multiple colored polish capsules for a 'Signature Manicure', which includes a base coat, two color coats, and a top coat, taking 50-55 minutes.

2. **Position Hand:** Place your hand into the device's opening, ensuring your fingers are properly aligned as indicated by the internal guides.



world's first smart nail polish device

Nimble uses
patented robotics
+ AI to scan, paint
and dry your nails
in one game-
changing device.

This image shows a user's hand positioned inside the Nimble Device, ready for the automated nail painting process. The device's design allows for comfortable hand placement during operation.

3. **Start Manicure:** Follow the prompts on the Nimble app to begin the manicure process. The device will scan your nails, apply polish layers, and dry each layer.
4. **Manicure Types:**
 - **Express Manicure:** Typically involves two polish coats and takes approximately 20-25 minutes.
 - **Signature Manicure:** Includes a base coat, two color coats, and a top coat, taking approximately 50-55 minutes.
5. **Remove Hand:** Once the manicure is complete and the device indicates drying is finished, carefully remove your hand.

MAINTENANCE

1. Cleaning the Device

- Always unplug the device before cleaning.
- Use a soft, damp cloth to wipe down the exterior of the device.

- If polish residue is present inside the hand chamber, gently wipe it with a cotton swab lightly dampened with nail polish remover (non-acetone recommended to protect plastics). Avoid excessive liquid.
- Do not submerge the device in water or any other liquid.

2. Polish Capsule Storage

- Store unused polish capsules in a cool, dry place away from direct sunlight.
- Note that polish capsules have an expiration period, typically around 10 days after opening. Plan your manicures accordingly to avoid waste.

TROUBLESHOOTING

If you encounter issues with your Nimble Device, refer to the following common solutions:

- **Polish on Skin:** Ensure your hand is positioned correctly within the device and that your nails are not excessively short. The device's AI is optimized for nails that extend slightly beyond the fingertip. If polish gets on the skin, it can typically be cleaned with a cotton swab and nail polish remover.
- **Polish Not Drying Completely:** Ensure you are allowing the device to complete its full drying cycle for each layer. If nails still feel wet, allow additional air drying time after removing your hand. Environmental factors like humidity can affect drying.
- **Device Not Recognizing Hand/Nails:** Verify that your hand is placed firmly and correctly in the designated area. Ensure your nails are clean and free of debris. The device's high-speed cameras and AI require clear visibility for accurate scanning.
- **App Connectivity Issues:** Check your smartphone's Bluetooth settings to ensure it is enabled and connected to the Nimble Device. Restarting both the app and the device can often resolve minor connectivity problems.
- **Device Not Powering On:** Confirm the power adapter is securely plugged into both the device and a working electrical outlet.
- **General Performance Issues:** Ensure your device's software is up to date via the Nimble app. Regular software upgrades are released to improve performance.

TECHNICAL SPECIFICATIONS



sized for the home

This image provides a clear visual representation of the Nimble Device's physical dimensions, indicating its length, width, and height, which are 13.5 inches, 12.8 inches, and 12.5 inches respectively. This helps users understand the space required for the device.

Feature	Detail
Model Name	Nimble Device
Brand	Nimble
ASIN	B0DBR83VD2
UPC	850043915348
Power Source	Battery Powered
Dimensions (Approx.)	Length: 13.5 inches, Width: 12.8 inches, Height: 12.5 inches
Manufacturer	Nimble Beauty
Date First Available	March 24, 2025

SUPPORT AND WARRANTY INFORMATION







For technical assistance, product inquiries, or support, please refer to the Nimble official website or contact their customer service team. Nimble is committed to providing excellent support for its users.

Specific warranty details are typically provided with your purchase documentation or can be found on the official Nimble website. Please retain your proof of purchase for warranty claims.

Legal Disclaimer

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is not a dietary supplement.

Related Documents - Nimble Device

	<p>Nimble Pivot 3-in-1 Wireless Charger NB-WP-3N1 User Guide & Safety Information</p> <p>Official user guide and safety instructions for the Nimble Pivot 3-in-1 Wireless Charger (Model NB-WP-3N1). Learn how to use and safely operate your wireless charging device.</p>
	<p>Nimble CHAMP Portable Charger 10,000mAh: User Guide and Specifications</p> <p>Comprehensive guide to the Nimble CHAMP Portable Charger (10,000mAh), covering LED indicators, charging modes, technical specifications, and important care instructions for optimal use.</p>
	<p>Monster Design Exemplars: Goblins and Troglodytes for Nimble RPG</p> <p>A guide to designing and running Goblin and Troglodyte encounters in the Nimble RPG system, including lore, stats, and adventure seeds.</p>
	<p>Nimble Valet 3-in-1 Wireless Charger - User Manual and Safety Instructions</p> <p>Comprehensive guide for the Nimble Valet 3-in-1 Wireless Charger (Model: NB-WP-3N1VLT), covering setup, charging instructions, important safety precautions, compliance information, and technical specifications.</p>
	<p>Nimble Apollo Fast Wireless Charger: User Guide and Specifications</p> <p>Learn about the Nimble Apollo Fast Wireless Charger, including its input/output specifications, magnetic alignment, LED indicators, usage instructions, warranty, and FCC compliance.</p>
	<p>Nimble NB-WP-3N1TRY Wireless Charger User Manual and Safety Instructions</p> <p>Comprehensive user manual and safety instructions for the Nimble NB-WP-3N1TRY 3-in-1 Wireless Charger, covering charging, safety precautions, legal disclaimers, and compliance information.</p>