

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [BEYYON](#) /

> [BEYYON Rechargeable Electric Hand Warmer \(Model PG02\) User Manual](#)

## BEYYON PG02

# BEYYON Rechargeable Electric Hand Warmer (Model PG02) User Manual

Model: PG02

## INTRODUCTION

---

Thank you for choosing the BEYYON Rechargeable Electric Hand Warmer. This device is designed to provide portable warmth with its magnetic 2-in-1 design, LED digital display, and four adjustable heat levels. This manual provides essential information for safe and effective use of your hand warmers.



Image: Two BEYYON rechargeable hand warmers, Aurora(Mini) color, displaying their LED screens and magnetic connection points.

## PACKAGE CONTENTS

---

Please verify that all items listed below are included in your package:

- 2 x Hand Warmers
- 2 x Lanyards
- 1 x Dual Head USB-C Charging Cable
- 1 x User Manual (this document)
- 1 x Product Box

# Package Contents:

2 x Hand Warmer

1 x Dual Head USB-C

2 x Lanyard

Charging Cable

1 x User Manual

1 x Product Box



Image: The complete package contents of the BEYYON hand warmers, neatly arranged.

## PRODUCT OVERVIEW

---

### Magnetic 2-in-1 Design

The BEYYON hand warmers feature a magnetic design, allowing them to be used as a single unit or separated into two individual warmers. This provides flexibility for warming both hands or sharing warmth.



Image: The magnetic feature of the hand warmers, demonstrating how they can snap together or be used separately.

### LED Digital Display

Each hand warmer is equipped with an LED digital display that shows the current battery percentage and the selected heat level (L1-L4). This allows for easy monitoring of the device's status.

# HD Digital Display

## Instant Status Overview



Image: A detailed view of the LED display, indicating battery level and the main control button.

### Rapid Heating and 4 Heat Levels

The hand warmers heat up in approximately 2 seconds. There are four adjustable heat levels to suit your preference:

- **L1:** Up to 108°F (42°C)
- **L2:** Up to 116°F (46.6°C)
- **L3:** Up to 124°F (51°C)
- **L4:** Up to 132°F (55.5°C)

# 2S Fast Heating



Image: Visual representation of the quick heating capability and the temperature ranges for each of the four heat settings.

## SETUP

### Initial Charging

Before first use, fully charge both hand warmers. Connect the dual-head USB-C charging cable to a compatible USB power adapter (not included) and then to the USB-C charging ports on each hand warmer. The LED display will show charging progress. A full charge takes approximately 3 hours.



Image: Illustration of the hand warmers connected to a power source for simultaneous charging.

## OPERATING INSTRUCTIONS

### Power On/Off

1. To turn on: **Long press** the power button (orange button) for approximately 3 seconds. The LED display will illuminate, showing the battery percentage and default heat level.
2. To turn off: **Long press** the power button again for approximately 3 seconds. The LED display will turn off.

### Adjusting Heat Levels

Once the hand warmer is powered on:

- **Short press** the power button to cycle through the four heat levels (L1, L2, L3, L4).
- The selected heat level will be displayed on the LED screen.

### Using Individually or Together

The hand warmers can be used as a single magnetic unit or separated for individual use. Each unit operates independently once separated.

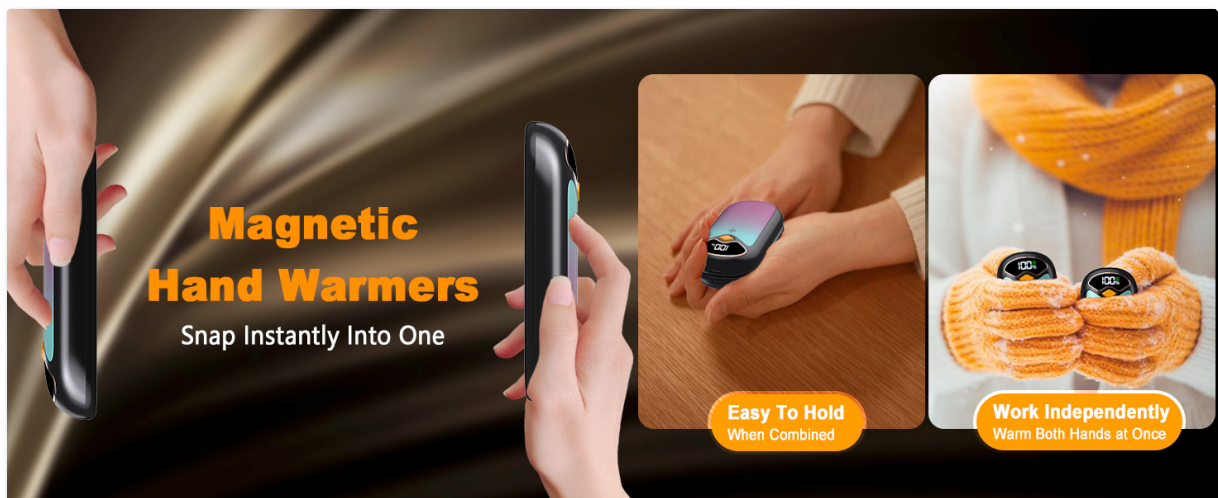


Image: A clear illustration of the hand warmer's controls and ports for simple operation.

## CHARGING

### Charging Process

To charge your hand warmers:

1. Connect the included dual-head USB-C charging cable to a USB power source (e.g., wall adapter, power bank, computer USB port).
2. Insert the two USB-C ends into the charging ports on each hand warmer.
3. The LED display will show a charging icon and the increasing battery percentage.
4. Once fully charged, the display will show 100% and the charging icon may disappear or change.

A full charge for both units takes approximately 3 hours.

## Battery Capacity

Each hand warmer has a battery capacity of 4000 Milliamp Hours (mAh).

## SAFETY INFORMATION

---

Please read and follow these safety guidelines to prevent injury or damage to the device:

- Do not use the hand warmers while they are charging.
- Keep the device away from water and other liquids.
- Do not disassemble, modify, or attempt to repair the device.
- Avoid exposing the device to extreme temperatures (above 140°F/60°C or below 32°F/0°C).
- Do not puncture, drop, or apply excessive force to the device.
- This hand warmer does not have an output function and cannot be used to charge other devices.
- The device includes built-in protections against short circuit, overcharge, overcurrent, and overpower.

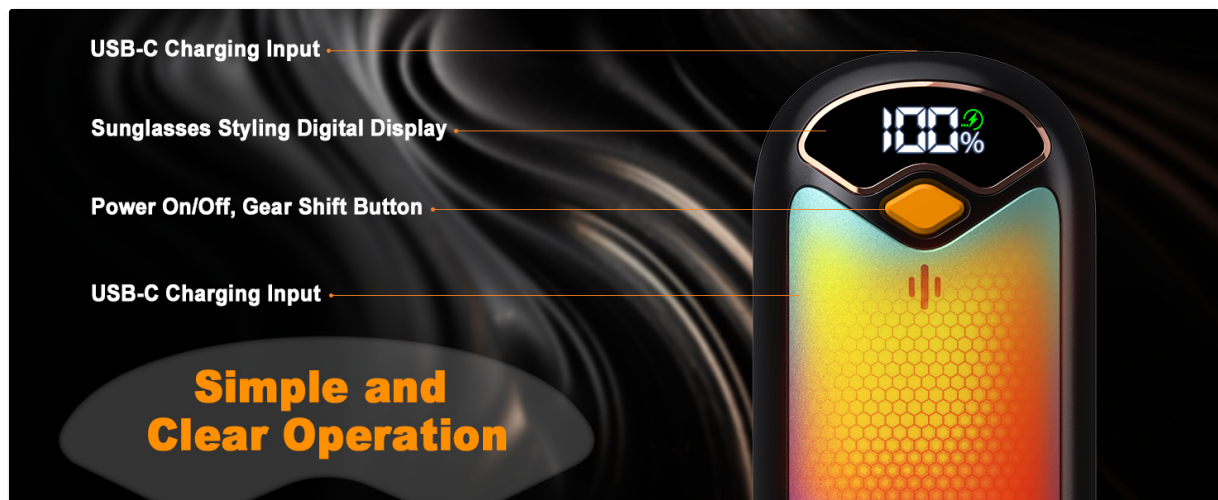


Image: Visual representation of the multiple safety protections integrated into the hand warmers.

## MAINTENANCE

---

To ensure the longevity and proper functioning of your hand warmers:

- **Cleaning:** Wipe the exterior of the hand warmers with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use for extended periods, store the hand warmers in a cool, dry place. It is recommended to charge them to about 50% before long-term storage to preserve battery health.

## TROUBLESHOOTING

---

If you encounter any issues with your BEYYON hand warmers, please refer to the following common problems and solutions:

- **Device not turning on:** Ensure the device is sufficiently charged. Long press the power button for 3 seconds to activate.
- **Device not heating:** Check if the device is turned on and a heat level is selected. If the battery is low, the heating function may be limited. Recharge the device.
- **Device not charging:** Verify that the USB-C cable is securely connected to both the hand warmer and the power source. Try a different USB power adapter or cable. Ensure the power source is active.
- **LED display not working:** If the device is on and heating but the display is blank, try turning the device off and on again. If the issue persists, contact customer support.

If these steps do not resolve the issue, please contact BEYYON customer support for further assistance.

## SPECIFICATIONS

<b>Brand</b>	BEYYON
<b>Model Name</b>	PG02
<b>Color</b>	Aurora(Mini)
<b>Material</b>	PC + Aluminum
<b>Battery Capacity</b>	4000 Milliamp Hours (per unit)
<b>Charging Time</b>	Approx. 3 hours (for both units simultaneously)
<b>Heating Levels</b>	4 Levels (L1: 108°F, L2: 116°F, L3: 124°F, L4: 132°F)
<b>Item Package Dimensions</b>	5.55 x 4.65 x 0.75 inches
<b>Manufacturer</b>	Guangdong Lemark Electronics Technology Co.,Ltd

## WARRANTY AND SUPPORT

### Warranty Information

This BEYYON product comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

### Customer Support

For technical support, warranty claims, or any questions regarding your BEYYON Rechargeable Electric Hand Warmers, please contact the seller, Beyyon, through your purchase platform or their official support channels. Please have your purchase details and model number (PG02) ready when contacting support.