



Manuals.plus /

- › E ECSEM /
- › E ECSEM Magnetic USB Charging Cable User Manual for VeryFit Smartwatches

E ECSEM IDW26, IDW25, IDW21, IDW19, IDW17, IDW16, IDW15, IDW13

E ECSEM Magnetic USB Charging Cable User Manual

For VeryFit IDW26, IDW25, IDW21, IDW19, IDW17, IDW16, IDW15, IDW13 Smartwatches

1. INTRODUCTION

Thank you for choosing the E ECSEM Magnetic USB Charging Cable. This product is designed to provide a reliable and efficient charging solution for your VeryFit smartwatch. This manual will guide you through the proper use and care of your new charging cable to ensure optimal performance and longevity.



Image: Two E ECSEM magnetic USB charging cables, illustrating the magnetic contact points and the USB-A connector.

2. SPECIFICATIONS

The E ECSEM Magnetic USB Charging Cable is engineered with specific parameters to ensure safe and effective charging for your compatible VeryFit smartwatch models.

- **Input:** 5V / 0.5-1A
- **Cable Length:** Approximately 100 cm (3.3 ft)
- **Connector Type:** USB Type-A (for power source), Magnetic 2-pin (for smartwatch)
- **Power Protection:** Built-in over-voltage and over-current protection
- **Quantity:** 2 charging cables per pack
- **Special Features:** Fast charge capability, stable performance, gold-plated magnetic contacts, built-in smart chip for extended watch life.



Image: Detailed view of the magnetic charging interface and the USB-A connector of the cable.


3. SETUP

Setting up your E ECSEM charging cable is straightforward. Follow these steps to prepare for charging:

1. **Unpack:** Remove the charging cable from its packaging.
2. **Identify Power Source:** Locate a suitable USB power source. This can be a USB port on a PC, laptop, power bank, or a standard USB wall adapter (ensure it provides 5V output).
3. **Connect to Power:** Insert the USB Type-A end of the charging cable into the chosen USB power source.
4. **Prepare Smartwatch:** Ensure your VeryFit smartwatch is clean and dry, especially around the charging contacts.

Handy USB Charging

Connect to USB ports on PC, laptop and any USB-enabled devices for stable charging.

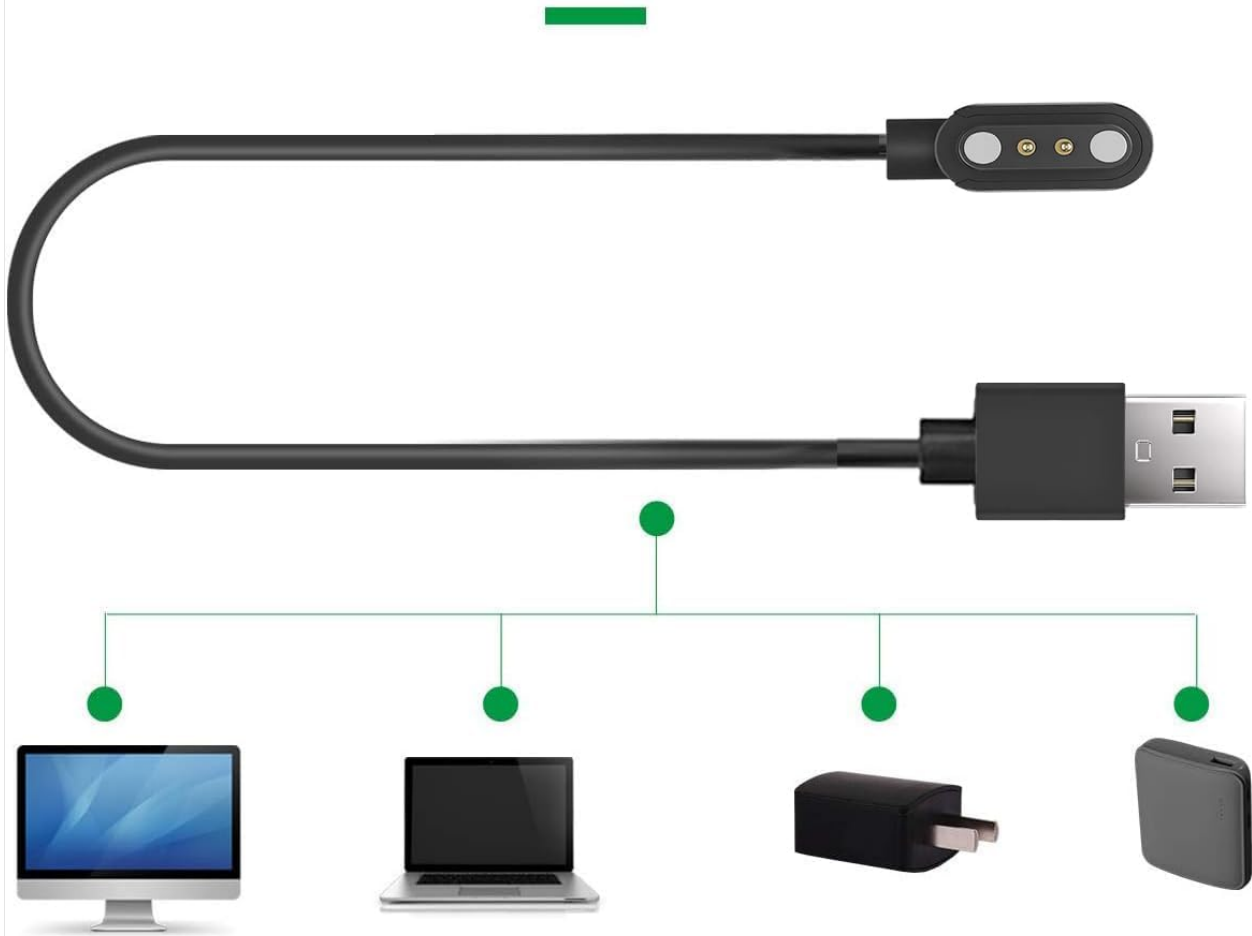

Note: Please do not use fast charging adaptor.

Image: Illustration of connecting the USB charging cable to different compatible power sources.

4. OPERATING

Once the cable is connected to a power source, you can begin charging your smartwatch:

1. **Align Smartwatch:** Bring the magnetic charging end of the cable close to the charging contacts on the back of your VeryFit smartwatch.
2. **Magnetic Connection:** The magnetic contacts will automatically align and snap into place, securing the connection.
3. **Verify Charging:** Your smartwatch display should indicate that it is charging. If not, gently adjust the position of the magnetic connector until charging begins.
4. **Charging Time:** Limit recharging time to approximately 80 minutes for optimal battery health. It is recommended to charge your watch before the battery is completely depleted.
5. **Disconnect:** Once charging is complete, gently pull the magnetic connector away from the smartwatch. Disconnect the USB end from the power source.

5. MAINTENANCE


Proper maintenance will extend the life of your E ECSEM charging cable and ensure consistent performance:

- **Clean Contacts:** Periodically clean the magnetic charging contacts on both the cable and your smartwatch with a dry, soft cloth to remove any dust or debris.
- **Avoid Bending:** While the cable features a reinforced design for durability, avoid sharp bends or excessive pulling, especially near the connectors.
- **Proper Storage:** When not in use, store the cable in a clean, dry place, away from extreme temperatures and direct sunlight.
- **Use Recommended Power Source:** Always connect to a USB power source on a PC, Mac, laptop, or notebook for more stable voltage. Avoid using cell phone fast chargers, as they may provide unstable voltage or excessive current.



Image: Visual representation of the cable's reinforced design, highlighting its bending resistance.

Multiple Protection

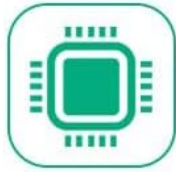

Smart Chip



Light And Portable



Stable Charging



Safe And Efficient



Image: Overview of the charger's safety and efficiency features, such as smart chip and stable charging.

Last 6X Longer



Image: Demonstration of the cable's durability and robust construction.

6. TROUBLESHOOTING

If you encounter issues while using your E ECSEM charging cable, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Smartwatch not charging	Loose connection, dirty contacts, incompatible power source, faulty cable/watch.	Ensure magnetic contacts are fully aligned. Clean contacts on both cable and watch. Try a different USB port or power source (PC/laptop recommended). If problem persists, contact support.
Slow charging	Low power output from USB port, using a non-standard adapter.	Use a USB port on a computer or a standard 5V/1A USB wall adapter. Avoid fast charging adapters designed for phones.
Cable feels warm during charging	Normal operation, or excessive current.	A slight warmth is normal. If the cable becomes excessively hot, immediately disconnect it and contact support. Ensure you are using a stable 5V power source.

7. WARRANTY AND SUPPORT

E ECSEM stands behind the quality of its products. Your Magnetic USB Charging Cable comes with the following warranty and support:

- **Money-Back Guarantee:** 30 days money-back guarantee from the date of purchase.
- **Warranty Period:** 12-month warranty covering manufacturing defects.

If you experience any issues with your charger or have questions, please do not hesitate to contact us. We are committed to providing excellent customer service and will respond to your inquiries within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official E ECSEM store on Amazon.