

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Keonjinn](#) /
- › [Keonjinn 20x26 Inch LED Lighted Medicine Cabinet Mirror User Manual](#)

## Keonjinn 20x26 In

# Keonjinn LED Lighted Medicine Cabinet Mirror

MODEL: 20x26 INCH

### Introduction

This manual provides essential information for the safe installation, operation, and maintenance of your Keonjinn 20x26 Inch LED Lighted Medicine Cabinet Mirror. Please read these instructions thoroughly before installation and retain them for future reference.

### Important Safety Information

**WARNING: This cabinet is intended for wall mounting only. Do not install in a location where it may come into contact with water or be exposed to excessive humidity. Always unplug the cabinet when not in use and before cleaning. Use caution when handling the cabinet, as it may be heavy and awkward to maneuver. Always use appropriate safety gear when installing the cabinet to prevent injury. Do not exceed the weight limit of the cabinet when storing items. Always follow the manufacturer's instructions for installation, use, and maintenance.**

- Ensure the power supply is disconnected before any installation or maintenance.
- Handle glass components with care to prevent breakage and injury.
- Verify wall structure can support the cabinet's weight.
- Keep electrical components away from water.

### Product Features

- **Integrated LED Lighting:** Adjustable lights on the cabinet door and side for optimal illumination.
- **Adjustable Storage:** Two tempered glass shelves can be customized to your preferred height.
- **Fog-Free Functionality:** Fast defogging feature for clear visibility after a shower.
- **Customizable Lighting:** Three color temperature options (3000K, 4500K, 6500K) and stepless dimming.
- **Smart Memory Function:** Retains previous lighting settings.
- **Copper-Free Mirrors:** Distortion-free reflection on both sides of the cabinet door.
- **Ergonomic Design:** Door frame groove for easy opening and soft-closing hinges to prevent slamming.

- **Durable Construction:** Sturdy aluminum frame, water-proof, and rust-resistant.
- **UL-Listed:** Ensures stable and safe illumination.

## Package Contents

Please verify that all components are present and undamaged before beginning installation. Refer to your product packaging for a complete and detailed list of included items.

- Keonjinn LED Lighted Medicine Cabinet Mirror
- Adjustable Tempered Glass Shelves (2)
- French Cleat Mounting Hardware
- Installation Instructions (Paper)

## Installation Instructions

The Keonjinn medicine cabinet is designed for wall-mount installation. A French cleat system is provided for secure mounting. For detailed visual guidance, please refer to the included paper instructions and the official installation video.

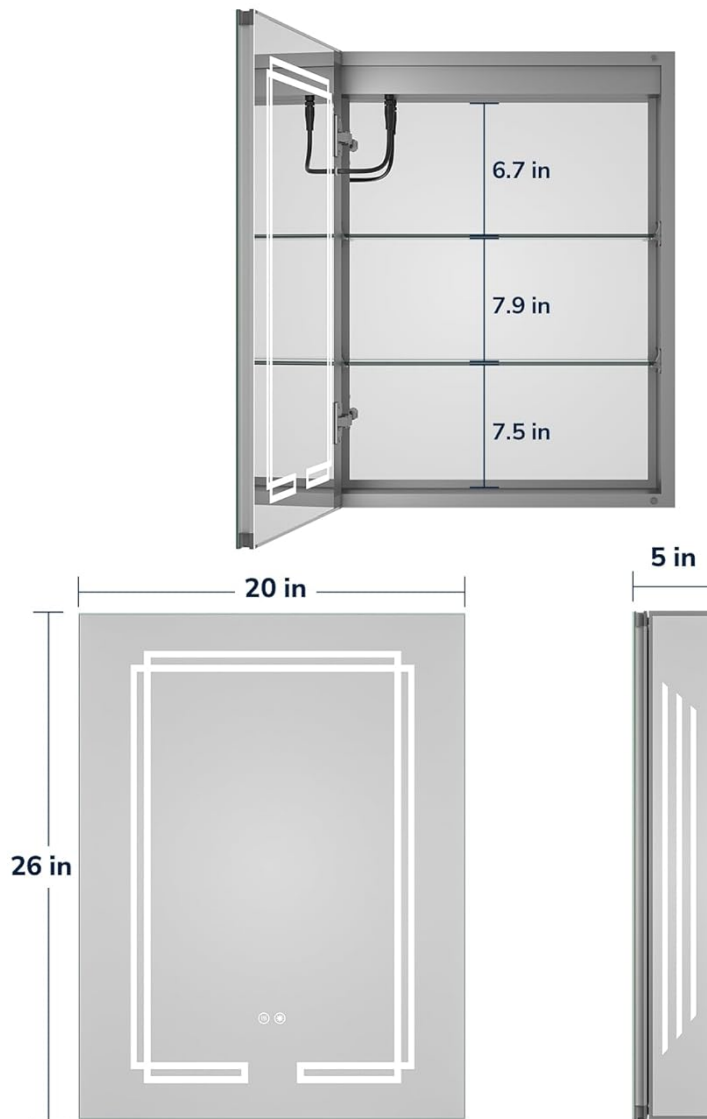


Image: Dimensions of the Keonjinn 20x26 Inch LED Medicine Cabinet, showing external measurements and internal shelf spacing.

### Mounting Steps:

1. **Confirm Installation Location:** Identify the desired mounting spot on the wall. Use a stud finder to locate wall studs for secure attachment. Mark the spots for the lower bracket.



Image: A person marking the wall to indicate where the lower mounting bracket will be installed.

2. **Secure Lower Bracket:** Drill at the marked spots and securely fasten the lower French cleat bracket to the

wall using appropriate anchors and screws. Ensure it is level.

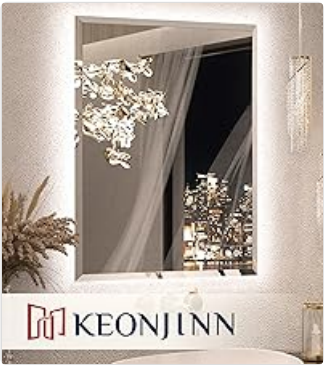


Image: The lower French cleat bracket being screwed into the wall with anchors.

3. **Mount Cabinet and Secure Upper Brackets:** Carefully place the medicine cabinet onto the lower bracket. Once positioned, secure the two upper brackets on top of the cabinet to fully stabilize it.



Image: The medicine cabinet being placed onto the lower bracket, with upper brackets ready for securing.

Wall and Anchor Recommendations:



Image: A table illustrating recommended wall anchors based on wall thickness for various cabinet sizes.

Recommended Wall Anchors by Wall Thickness

| Wall Thickness | Recommended Wall Anchor |
|----------------|-------------------------|
| >16mm          | Expansion anchors       |
| 8 ~ 16mm       | Butterfly anchors       |
| <8mm           | Unapplicable            |

Reminder: Once you've picked the location for hanging the mirror, please run a stud finder and make sure that the hanging bracket is screwed into the studs.

## Installation Video:

Your browser does not support the video tag.

Video: Official Keonjinn installation guide for the Lighted Medicine Cabinet. This video demonstrates the mounting process and key features.

## Operation

Your Keonjinn LED Lighted Medicine Cabinet Mirror features intuitive touch controls for lighting and defogging functions.

The advertisement features a central image of a rectangular LED mirror mounted on a wall with a marble-like pattern. The mirror has a white frame and is surrounded by orange double-headed arrows indicating touch controls. To the right of the mirror, on a dark background, are four white icons in circles: a light bulb with three dots (3-Color Temperature), a sun-like symbol (Stepless Dimming), three wavy lines (Fast Defogging), and a light bulb with a lightning bolt (Smart Memory). The Keonjinn logo is in the top left corner. At the bottom, a dark banner contains the text 'A Complete LED Mirror Experience for You' in white. Below the banner, a bathroom sink and countertop are visible.

**KEONJINN**

3-Color Temperature

Stepless Dimming

Fast Defogging

Smart Memory

**A Complete LED Mirror Experience for You**

Image: The mirror surface showing the touch controls for activating lights and defogging, along with icons representing 3-color temperature, stepless dimming, fast defogging, and smart memory.

- **Power On/Off:** Tap the power icon on the mirror surface to turn the LED lights on or off.
- **Adjust Color Temperature:** Tap the light icon to cycle through the three available color temperatures: warm (3000K), neutral (4500K), and cool (6500K).





## Sturdy and Durable Aluminum Construction




-  Non-deforming
-  Water-proof
-  Rust-resistant

Image: Three views of the Keonjinn mirror demonstrating the different color temperatures: 6500K (cool white), 4500K (neutral white), and 3000K (warm white).

- **Stepless Dimming:** Press and hold the light icon to adjust the brightness level. Release when the desired brightness is achieved. The mirror will remember your last setting.


## Functional and Aesthetic Mirrored Interior

Enhance visibility when searching items and also contribute to a more premium look



Image: Three views of the Keonjinn mirror demonstrating different dimming levels: 10%, 50%, and 100% brightness, highlighting the smart memory function.

- **Defogging Function:** Tap the defogger icon to activate the anti-fog feature. The defogger will automatically shut off after one hour.

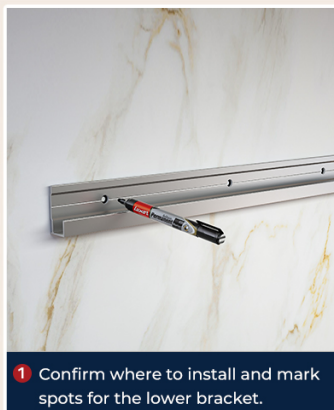

1 Confirm where to install and mark spots for the lower bracket.



2 Drill at the spots and secure the lower bracket to the wall.



3 Place the cabinet on it and secure two upper brackets on top of the cabinet.

Image: The Keonjinn mirror with arrows indicating the defogging area, emphasizing its fast and safe operation with automatic shut-off.

## Maintenance

To ensure the longevity and optimal performance of your medicine cabinet, follow these maintenance guidelines:

- **Cleaning the Mirror:** Use a soft, damp cloth and a mild glass cleaner. Avoid abrasive cleaners or harsh chemicals that could damage the mirror surface or frame.
- **Cleaning the Frame:** Wipe the aluminum frame with a soft, dry or slightly damp cloth.
- **Electrical Safety:** Always unplug the cabinet before cleaning or performing any maintenance.
- **Shelf Adjustment:** To adjust the tempered glass shelves, carefully lift them from their supports and reposition them to the desired height. Ensure they are securely seated before placing items on them.

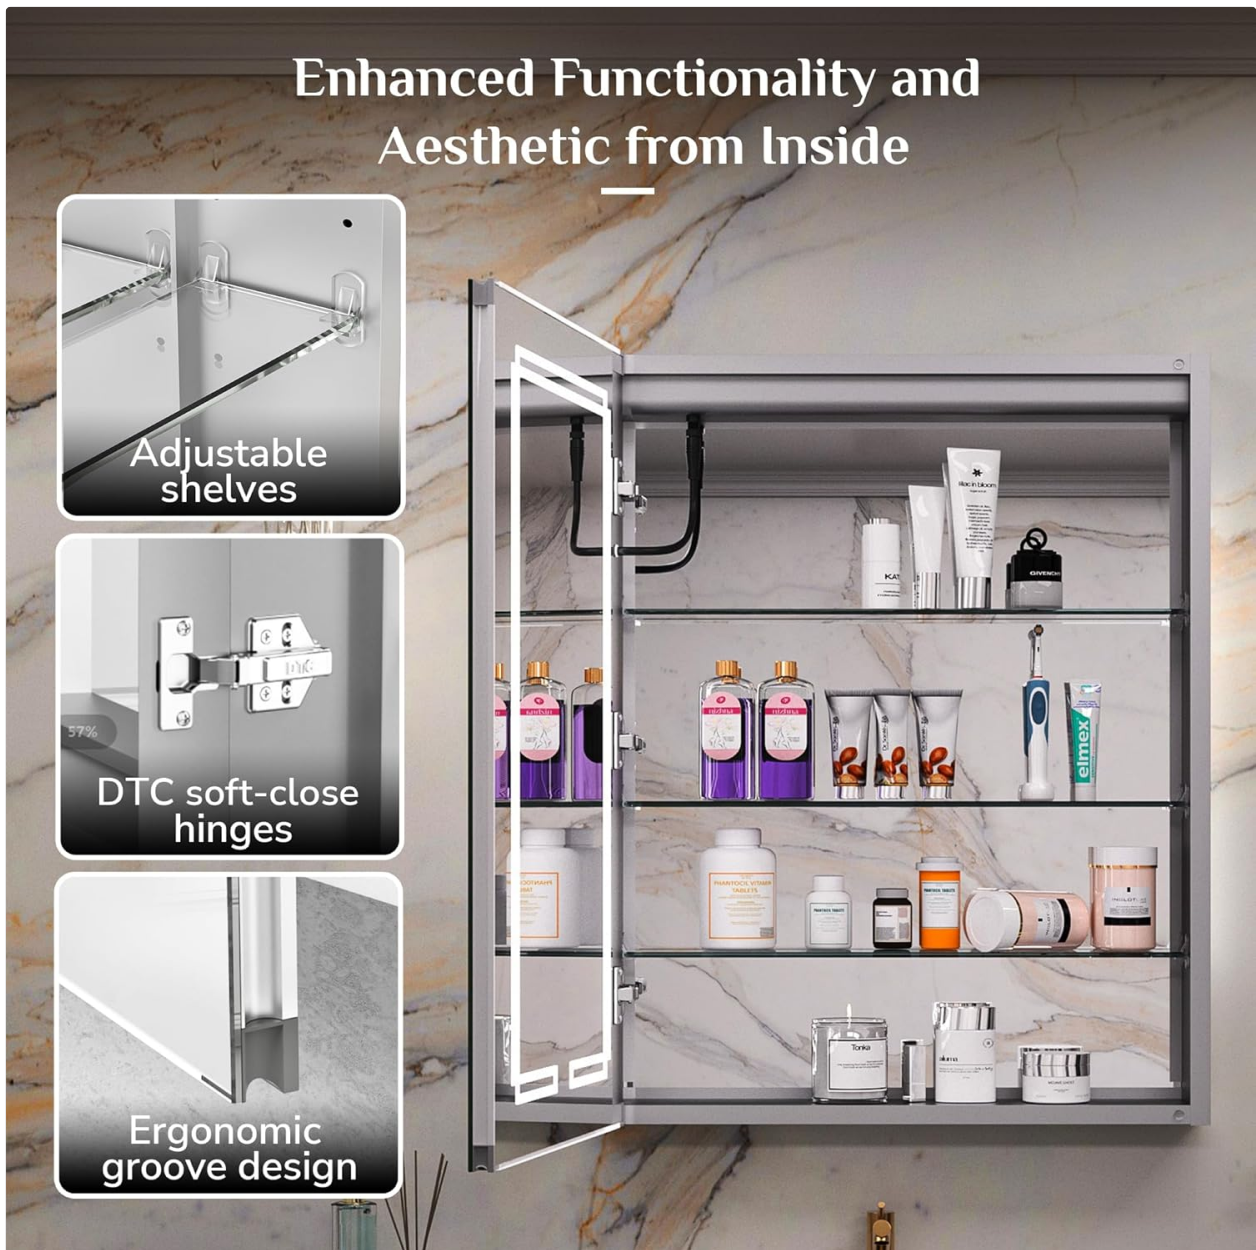


Image: The interior of the Keonjinn medicine cabinet, highlighting the adjustable shelves, DTC soft-close hinges, and ergonomic groove design for enhanced functionality.

## Troubleshooting

If you encounter any issues with your Keonjinn LED Lighted Medicine Cabinet Mirror, please refer to the following common solutions:

- **Lights Not Working:**
  - Check if the cabinet is properly plugged into a functional power outlet.
  - Ensure the power switch (if applicable) is in the 'ON' position.
  - Verify that the circuit breaker has not tripped.
- **Defogger Not Activating:**
  - Confirm the defogger touch button is pressed.
  - Allow a few minutes for the defogger to heat up and clear the mirror.
- **Mirror Flickering or Dimming Issues:**
  - Ensure the power supply is stable.
  - Contact customer support if the issue persists, as this may indicate an internal component problem.

For issues not covered here, please contact Keonjinn customer support.

## Specifications

| Feature            | Detail                                            |
|--------------------|---------------------------------------------------|
| Brand              | Keonjinn                                          |
| Model Size         | 20x26 In                                          |
| Product Dimensions | 5"D x 20"W x 26"H                                 |
| Item Weight        | 45.9 pounds                                       |
| Color              | Glass                                             |
| Material           | Metal (Frame), Glass (Mirror, Shelves)            |
| Mounting Type      | Wall Mount                                        |
| Number of Shelves  | 2 (Adjustable)                                    |
| Door Style         | Mirrored                                          |
| Special Feature    | Adjustable Shelf, LED Mirror, Dimmable, Defogging |
| Assembly Required  | No                                                |
| Manufacturer       | Keonjinn                                          |

## Warranty and Support

Keonjinn is committed to providing high-quality products and customer satisfaction.



- **Free Repair:** Enjoy free mirror repair within 3 years of purchase.
- **Returns:** 30-day no-hassle returns.
- **Damaged Products:** For products arriving in damaged condition, please send photos of the damaged mirror to customer support for a free replacement without requiring a return.

### Contacting Support:

If you need support regarding Keonjinn products or orders, follow these steps:

1. Locate the product on the retailer's website (e.g., Amazon.com).
2. Click on the 'Keonjinn' brand name or seller name to access the seller's page.
3. Select the 'Ask a question' option to access the Seller Messaging Assistant.
4. Follow the prompts to type your question and submit it. Please include any relevant product details and order information.



Image: A visual guide demonstrating the steps to contact Keonjinn customer support through the retailer's platform.