

LEMNOI SG9

LEMNOI 7-inch Digital Calendar Clock User Manual


Model: SG9 | Brand: LEMNOI

INTRODUCTION

Thank you for choosing the LEMNOI 7-inch Digital Calendar Clock (Model SG9). This device is designed to assist individuals, particularly those with memory loss or dementia, by clearly displaying the time, date, and day of the week. It features multiple alarm and medication reminder functions, adjustable brightness, and can also serve as a digital photo frame. Please read this manual carefully to ensure proper setup and operation.

PACKAGE CONTENTS

- LEMNOI 7-inch Digital Calendar Clock (SG9)
- Power Adapter
- User Manual
- Stand (for tabletop use)

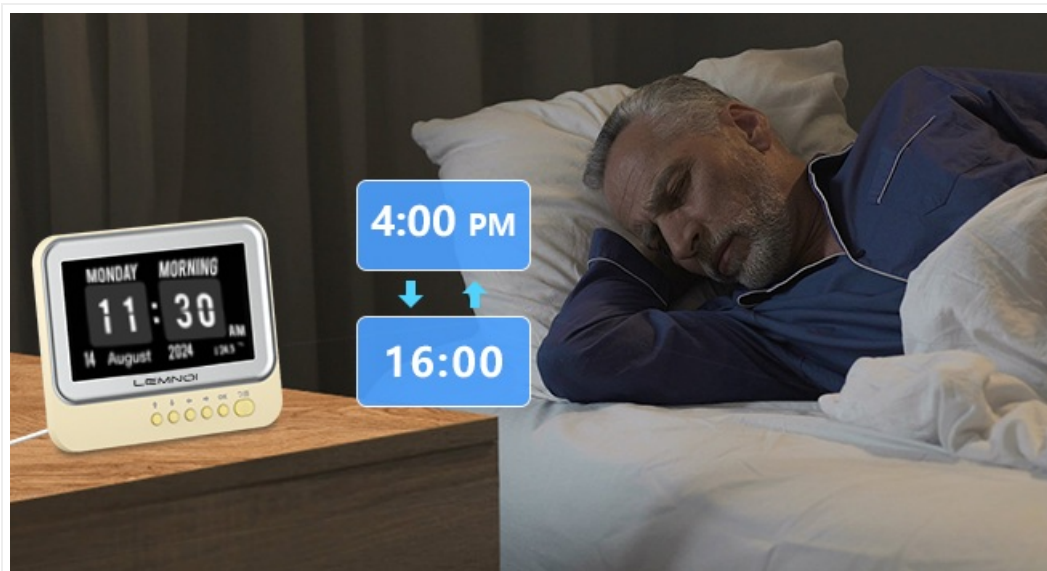

The package includes the digital clock, power adapter, user manual, and a stand.

PRODUCT OVERVIEW

The LEMNOI SG9 features a clear 7-inch HD display and intuitive controls. The front panel includes navigation buttons for easy menu interaction.



Front view of the clock with its large display and control buttons: Up, Down, Left, Right, OK, and Menu/Return.

SETUP


1. Power Connection

1. Connect the power adapter to the DC IN port on the back of the clock.
2. Plug the power adapter into a standard electrical outlet.
3. The clock will power on automatically.

Note: The clock operates on AC power and does not use batteries for primary function. A built-in backup system saves settings during power outages.

2. Initial Language Selection

- Upon first power-on, the clock may display a language selection screen.
- Use the **Up** and **Down** buttons to navigate through the language options (English, French, German, Italian, Spanish).
- Press the **OK** button to confirm your selection.

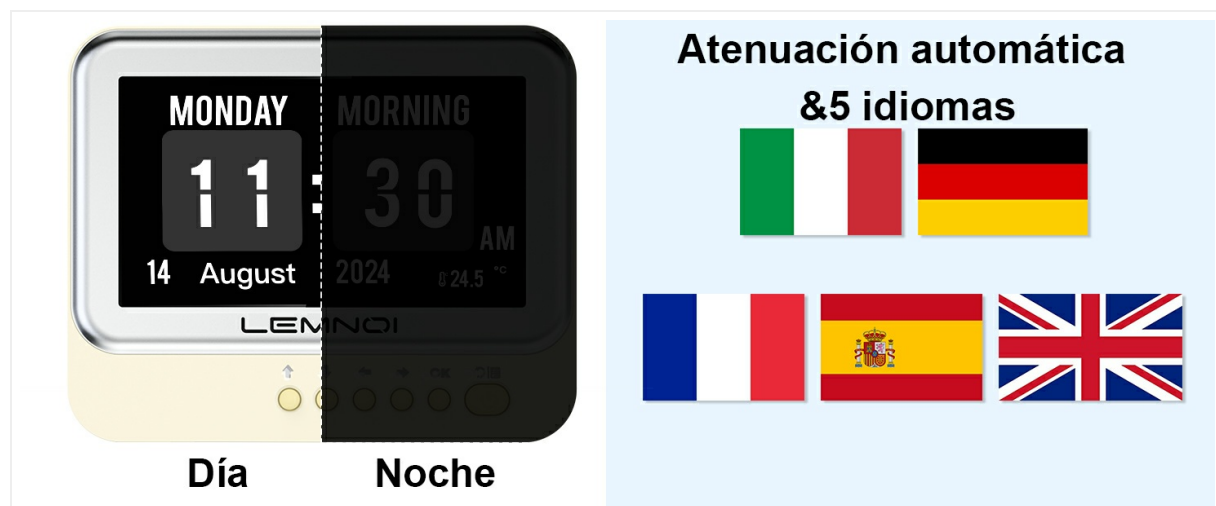

The clock supports multiple languages, indicated by national flags.

3. Setting Time and Date

1. Press the **Menu/Return** button to access the main menu.
2. Navigate to "Date & Time" using the **Up/Down** buttons and press **OK**.
3. Adjust the year, month, day, hour, and minute using the **Up/Down** buttons. Use **Left/Right** to move between fields.
4. Select 12-hour or 24-hour format as preferred.
5. Press **OK** to save changes and **Menu/Return** to exit.

OPERATING INSTRUCTIONS

1. Display Modes

The clock offers 6 distinct display modes, including a unique floral surface mode that changes weekly. You can cycle through these modes by pressing the **Left** or **Right** buttons from the main display.



Six different display modes are available, offering various visual styles for time and date.

2. Brightness Adjustment and Auto-Dimming

The clock features 5 levels of adjustable brightness and an automatic dimming function to optimize visibility day and night.

- **Manual Brightness:** Access the "Brightness" setting in the menu to select a level from 1 to 5.
- **Automatic Dimming:** Enable "Auto Dimming" in the settings. You can customize the start and end times for dimming, and set the desired dimming brightness level (e.g., 0% for a completely dark screen at night).



Adjustable brightness levels ensure comfortable viewing in any light condition, with an auto-dimming feature for night.



Customize automatic dimming times and brightness levels for personalized comfort.

3. Alarm Settings

The clock supports up to 15 daily alarms and 15 medication reminders, each with customizable labels and frequencies.

- **Setting an Alarm:**

- From the main menu, select "Alarm" or "Take Medicine".
- Choose an alarm slot (e.g., Alarm 1, Medication 1).
- Set the desired time (hour and minute).
- Select the frequency: Daily, Weekdays (Mon-Fri), Weekends (Sat-Sun), or Specific Dates.
- Choose an alarm label from the 12 available options (e.g., Wake Up, Drink Water, Meeting with Doctor, Dog Walking). These labels are displayed with vivid color images for easy comprehension.
- Select an alarm sound.
- Press **OK** to save.

- **Medication Reminders:** Specifically designed for morning, afternoon, and evening medication alerts.

12 Alarm Clock Label Reminders & 15 Daily Alarms



The clock provides 12 distinct alarm labels with visual cues for better understanding.

15 grupos de recordatorios de medicamentos



Set up to 15 medication reminders for morning, afternoon, and night.

4. Daylight Saving Time (DST)

The clock supports automatic adjustment for Daylight Saving Time. Ensure this feature is enabled in the "Date & Time" settings for accurate time display.

Horario de verano automático



Automatic Daylight Saving Time adjustment ensures the clock always displays the correct time.

5. Using as a Digital Photo Frame

The clock can function as a high-resolution digital photo and video frame. Insert a USB flash drive (not included) into the USB port on the side of the clock. Navigate to the "Photo Frame" option in the menu to play your media.



The clock can display photos and videos from a USB drive.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and body of the clock. Do not use liquid cleaners or abrasive materials.
- **Placement:** Place the clock on a stable, flat surface or mount it securely on a wall. Avoid direct sunlight, high temperatures, or humid environments.
- **Power:** Always use the provided power adapter. Disconnect power during thunderstorms or when not in use for extended periods.



The clock can be placed on a desk or mounted on a wall.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock does not turn on.	No power connection.	Ensure the power adapter is securely connected to the clock and a working electrical outlet.

Problem	Possible Cause	Solution
Display is too dim or too bright.	Brightness settings are incorrect or auto-dimming is active.	Adjust manual brightness in settings or check auto-dimming schedule and brightness level.
Alarms are not sounding.	Alarm is disabled, volume is too low, or incorrect time/frequency set.	Verify alarm settings, ensure volume is audible, and check alarm time/frequency.
Time is incorrect after power outage.	Backup battery may be depleted or not functioning.	The clock has a backup system for settings. If time is incorrect, manually reset the time and date.
Cannot play photos/videos.	USB drive not inserted correctly or unsupported file format.	Ensure USB drive is fully inserted. Check that media files are in supported formats (e.g., JPEG for photos, common video formats).

SPECIFICATIONS

Feature	Detail
Brand	LEMNOI
Model Number	SG9
Display Type	Digital
Screen Size	7 inches
Resolution	1024 x 600 pixels
Product Dimensions (W x H)	19 cm x 16 cm
Item Weight	290 Grams
Material	Acrylonitrile Butadiene Styrene (ABS)
Power Source	Electric Cable
Special Features	Auto-dimmable, Adjustable Brightness (5 levels), Temperature Indicator, 6 Display Modes, 15 Daily Alarms, 15 Medication Reminders, 12 Alarm Labels, Digital Photo Frame Function, Daylight Saving Time Auto-Adjust, Multi-language Support
Mounting Type	Tabletop

Feature	Detail
Required Battery (Backup)	1 CR123A (not included for primary operation)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or the official LEMNOI website. Keep your purchase receipt as proof of purchase for any warranty claims.