

## Weofly Curve

# Weofly Smart Watch (Model Curve) User Manual

Your guide to setup, operation, and maintenance.

## INTRODUCTION

Thank you for choosing the Weofly Smart Watch, Model Curve. This device is designed to enhance your daily life with advanced features including a vibrant AMOLED display, comprehensive health monitoring, multi-sport tracking, and convenient Bluetooth calling. This manual provides essential information to help you get started and make the most of your new smartwatch.

## SETUP GUIDE

### 1. Charging the Smart Watch

Before first use, fully charge your Weofly Smart Watch. Connect the magnetic charging cable to the charging points on the back of the watch and plug the USB end into a power adapter (not included) or a computer USB port. A full charge typically takes approximately 2.5 hours.

# Unique Personality Dials

200+ Exquisite Dials for Your Choice



Image: The Weofly Smart Watch connected to its magnetic charging cable, illustrating the charging process.

## 2. App Installation and Pairing

To unlock all features and synchronize data, download the companion application to your smartphone. Refer to the included user manual in the box for specific app name and QR code for download. Once installed, open the app and follow the on-screen instructions to pair your smartwatch via Bluetooth. Ensure Bluetooth is enabled on your phone.

## OPERATING THE SMART WATCH

### Display and Navigation

The Weofly Smart Watch features a 1.43-inch AMOLED HD screen with a resolution of 466x466 pixels, offering clear and vibrant visuals. Navigate through menus and functions by swiping across the touchscreen and pressing the physical buttons on the side of the watch.

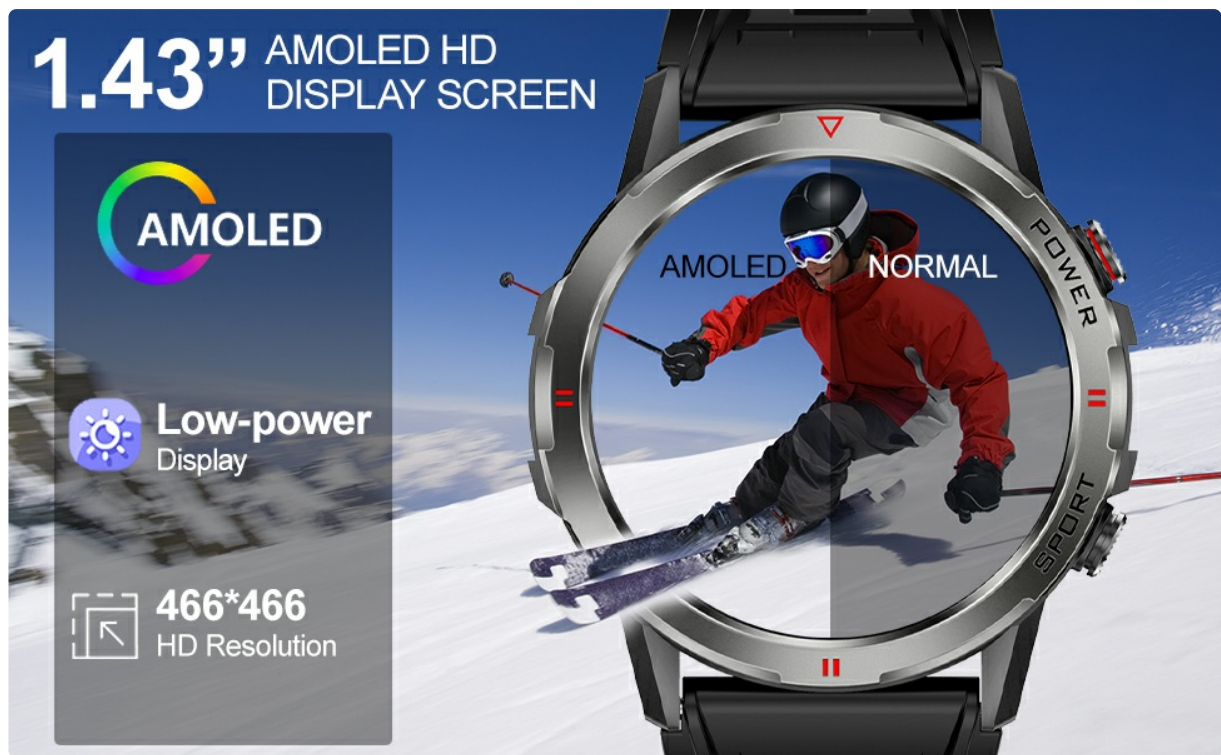


Image: The 1.43-inch AMOLED HD screen of the Weofly Smart Watch, showcasing its display quality and customizable watch faces.

### Customizable Dials

Personalize your watch face with over 300 available dials or create custom ones through the companion app to match your style and preferences.



Image: A selection of unique and customizable watch faces available for the Weofly Smart Watch.

### HEALTH MONITORING

The Weofly Smart Watch provides comprehensive health tracking features to help you monitor your well-being.

- **Heart Rate Monitoring:** Continuous 24-hour heart rate tracking.
- **Blood Oxygen Monitoring:** Measures your blood oxygen saturation levels.
- **Sleep Monitoring:** Analyzes your sleep patterns to help improve sleep quality.
- **Stress Tracker:** Monitors your stress levels throughout the day.



Image: The Weofly Smart Watch and its companion app displaying real-time health monitoring data, including heart rate, blood oxygen, and sleep.



Image: The rear view of the Weofly Smart Watch, highlighting the sensors responsible for 24/7 health tracking.

## SPORTS MODES AND FITNESS TRACKING

The smartwatch supports over 111 exercise modes, catering to a wide range of sports enthusiasts. It automatically tracks daily steps, distance, activity time, and calories burned.





Image: A man cycling while wearing the Weofly Smart Watch, illustrating the device's multi-sport tracking capabilities with icons for different activities.



Image: The Weofly Smart Watch screen showing detailed activity tracking data, including steps, calories, heart rate, and distance covered.

## BLUETOOTH CALLING AND MESSAGE NOTIFICATIONS

Stay connected by making and receiving phone calls directly from your smartwatch. You will also receive timely notifications and reminders from SMS, email, and various applications.



Image: The Weofly Smart Watch showing an incoming call and message notifications, demonstrating its Bluetooth calling and smart notification features.



Image: The Weofly Smart Watch screen displaying icons for various social media and communication applications, indicating its smart notification capabilities.

Your browser does not support the video tag.

Video: This video demonstrates the Weofly Smart Watch's Bluetooth calling feature, showing how to answer a call directly from the watch while it is submerged in water.

## BATTERY LIFE AND CHARGING

The Weofly Smart Watch offers extended battery performance. A single 2.5-hour charge provides 7-10 days of normal usage, with a standby time of up to 30 days.



# Unique Personality Dials

200+ Exquisite Dials for Your Choice



Image: The Weofly Smart Watch screen showing its battery charging status, emphasizing its long battery life and magnetic charging method.

## WATER RESISTANCE (IP68)

The smartwatch has an IP68 waterproof rating, making it suitable for daily activities such as hand washing, rain, and resisting sweat. **Note: It is not recommended for swimming or diving.**



Image: The Weofly Smart Watch partially submerged in water, illustrating its IP68 waterproof capability for daily use.

## OTHER FEATURES

The Weofly Smart Watch includes several additional features for convenience:

- **Sedentary Reminder:** Alerts you to move after periods of inactivity.
- **Music Control:** Manage music playback on your paired smartphone.
- **Voice Assistant:** Access your phone's voice assistant directly from the watch.
- **Alarm Clock:** Set alarms for reminders.
- **Weather Forecast:** Get real-time weather updates.

## AI Voice Assistant

Convenient Assistance In Daily Life through Ai Voice Assistant

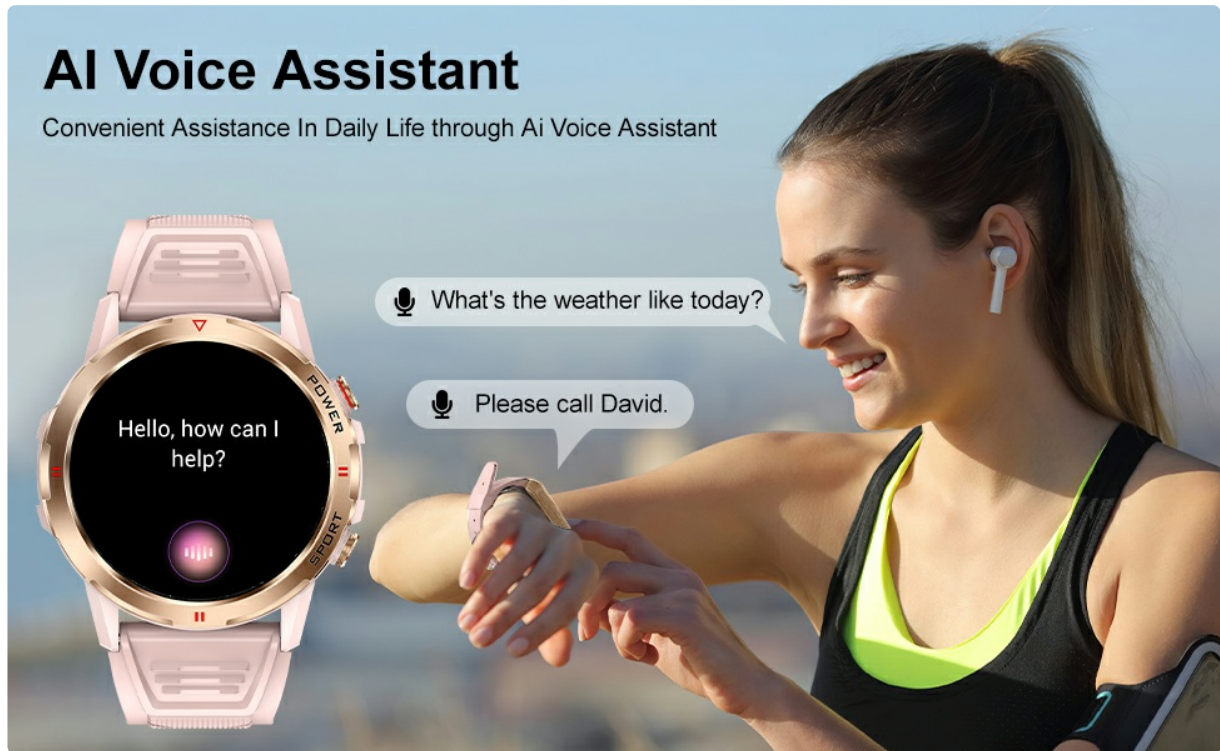


Image: A visual representation of various smart features of the Weofly Smart Watch, such as sedentary reminders, music control, voice assistant, alarm clock, and weather display.



Image: A woman using the AI Voice Assistant feature on her Weofly Smart Watch, demonstrating convenient hands-free interaction.

Image: Three Weofly Smart Watches in different colors, each showcasing a distinct function such as calculator, weather, and music control.

## MAINTENANCE

To ensure the longevity and optimal performance of your Weofly Smart Watch, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the watch screen and strap with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and dry thoroughly.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemicals, as they can damage the watch's finish and internal components.



- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Use only the provided magnetic charging cable. Avoid overcharging by disconnecting once fully charged.

## TROUBLESHOOTING

If you encounter issues with your Weofly Smart Watch, try the following solutions:

- **Watch Not Turning On:** Ensure the watch is fully charged. Connect it to the charger for at least 30 minutes.
- **Cannot Pair with Phone:** Make sure Bluetooth is enabled on your phone and the watch is within range. Restart both the watch and your phone, then try pairing again through the app.
- **Inaccurate Health Data:** Ensure the watch is worn snugly on your wrist, not too tight or too loose. Clean the sensors on the back of the watch.
- **Notifications Not Received:** Check your phone's app settings to ensure notifications are enabled for the companion app and the specific applications you wish to receive alerts from. Ensure the watch is connected via Bluetooth.
- **Screen Unresponsive:** Try restarting the watch by pressing and holding the power button. If unresponsive, allow the battery to drain completely and then recharge.

## SPECIFICATIONS

Display Size	1.43 Inches AMOLED
Resolution	466x466 pixels
Model Number	Curve
Battery Capacity	400 Milliamp Hours (Lithium Polymer)
Connectivity	Bluetooth 5.0
Water Resistance	IP68
Operating System	Compatible with Android 5.0+
Memory Storage Capacity	128 MB
Item Weight	5.9 ounces

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your product packaging or contact Weofly customer service through their official website. The product includes a user manual and charging cable.