

Westbrass F730-62

Westbrass F730-62 Filtered Handheld Shower Head Diverter Bracket Instruction Manual

PRODUCT OVERVIEW

The Westbrass F730-62 is a filtered handheld shower head diverter bracket designed to enhance your showering experience. It converts a standard handheld shower to a filtered system, helping to reduce impurities in the water. This unit also features a powerful jetted spray for massage, targeting specific areas for muscle relief.



Figure 1: Front view of the Westbrass F730-62 Filtered Handheld Shower Head Diverter Bracket. This image displays the overall design and matte black finish of the product.

INSTALLATION INSTRUCTIONS

Follow these steps to properly install your Westbrass F730-62 diverter bracket:

1. Ensure the water supply to your shower is turned off before beginning installation.
2. Unscrew your existing shower head or diverter from the wall-mounted shower arm.
3. Apply plumber's tape to the threads of your wall-mounted shower arm.
4. Screw the Westbrass F730-62 diverter bracket onto the wall-mounted shower arm. The universal 1/2 inch threaded gauge ensures compatibility with standard shower arms. Hand-tighten first, then use a wrench to secure, being careful not to overtighten.
5. Connect your handheld shower hose to the appropriate outlet on the diverter bracket.
6. Turn on the water supply and flush the system with hot water for one minute to clear any air or debris.
7. Check for leaks at all connection points. If leaks occur, tighten connections slightly or reapply plumber's tape.



Figure 2: Top-down view of the diverter bracket, illustrating the internal filter element. This view helps in understanding the filter's placement during installation and replacement.

OPERATION

The Westbrass F730-62 diverter bracket offers both filtered water delivery and a powerful massage spray function.

- **Filtered Water Delivery:** Water flows through the internal HHF filter, reducing impurities before reaching your handheld shower head.
- **Jet Massage Spray System:** The bracket features a separate jetted spray system designed to provide a powerful massage. This spray targets the shoulders and back for muscle relief.
- **Mode Selection:** A dial located on the right side of the unit allows you to switch between three distinct modes for the massage spray. Rotate the dial to select your desired spray pattern.



Figure 3: Angled view of the diverter bracket, showing the mode selection dial on the right side. The dial allows users to switch between different spray patterns for the massage function.

MAINTENANCE AND FILTER REPLACEMENT

Regular maintenance, particularly filter replacement, is crucial for optimal performance and water quality.

Filter Replacement Schedule

The HHF filter cartridge should be replaced every six (6) months, or after 10,000 gallons of use, or if you notice a significant discoloration of the filter media. Timely replacement ensures continued filtration effectiveness.

Filter Cartridge Details

The HHF filter provides triple-action filtration:

- **Layer One (PP Cotton Filter):** Removes micro mud, rust, and impurities larger than 5 microns.
- **Layer Two (Activated Carbon Filter):** Reduces scale build-up, chlorine, heavy metals, and organic substances.
- **Layer Three (Medical Stone Filter):** Removes chlorine and impurities, organic matter, and miscellaneous bacteria, while releasing beneficial natural minerals.

HHF

HAND HELD FILTER

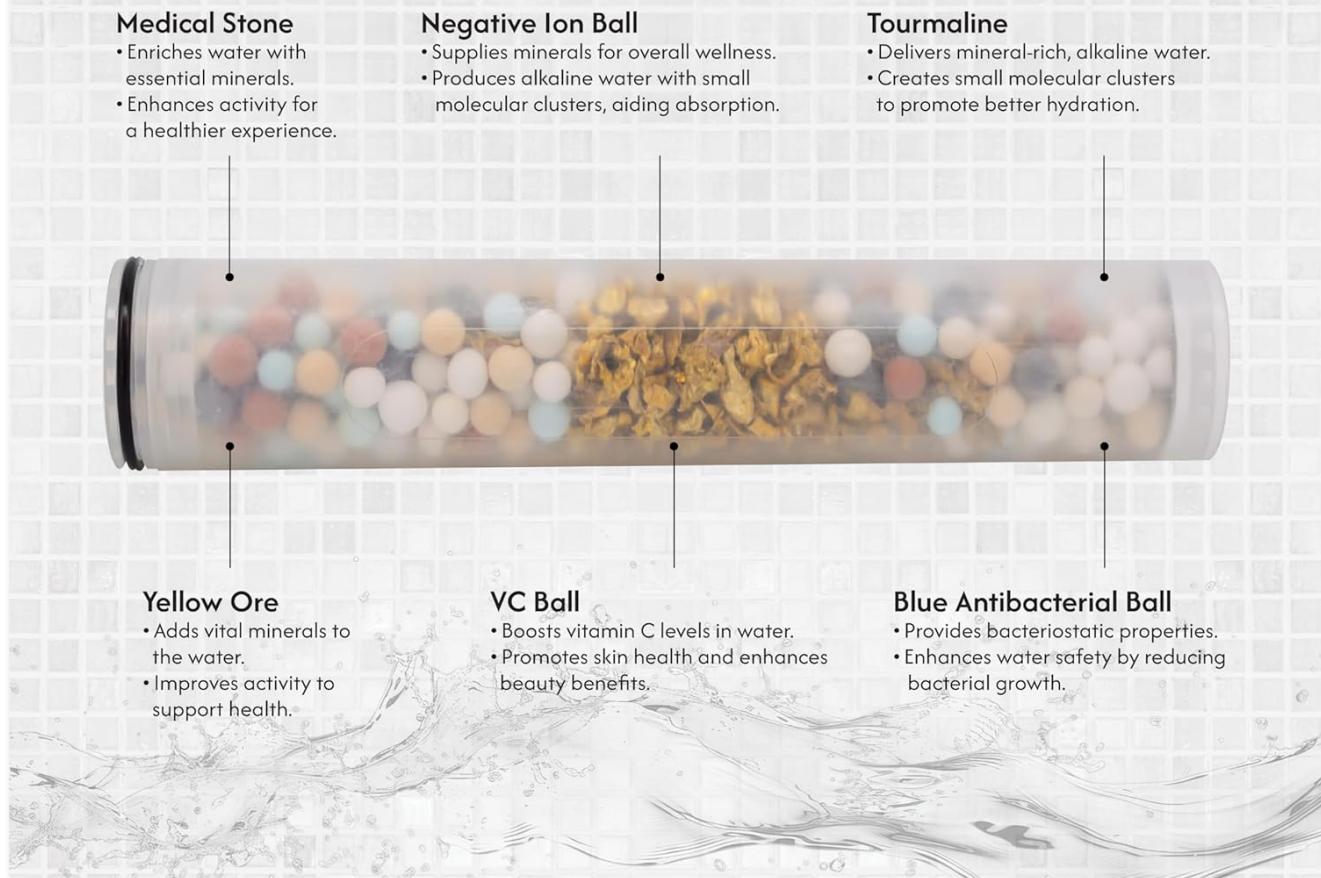


Figure 4: Diagram detailing the various components and their functions within the HHF filter cartridge, including Medical Stone, Negative Ion Ball, and Activated Carbon.

Replacing the Filter Cartridge

1. Turn off the water supply to the shower.
2. Carefully unscrew the end cap of the diverter bracket where the filter is housed.
3. Remove the old filter cartridge.
4. Insert the new HHF replacement filter unit (compatible with Westbrass models: SCH900F, F730, HSF731, HSF6701).
5. Screw the end cap back on securely.
6. Turn on the water supply and flush with hot water for one minute before use.



Figure 5: Close-up view of the HHF filter cartridge, displaying the different types of filtration media contained within.

TROUBLESHOOTING

If you encounter issues with your Westbrass F730-62, consider the following:

- **Reduced Water Flow:** Check if the filter cartridge needs replacement. A clogged filter can restrict water flow. Ensure all connections are tight and free of obstructions.
- **Leaks:** Verify that all threaded connections are properly sealed with plumber's tape and tightened securely. Do not overtighten.
- **No Massage Spray:** Ensure the mode selection dial is correctly positioned for a spray mode and not in an off or diverted position.
- **Poor Filtration:** If water quality does not improve, ensure the filter cartridge is correctly installed and has not exceeded its lifespan (6 months or 10,000 gallons).

For persistent issues, please refer to the customer support section.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Westbrass
Model Number	F730-62
Style	Compact
Shape	Round
Material	Brass, carbon, stainless steel
Finish Type	Painted (Matte Black)
Installation Type	Wall Mounted
Product Dimensions	7.7" L x 3.2" W


Feature	Specification
Number of Settings	3 (for massage spray)
Efficiency	1.8 GPM (Gallons Per Minute)
Item Weight	1.5 pounds
Included Components	(1) - Filtered Diverter Shower Bracket
Filter Compatibility	HHF Replacement filter unit (compatible with Westbrass models: SCH900F, F730, HSF731, HSF6701)

F730


WALL BRACKET BUILT-IN FILTER
ELEMENT WITH DIVERTER

Stainless Steel Shower Hose 14mm Brass Nuts

3.2"

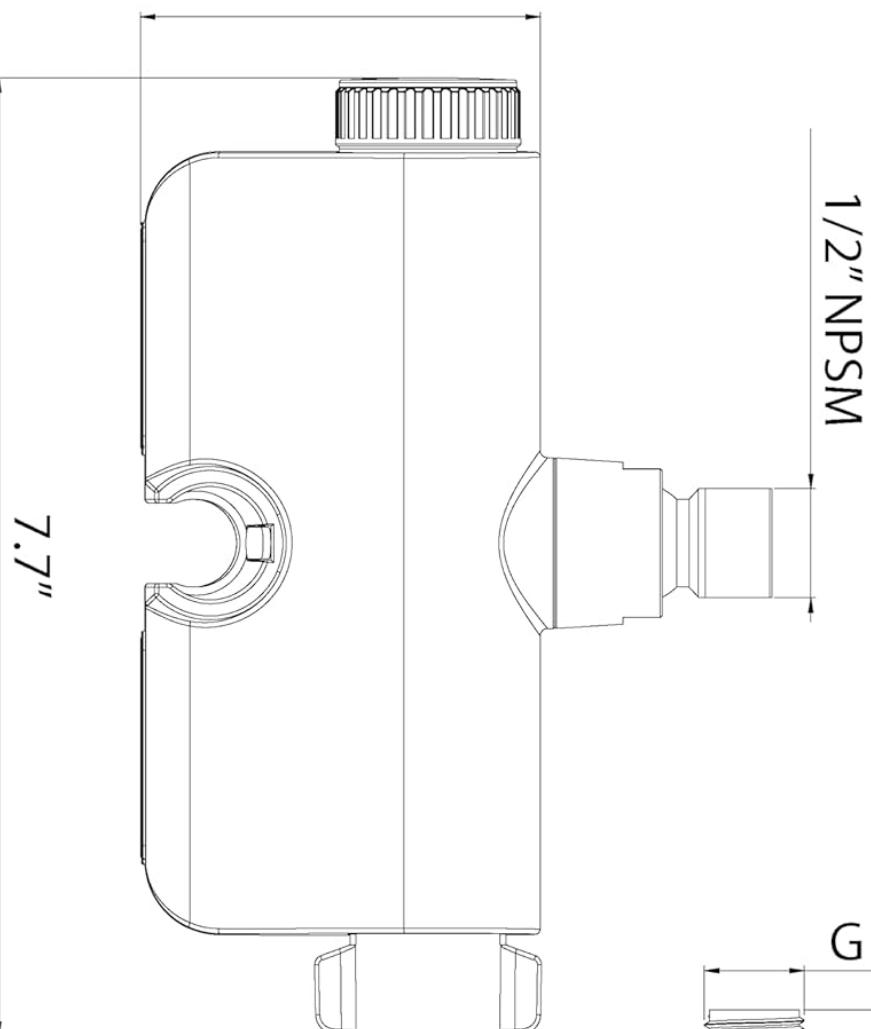

G 1/2"

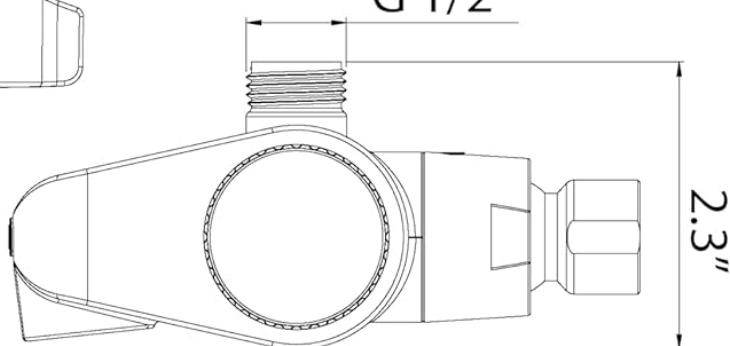

WESTBRASS
Luxury Plumbing - Est.1935

2429 East Olympic Blvd. Los Angeles, CA 90021
213-627-8441 • www.westbrass.com

Figure 6: Technical drawing providing precise dimensions and connection types for the Westbrass F730-62 diverter bracket.

WARRANTY INFORMATION

For specific warranty details regarding your Westbrass F730-62 Filtered Handheld Shower Head Diverter Bracket, please refer to the documentation included with your purchase or visit the official Westbrass website. Warranty terms typically cover manufacturing defects under normal use.

CUSTOMER SUPPORT

If you require further assistance, have questions about installation, operation, or maintenance, or need to report an issue, please contact Westbrass customer support. Contact information can typically be found on the Westbrass official website or in the packaging materials.

You can also visit the [Westbrass Storefront on Amazon](#) for more product information and support resources.