

[Manuals.plus](#) /

› [ANFIER](#) /

› ANFIER M3 and M9 Translator Earbuds User Manual

ANFIER M3, M9

ANFIER M3 and M9 Translator Earbuds User Manual

Your guide to setting up and operating your ANFIER Translator Earbuds.

1. INTRODUCTION

This manual provides detailed instructions for the ANFIER M3 and M9 Translator Earbuds. It covers product features, setup procedures, operational guidelines, maintenance tips, troubleshooting, and technical specifications. Please read this manual thoroughly before using your device to ensure optimal performance and longevity.



Image 1.1: The ANFIER M3 (in-ear) and M9 (ear-hook) Translator Earbuds with their respective charging cases. The M3 earbuds are white, and the M9 earbuds are also white, designed for comfortable and secure fit during use.

2. PRODUCT OVERVIEW

The ANFIER M3 and M9 Translator Earbuds are designed to facilitate real-time communication across language barriers. They offer high accuracy and quick response times for simultaneous translation.

Key Features:

- **High Translation Accuracy:** Up to 98% accuracy for simultaneous translation.
- **Fast Response Time:** M3 responds in 0.5 seconds, M9 responds in 1 second.
- **Extensive Language Support:** Supports 74 languages and 70 accents.
- **Offline Translation:** Supports 8 languages for offline use.
- **Noise Reduction (M3):** Up to 35dB high-precision noise reduction.
- **Multiple Translation Modes:** Free Talk, Speaker Mode, Touch Mode, Photo Translation.

98% Accuracy Simultaneous Translation in 0.5 Sec

Experience lightning-fast and precise translations in your multilingual conversations with the Wooask M3 earbuds, fueled by the world's top translation engines.

98%
Accuracy

0.5s
Response

Hello



你好

こんにちは

Hallo

안녕하십니까

Bonjour

Привет

EAST

Image 2.1: The ANFIER M3 earbuds demonstrating 98% accuracy and 0.5-second response time for simultaneous translation, displaying various greetings in different languages.

Indulge in Uncompromising Audio Quality with the High-precision Noise Reduction

Experience maximum noise reduction up to **35dB** with our high-precision **ENC** controller while keeping your ear comfort intact. So, never compromise on the noise and hear every rhythm.



Image 2.2: Illustration of the ANFIER M3 earbuds' high-precision noise reduction capability, showing a reduction of up to 35dB in ambient sound.

Translate even the smallest and lesser-known languages



74
Languages

70
Accents



Albanian(Albania)
Amharic(Ethiopia)
Arabic(18 Accents)
Armenian(Armenia)
Azerbaijani(Azerbaijan)
Basque(Spain)
Bengali(2 Accents)
Bosnian(BosniaandHerzegovina)
Bulgarian(Bulgaria)
Burmese(Myanmar)
Catalan(Spain)
Chinese(2 Accents)
Croatian(Croatia)
Czech(CzechRepublic)
Danish(Denmark)
Dutch(3 Accents)
English(16 Accents)
Estonian(Estonia)
Tagalog(Philippines)
Finnish(Finland)
French(4 Accents)
Galician(Spain)
Georgian(Georgia)
German(3 Accents)
Greek(Greece)

Gujarati(India)
Hebrew(Israel)
Hindi(India)
Hungarian(Hungary)
Icelandic(Iceland)
Indonesian(Indonesia)
Italian(2 Accents)
Japanese (Japan)
Javanese (Indonesia)
Kannada(India)
Kazakh(Kazakhstan)
Khmer(Cambodia)
Korean(SouthKorea)
Lao(Laos)
Latvian(Latvia)
Lithuanian(Lithuania)
Macedonian(NorthMacedonia)
Malay(Malaysia)
Malayalam(India)
Marathi(India)
Mongolian(Mongolia)
Nepali(Nepal)
BokmalNorwegian(Norway)
Persian(Iran)
Polish(Poland)

Portuguese(2 Accents)
Punjabi(Gurumuchi,India)
Romanian(Romania)
Russian(Russia)
Serbian(Serbia)
Sinhala(SriLanka)
Slovak(Slovakia)
Slovenian(Slovenia)
Spanish(22 Accents)
Sundanese(Indonesia)
Swahili(2 Accents)
Swedish(Sweden)
Tamil(4 Accents)
Telugu(India)
Thai(Thailand)
Turkish(Turkey)
Ukrainian(Ukraine)
Urdu(2 Accents)
Uzbek(Uzbekistan)
Vietnamese(Vietnam)
Zulu(SouthAfrica)
Irish(Ireland)
Maltese(Malta)
Pashto(Afghanistan)

Image 2.3: A visual representation of the ANFIER M3 earbuds' support for 74 languages and 70 accents, listing many of the supported languages.

Long-lasting Battery

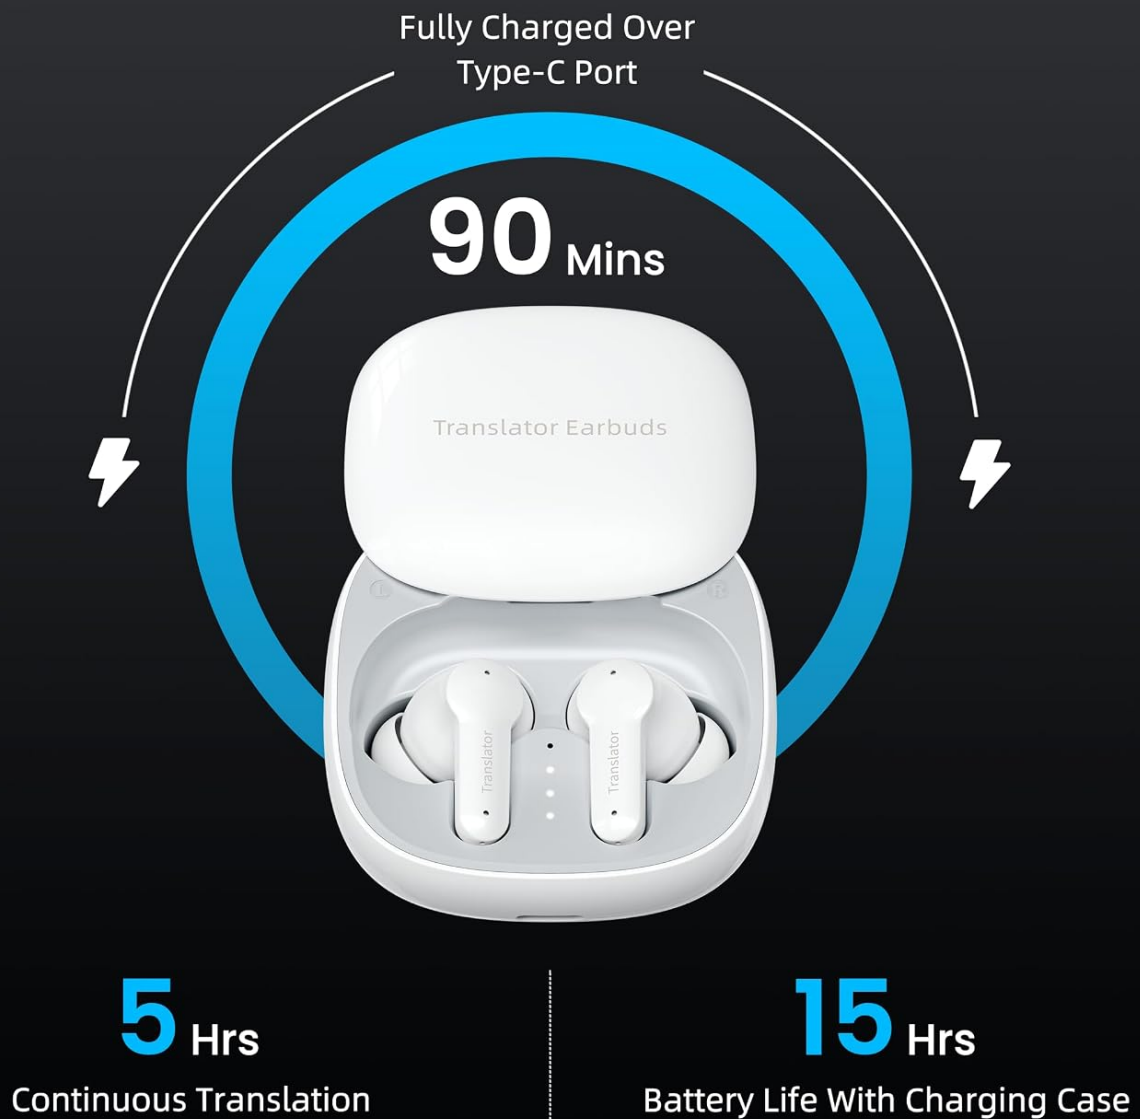


Image 2.4: The ANFIER M9 earbuds, highlighting their natural and instant translation capabilities with 98% accuracy and a 1-second response time, showing various greetings.

Natural and Instant Translation

Simultaneous Translation in **1 sec** with **98% Accuracy**

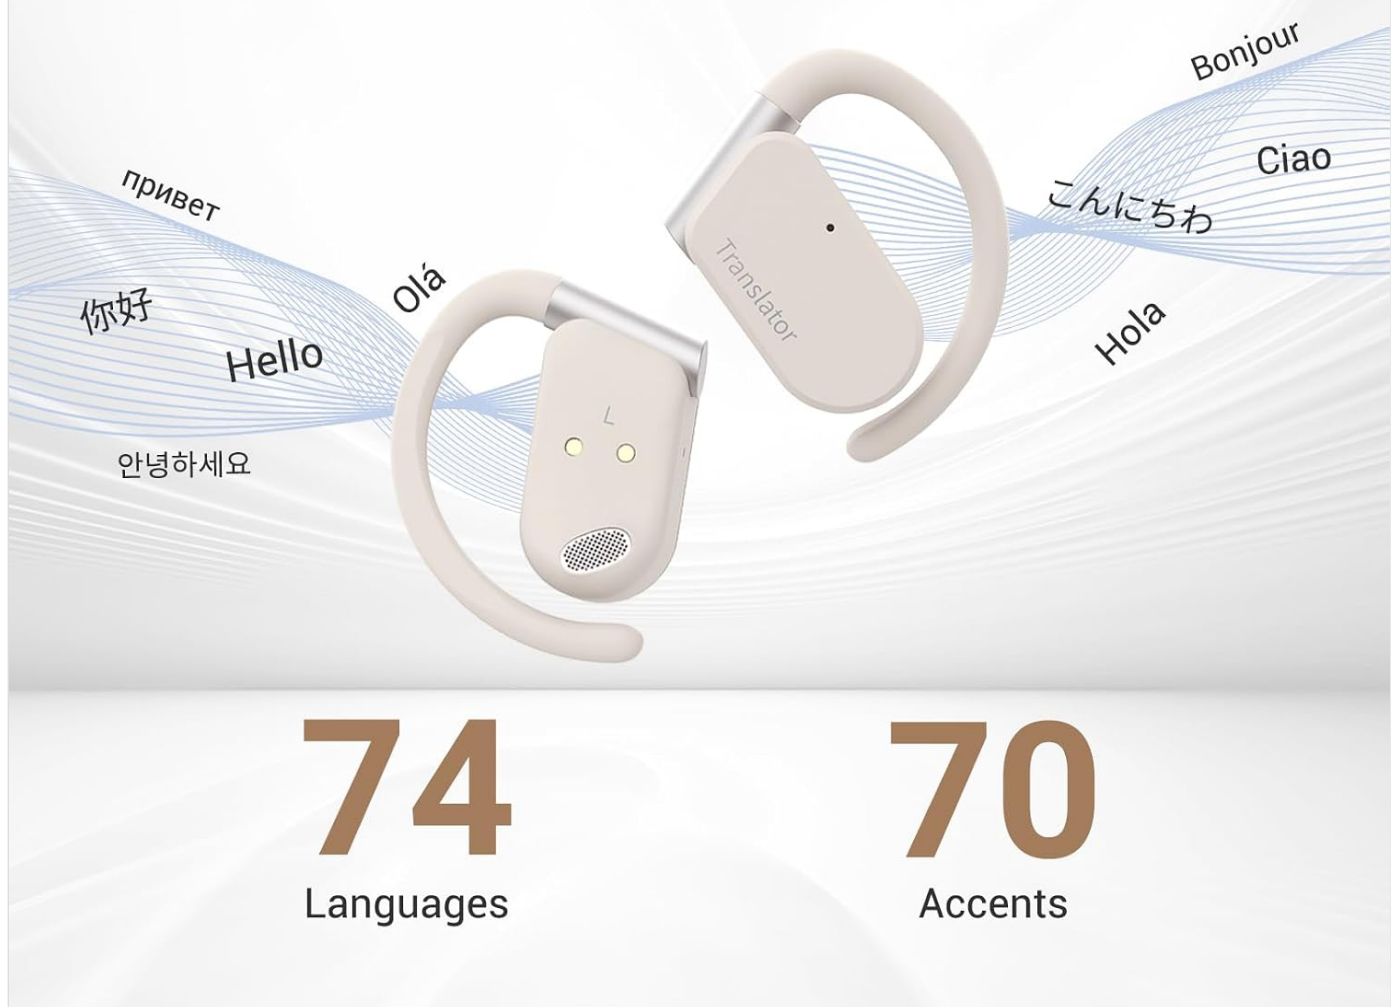


Image 2.5: A user wearing an ANFIER earbud, illustrating the offline voice translation feature available for 8 languages: English, Spanish, Mandarin, Japanese, Russian, French, German, and Korean.

Offline Voice Translation Between 8 Languages



Image 2.6: Depiction of the four translation modes offered by ANFIER Translator Earbuds: Free Talk Mode, Speaker Mode, Touch Mode, and Photo Translation.

3. SETUP

3.1. Charging the Earbuds

Before initial use, fully charge your ANFIER Translator Earbuds and their charging case. Connect the provided USB Type-C cable to the charging case and a power source. The indicator light on the case will show charging status.

3.2. App Installation

1. Download the **"Wooask"** application from your smartphone's app store (iOS App Store or Android Google Play Store).
2. Install the application on your device.
3. Open the app and follow the on-screen instructions to create an account or log in.

3.3. Pairing with Your Smartphone

1. Ensure your earbuds are charged and placed in their charging case.
2. Open the charging case lid. The earbuds will enter pairing mode.
3. Enable Bluetooth on your smartphone.
4. Open the "Wooask" app. The app will guide you through connecting your ANFIER Translator Earbuds.
5. Select your earbuds from the list of available Bluetooth devices within the app to complete the pairing process.

4. OPERATING INSTRUCTIONS

The ANFIER Translator Earbuds offer various modes to suit different communication scenarios. All operations are managed through the "Wooask" app.

4.1. Selecting Languages

1. Open the "Wooask" app on your smartphone.
2. Navigate to the language selection interface.
3. Choose your native language and the target language for translation.

4.2. Translation Modes

The earbuds support four primary translation modes:

- **Free Talk Mode:** Ideal for natural, continuous conversations. Both users can speak freely, and the earbuds will translate in real-time.
- **Speaker Mode:** One person wears the earbud, and the other person speaks into the smartphone. The translation is played through the earbud and the phone's speaker.
- **Touch Mode:** Press and hold the touch sensor on the earbud to speak, then release to hear the translation. This mode provides more control over when translation occurs.
- **Photo Translation:** Use the app to take a picture of text (e.g., a menu or sign). The app will translate the text and display it on your screen.

4.3. Offline Translation

For situations without internet access, the earbuds support offline translation for 8 specific languages. Ensure these language packs are downloaded via the "Wooask" app while connected to the internet before traveling.

- Supported Offline Languages: English, Spanish, Mandarin, Japanese, Russian, French, German, Korean.

5. BATTERY AND CHARGING

Proper battery management ensures extended use of your translator earbuds.

5.1. Charging

- Use the provided USB Type-C cable to charge the charging case.
- A full charge for the case typically takes approximately 90 minutes.

5.2. Battery Life

- **ANFIER M3 Earbuds:** Up to 5 hours of continuous translation. The charging case provides an additional 10 hours, totaling 15 hours of battery life.

- **ANFIER M9 Earbuds:** Up to 5 hours of translation time. The charging case extends the total battery life to 35 hours, with a standby time of up to 30 days.


Long-lasting Battery for Extended Translation Time



5 Hours
Translation Time



35 Hours
Battery Life



30 Days
Standby Time



Image 5.1: Battery specifications for the ANFIER M3 earbuds, showing 90 minutes for a full charge via Type-C port, 5 hours of continuous translation, and 15 hours of total battery life with the charging case.

Four Modes for Various Situations

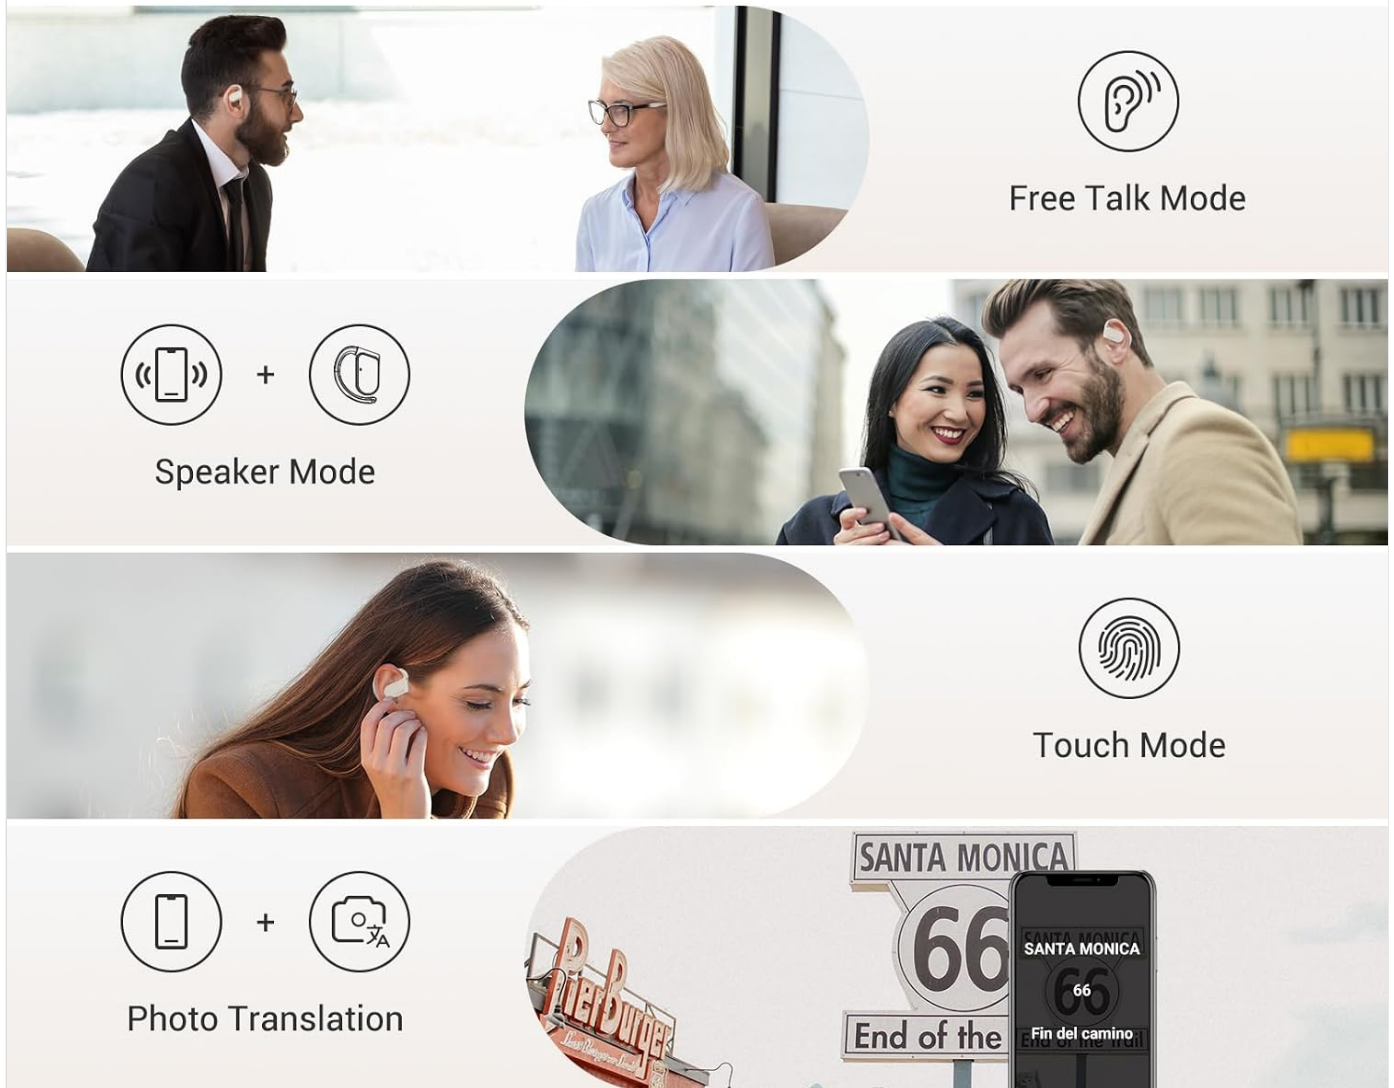


Image 5.2: Battery specifications for the ANFIER M9 earbuds, indicating 5 hours of translation time, 35 hours of total battery life, and 30 days of standby time.

6. MAINTENANCE

To maintain the performance and appearance of your ANFIER Translator Earbuds, follow these guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Storage:** Store the earbuds in their charging case when not in use to protect them from dust and damage. Keep them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The earbuds are not waterproof. Avoid exposure to water, rain, or excessive moisture.
- **Charging Port:** Ensure the USB Type-C charging port is free from dust and debris.

7. TROUBLESHOOTING

If you encounter issues with your ANFIER Translator Earbuds, refer to the following common problems and solutions:

Problem	Possible Solution
Earbuds not pairing	<ul style="list-style-type: none">• Ensure earbuds are charged.• Make sure Bluetooth is enabled on your smartphone.• Restart the "Wooask" app and try pairing again.• Forget the device in your phone's Bluetooth settings and re-pair.
No sound or poor audio quality	<ul style="list-style-type: none">• Check the volume levels on both your earbuds and smartphone.• Ensure earbuds are properly seated in your ears.• Clean any debris from the earbud speakers.• Reconnect the earbuds to your smartphone.
Translation is inaccurate or slow	<ul style="list-style-type: none">• Ensure a stable internet connection (for online translation).• Speak clearly and at a moderate pace.• Verify that the correct source and target languages are selected in the app.• For offline translation, ensure language packs are fully downloaded.
Earbuds not charging	<ul style="list-style-type: none">• Check the USB Type-C cable and power adapter for damage.• Ensure the charging port on the case is clean.• Make sure the earbuds are correctly placed in the charging case.

8. SPECIFICATIONS

Feature	Detail
Supported Languages	74
Supported Accents	70
Offline Translation Languages	8 (English, Spanish, Mandarin, Japanese, Russian, French, German, Korean)
Translation Accuracy	Up to 98%
Response Time (M3)	0.5 seconds
Response Time (M9)	1 second
Noise Reduction (M3)	Up to 35dB
M3 Continuous Translation Time	5 hours
M3 Total Battery Life (with case)	15 hours
M9 Translation Time	5 hours

Feature	Detail
M9 Total Battery Life (with case)	35 hours
M9 Standby Time	30 days
Charging Port	USB Type-C

9. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance, please refer to the official ANFIER website or contact ANFIER customer service. Details are typically provided with your product packaging or on the manufacturer's website.

ANFIER Official Website: [Visit ANFIER Store on Amazon](#)

© 2024 ANFIER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question