

[Manuals.plus](#) /

> [soges](#) /

> soges Medicine Cabinet Mirror 10FZXJMC24003-91GL User Manual

soges 10FZXJMC24003-91GL

soges Medicine Cabinet Mirror User Manual

Model: 10FZXJMC24003-91GL

INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of your soges Medicine Cabinet Mirror. Please read this manual thoroughly before installation and use, and retain it for future reference.

The soges Medicine Cabinet Mirror is a 36x24 inch arched recessed unit designed for bathroom use. It functions as both a mirror and a storage cabinet, featuring two tempered glass shelves for organizing household items.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- Always turn off power to the wall before installation if any electrical components are involved (this product is unlit, but general safety applies).
- Use appropriate safety gear, such as gloves and eye protection, when handling heavy items or tools.
- Ensure the wall structure can adequately support the weight of the cabinet before installation. Consult a professional if unsure.
- Keep the cabinet away from direct heat sources.
- Do not place heavy objects on the shelves that could exceed their weight capacity and cause them to break.
- Supervise children around the cabinet to prevent accidents.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Medicine Cabinet Mirror Unit (with integrated mirror door)
- Tempered Glass Shelves (2)
- Mounting Hardware (screws, anchors, etc.)
- Instruction Manual

SETUP AND INSTALLATION

The medicine cabinet is designed for wall-mounted, recessed installation. Follow these steps carefully for proper assembly and mounting.

Tools Required (Not Included):

- Measuring Tape
- Pencil
- Level
- Drill
- Screwdriver
- Stud Finder (recommended)

Installation Steps:

1. **Prepare the Wall:** Identify the desired location for the cabinet. Ensure there are no electrical wires or plumbing in the wall cavity where the cabinet will be recessed. Mark the cutout dimensions on the wall. The cabinet dimensions are approximately 24 inches (W) x 35.8 inches (H) x 3.3 inches (D) for the recessed portion.
2. **Cut the Opening:** Carefully cut an opening in the wall according to the marked dimensions. Ensure the opening is level and plumb.
3. **Insert the Cabinet:** Gently slide the cabinet body into the prepared wall opening. Ensure it fits snugly and is flush with the wall surface.
4. **Secure the Cabinet:** Use the provided mounting hardware to secure the cabinet to the wall studs or use appropriate wall anchors if studs are not accessible. Ensure the cabinet is firmly attached and level.
5. **Install Glass Shelves:** Insert the two tempered glass shelves into the desired positions within the cabinet. The shelves are adjustable.

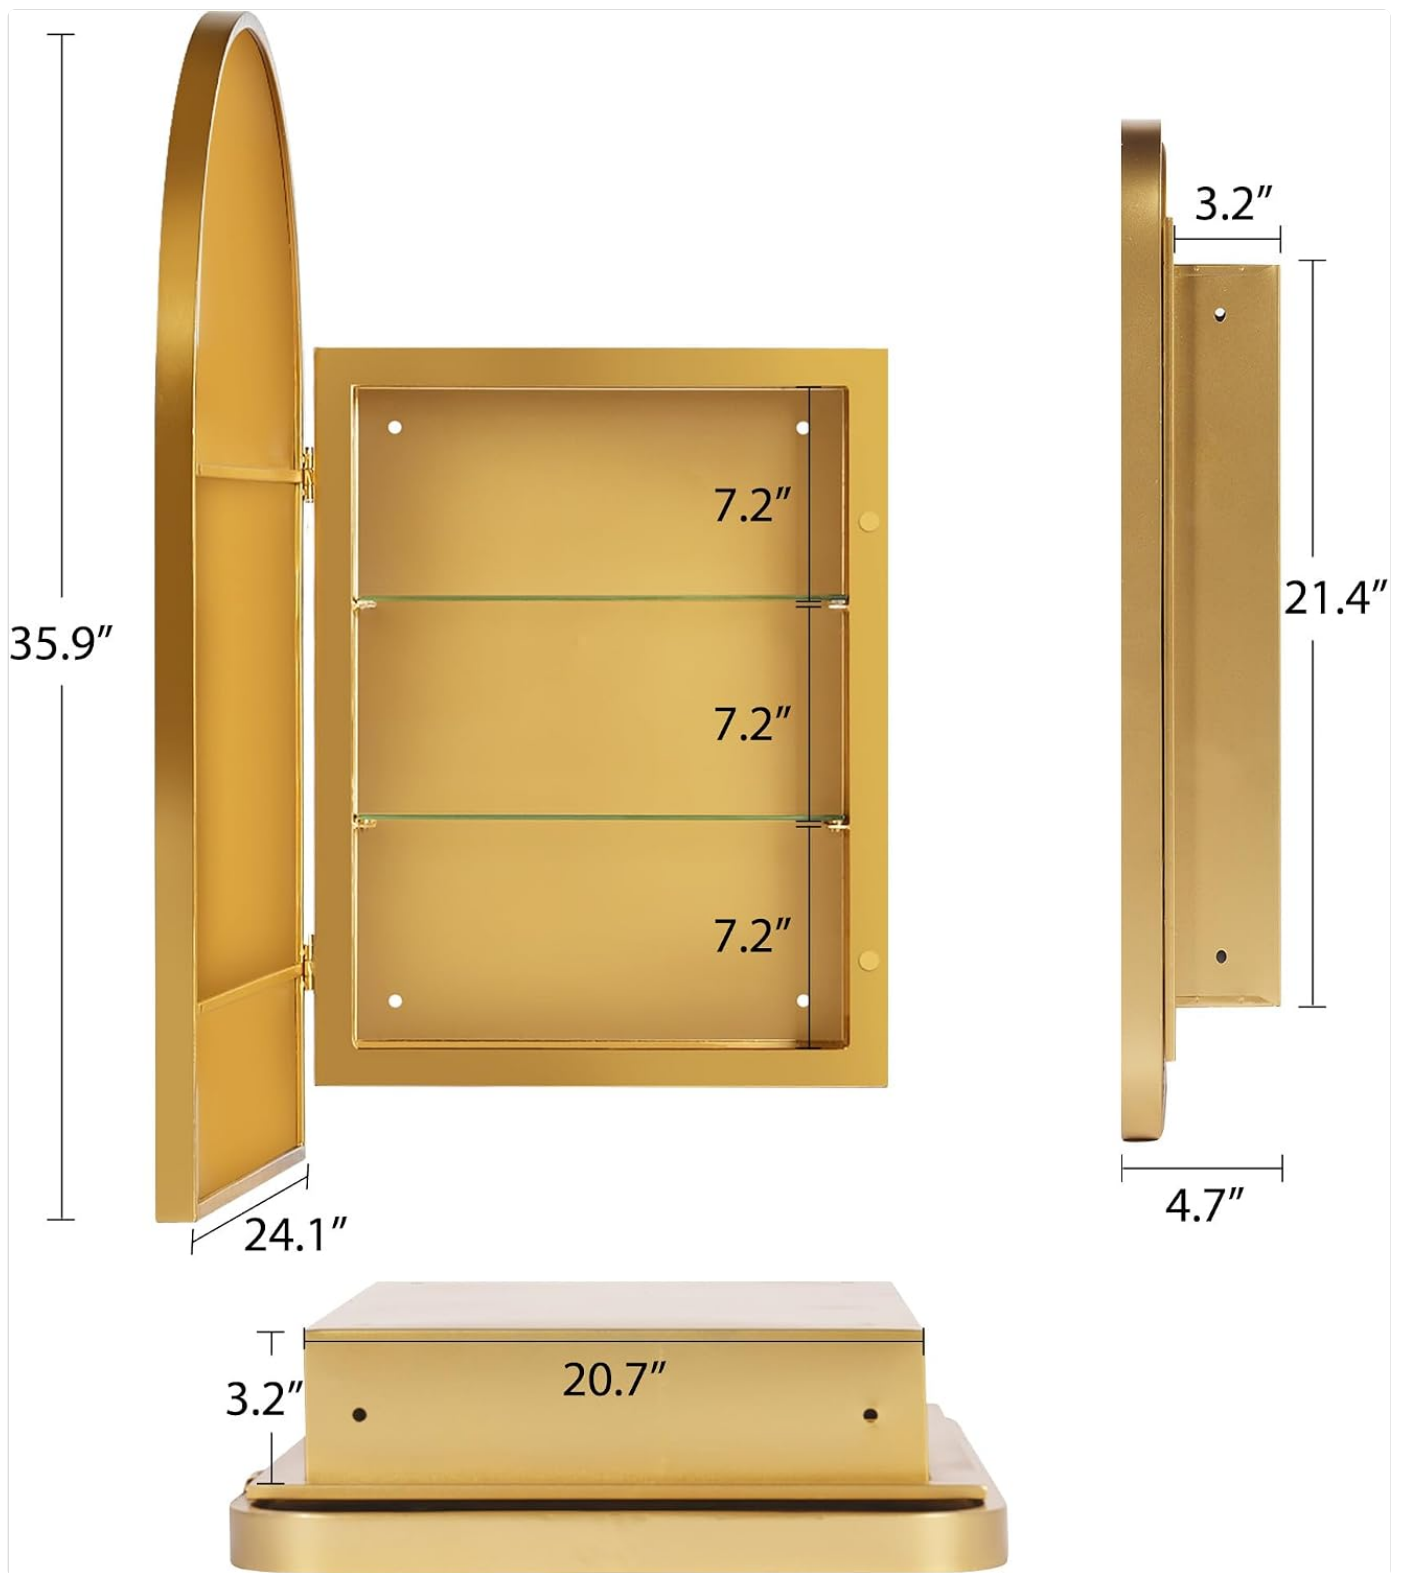


Figure 1: Product Dimensions and Internal Layout. This diagram illustrates the overall measurements of the cabinet and the spacing of the two internal tempered glass shelves.

ADJUSTABLE GLASS SHELVES



Figure 2: Shelf Adjustment and Hardware Details. This image highlights the adjustable tempered glass shelves, the robust hinges, and the magnetic door closure mechanism.

OPERATING INSTRUCTIONS

The soges Medicine Cabinet Mirror is designed for simple operation.

- **Opening the Door:** Gently pull the mirror door to open the cabinet. The magnetic catch will release.
- **Closing the Door:** Push the mirror door closed until the magnetic catch engages, holding it securely.
- **Adjusting Shelves:** The tempered glass shelves can be repositioned to accommodate items of various heights. Carefully lift a shelf, move the support pins to a new slot, and then reinsert the shelf. Ensure shelves are securely seated before placing items on them.



Figure 3: Cabinet in Use. This image shows the medicine cabinet installed in a bathroom, with the door open to display its storage capacity and organization.

MAINTENANCE

Regular cleaning and care will help maintain the appearance and functionality of your medicine cabinet.

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a standard glass cleaner to clean the mirror surface. Spray cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into edges.
- **Cleaning the Cabinet Frame:** Wipe the metal frame with a soft, damp cloth. For stubborn marks, a mild, non-abrasive cleaner can be used. Dry thoroughly immediately after cleaning. Avoid harsh chemicals or abrasive materials.
- **Cleaning Glass Shelves:** Remove shelves and wash with mild soap and water, or a glass cleaner. Rinse thoroughly and dry completely before returning them to the cabinet.
- **Hardware Inspection:** Periodically check hinges and mounting screws for tightness. Tighten as necessary to ensure stability.

TROUBLESHOOTING

If you encounter issues with your medicine cabinet, refer to the following common solutions.

- **Door does not close properly:** Check if anything is obstructing the door or if the magnetic catch is misaligned. Ensure the cabinet is level.
- **Shelves are wobbly:** Ensure the shelf support pins are fully inserted into the cabinet holes and that the shelves are seated correctly on the pins.
- **Cabinet feels loose on the wall:** Re-check all mounting screws and anchors. Tighten any loose fasteners. If the issue persists, consult a professional installer.

SPECIFICATIONS

Brand	soges
Model Number	10FZXJMC24003-91GL
Color	Gold
Material	Aluminum (Frame), Metal (Body), Tempered Glass (Shelves)
Product Dimensions (Overall)	3.3"D x 24"W x 35.8"H
Item Weight	23.9 Pounds
Number of Shelves	2 (Adjustable)
Mounting Type	Wall Mount (Recessed)
Shape	Arched
Assembly Required	Yes

WARRANTY

Specific warranty information for this product may vary. Please refer to the product packaging or contact soges customer support for details regarding warranty coverage and terms.

CUSTOMER SUPPORT

For assistance with installation, troubleshooting, or to report missing/damaged parts, please contact soges customer support. Visit the official soges store for more information:

[soges Official Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DK72SRZL>

More documents and user manuals: **<https://manuals.plus/>**