

Mepplzian 20x30-Wood Led Front

Mepplzian Black Medicine Cabinet with Lights (20x30-Wood Led Front) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Mepplzian Black Medicine Cabinet with Lights. This model features a 20x30 inch mirror with front LED lighting, offering three color temperatures and stepless dimming. It can be installed as either a recessed or wall-mounted unit, providing versatile storage solutions for your bathroom.

SAFETY INFORMATION

- Always follow the assembly instructions carefully.
- Ensure the wall can support the weight of the cabinet before installation.
- Use appropriate safety gear when handling and installing the cabinet.
- Do not force the cabinet into place; if it does not fit, check your measurements and try again.
- Disconnect power before any installation or maintenance.
- This product is designed for indoor use in dry environments.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Medicine Cabinet with Integrated LED Mirror
- Adjustable Glass Shelves (3)
- Mounting Hardware Kit
- Instruction Manual

SPECIFICATIONS

Feature	Detail
Brand	Meplzian
Model Name	LED Medicine Cabinet
Product Dimensions	4.5"D x 20.1"W x 29.9"H
In-Wall Cabinet Dimensions	17.3"W x 25.2"H x 3.9"D
Mounting Type	Recessed or Wall Mounted
Light Features	3-Color Temperature (3000K, 4500K, 6500K), Stepless Dimming (5%-100% Brightness)
Number of Shelves	3
Frame Material	Aluminum
Cabinet Material	Engineered Wood (FSC-certified)
Mirror Type	HD Reflection, Copper-Silver Free
Item Weight	29.6 pounds

Setup and Installation

Your medicine cabinet offers two installation methods: recessed or wall-mounted. Choose the method that best suits your bathroom design and wall structure.

1. Measure and Prepare

Carefully measure the desired location for your cabinet. For recessed installation, ensure the wall cavity dimensions match the required cut-out size.

2 Ways on the wall




Recessed




Wall Mounted

Image: Dimensions for Recessed Medicine Cabinet. The mirror measures 20.1 inches wide by 29.9 inches high. The required wall cut size is 17.3 inches wide by 25.2 inches high, with a depth of 3.9 inches.

Optional for **Recessed**

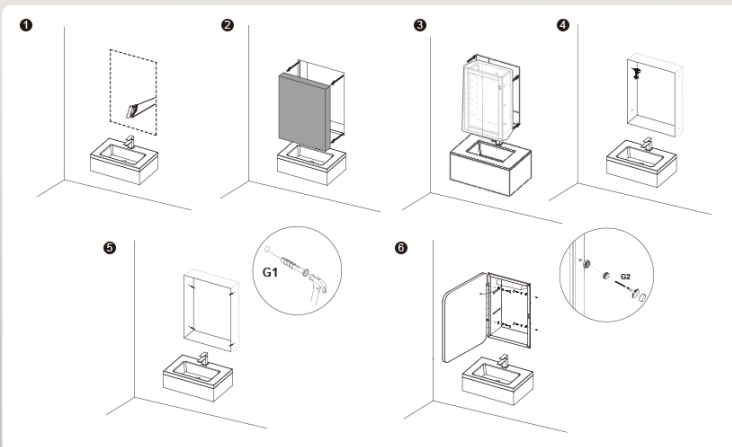

Optional for **Wall mounted**

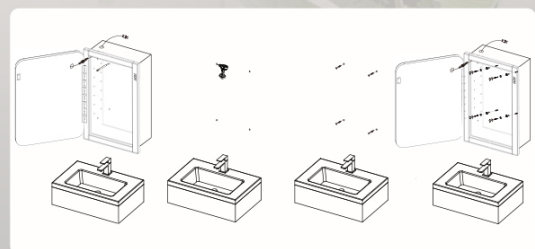

⚠ SEE INSTALLATION GUIDE AND WALL CUT OUT SIZES

Image: Wall Cut Size and Cabinet Dimensions. This diagram provides detailed measurements for the wall opening and the cabinet itself, crucial for recessed mounting.

2. Choose Installation Method

Decide between recessed (in-wall) or wall-mounted installation. Both options are supported by the cabinet's design.



Image: Recessed vs. Wall Mounted Installation. This image visually demonstrates the two available installation methods for the medicine cabinet.

3. Follow Installation Steps

Refer to the detailed installation diagrams provided. Ensure all mounting hardware is securely fastened according to the chosen method.


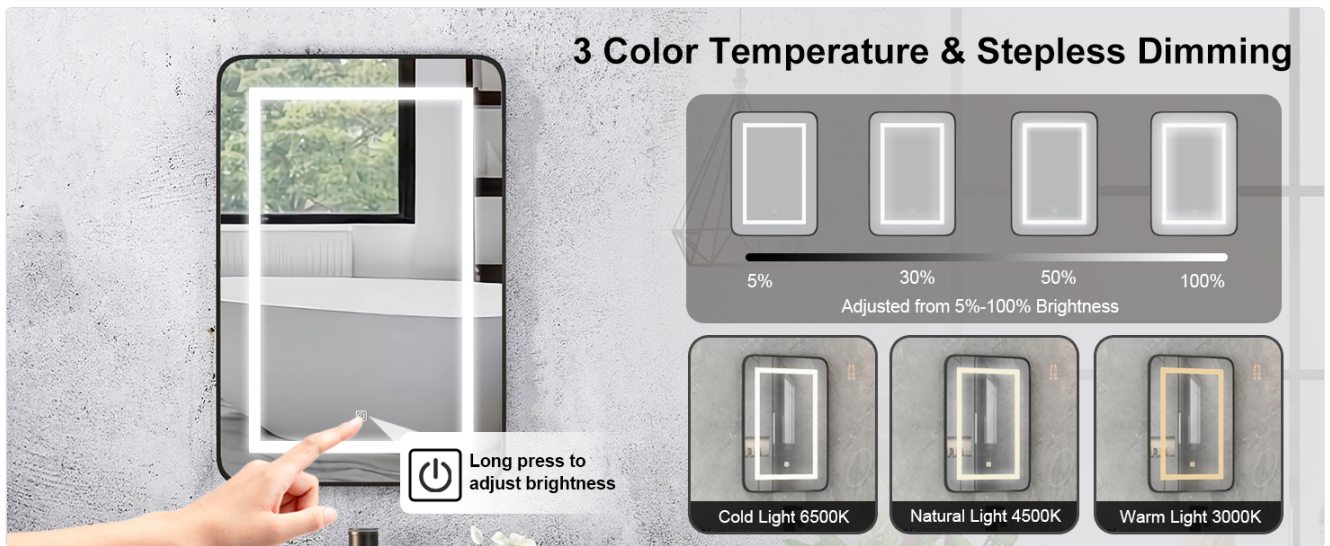


Image: Installation Guide. This image provides visual steps for both recessed and wall-mounted installations, including preparing the wall and securing the cabinet.

4. Power Connection

The cabinet can be powered via a standard wall outlet or by hardwiring. Consult a qualified electrician for hardwiring to ensure safety and compliance with local codes.

NO COPPER-SILVER MIRROR WITH HD REFLECTION

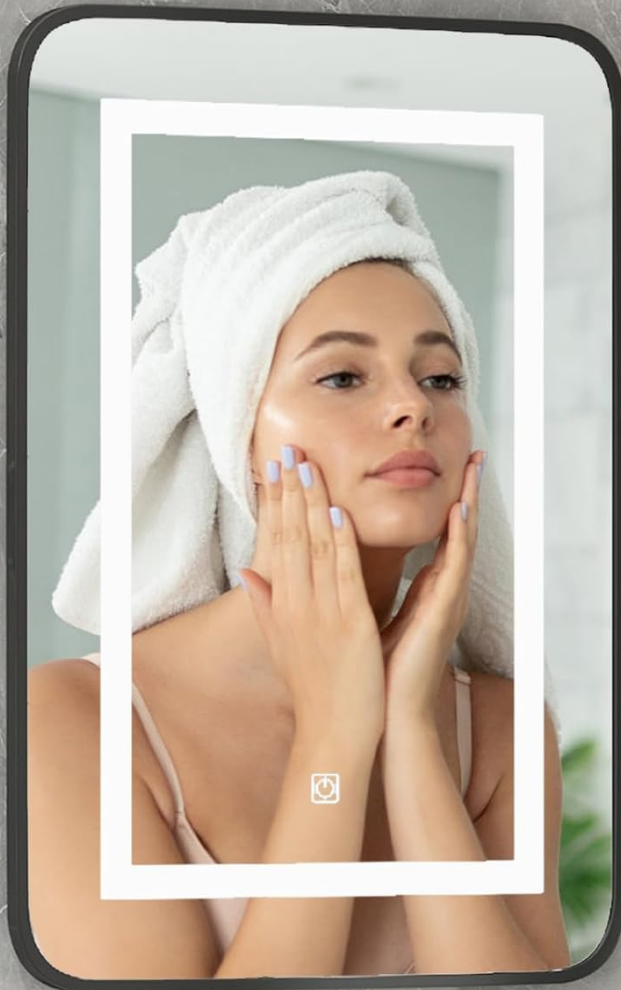

...

The HD mirror reflects the most realistic skin condition

Image: Two Power Supply Methods. Option 1 shows hardwiring the unit by cutting the plug, and Option 2 shows connecting to a standard wall outlet.

5. Interior Features

The cabinet includes three built-in shelves for organized storage. The door features a strong, long hinge for durability and a safe arc corner design.

2 power supply methods

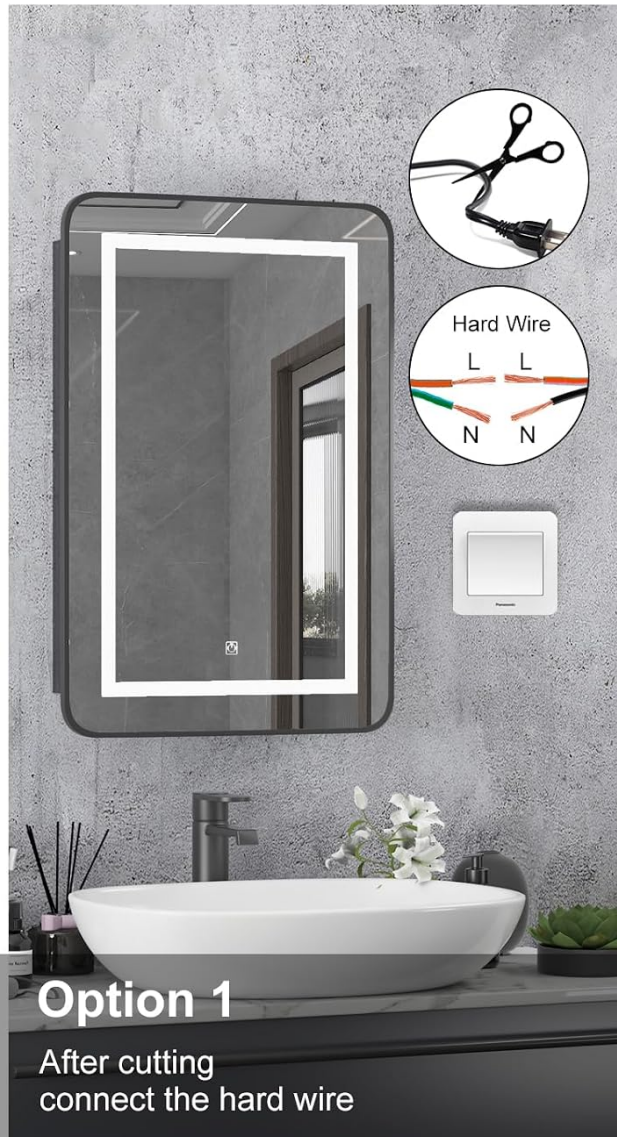


Image: Cabinet Interior and Features. This image displays the internal shelving for storage, along with details on the high-quality MDF construction, safe arc corners, and robust hinges.

OPERATING INSTRUCTIONS

The integrated LED mirror provides adjustable lighting for various needs.

1. Power On/Off

Locate the touch sensor on the mirror surface. A short press will turn the lights on or off.

2. Adjust Color Temperature

With the lights on, short press the touch sensor repeatedly to cycle through the three available color temperatures: Cold Light (6500K), Natural Light (4500K), and Warm Light (3000K).

3. Adjust Brightness (Stepless Dimming)

To adjust brightness, long press the touch sensor. The brightness will gradually increase or decrease. Release the sensor when the desired brightness level (from 5% to 100%) is reached.

3 Color Temperature

Stepless Dimming

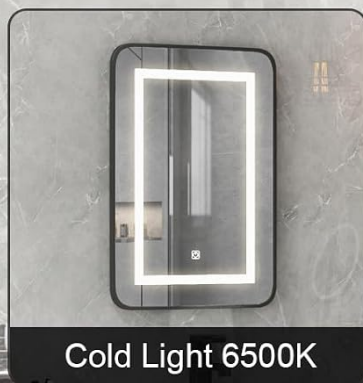
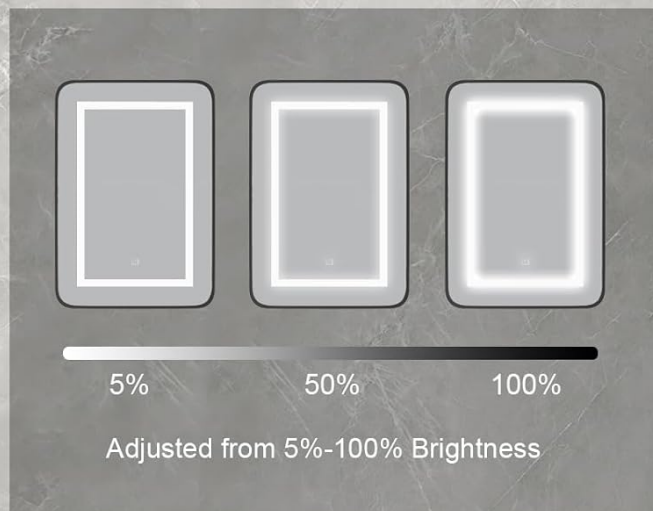


Image: 3 Color Temperature and Stepless Dimming. This image shows the different light color temperatures (6500K, 4500K, 3000K) and the range of brightness adjustment from 5% to 100%.

4. Mirror Quality

The mirror is designed with HD reflection and is copper-silver free, providing a clear and realistic reflection.

Recessed Medicine Cabinet Size

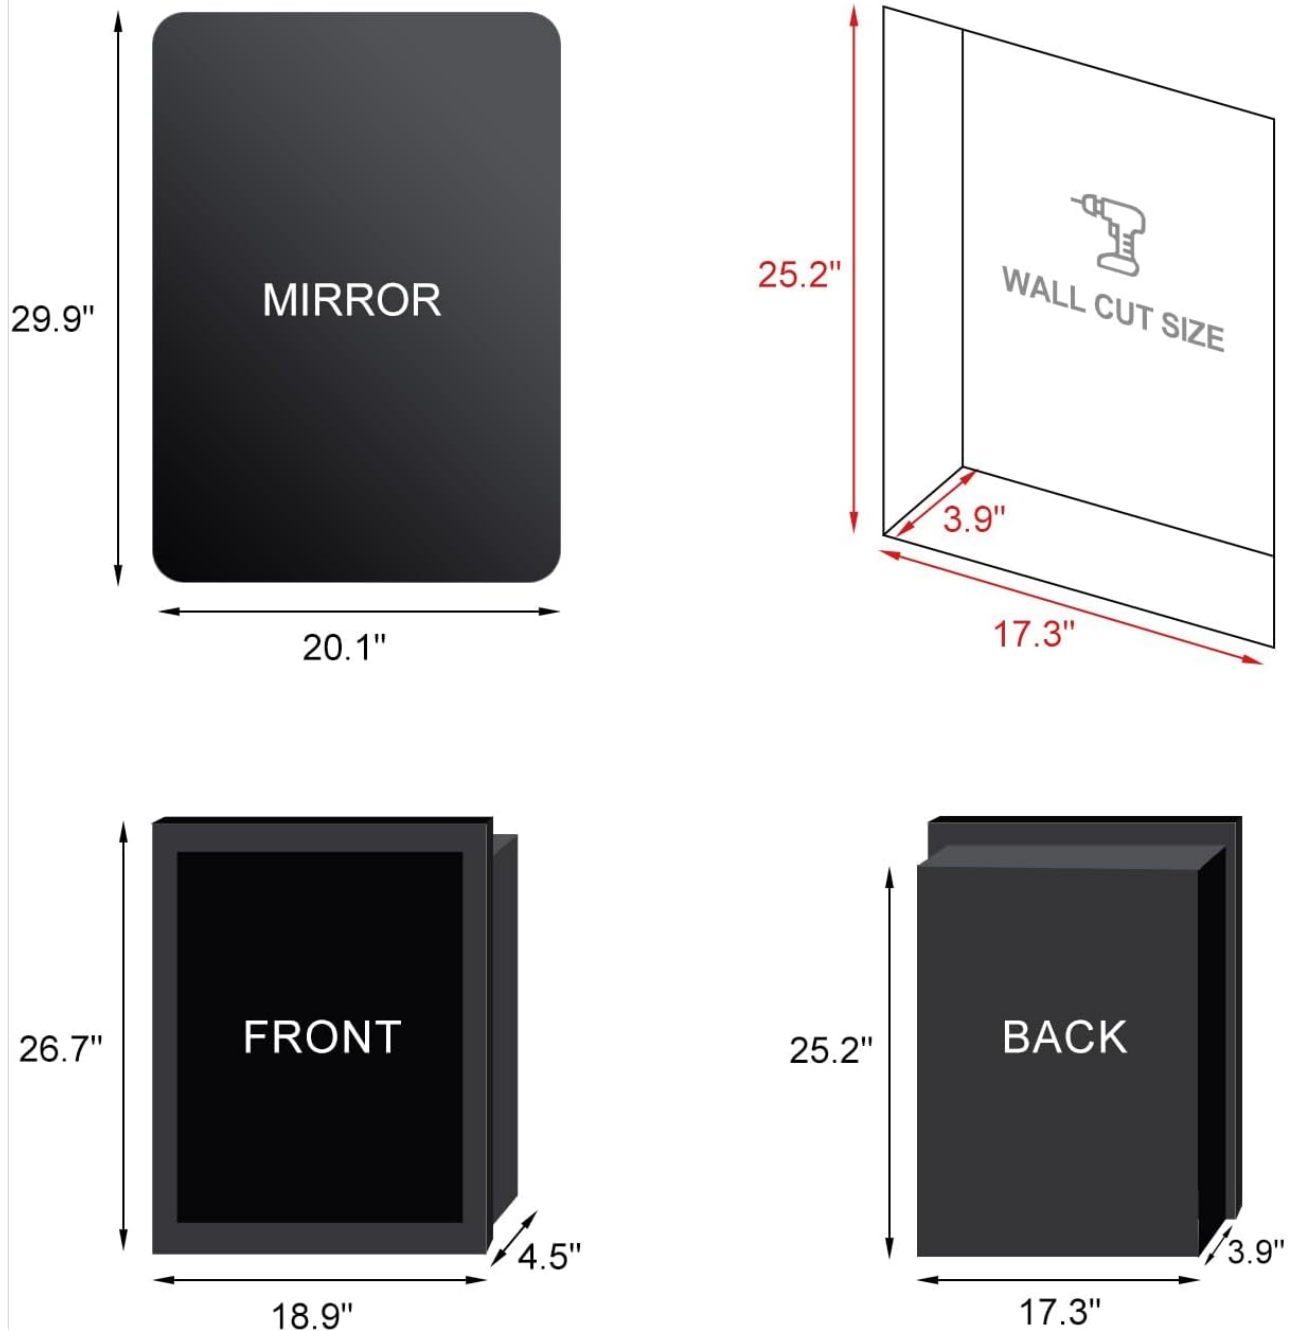


Image: HD Reflection Mirror. This image highlights the high-definition, copper-silver free mirror surface, designed for clear and accurate reflections.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your medicine cabinet.

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to prevent liquid from seeping into the edges.
- **Cleaning the Cabinet:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Electrical Components:** Ensure the power is off before cleaning any electrical parts. Do not spray water

directly onto the light components.

- **Hinges:** Periodically check the hinges for tightness and smooth operation. Tighten screws if necessary.

TROUBLESHOOTING

If you encounter any issues with your medicine cabinet, refer to the following common problems and solutions:

- **Lights Not Turning On:**
 - Check if the power supply is connected correctly and the outlet is functional.
 - Ensure the main power switch (if hardwired) is on.
 - Gently press the touch sensor to ensure proper contact.
- **Lights Flickering or Dim:**
 - Verify the power connection is stable.
 - Adjust the brightness using the stepless dimming function.
- **Door Not Closing Properly:**
 - Check for any obstructions inside the cabinet or around the hinges.
 - Ensure the cabinet is installed level and plumb. Adjust mounting if necessary.
 - Tighten hinge screws if they are loose.
- **Mirror Appears Distorted:**
 - Ensure the mirror surface is clean and free of smudges or residue.
 - Verify the cabinet is mounted on a flat, even surface.

WARRANTY AND SUPPORT

Mepplzian is committed to providing high-quality products. For any questions, concerns, or assistance with your medicine cabinet, please contact Mepplzian customer support. Please refer to your purchase documentation for specific warranty details and contact information.

You can visit the [Mepplzian Store](#) for more information and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question