

TokeShimi 9db4f41b-aeec-4eb6-95a1-a73ff17ec22f

TokeShimi 20 x 26 Recessed Medicine Cabinet Mirror Instruction Manual

Model: 9db4f41b-aeec-4eb6-95a1-a73ff17ec22f

1. IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before installation and use. Failure to follow these instructions may result in injury or product damage.

- Always unplug and turn off power to the bathroom before installing.
- Use appropriate safety gear during assembly, including gloves and eye protection.
- Be cautious of sharp edges and pinch points during handling and assembly.
- Keep the cabinet away from direct heat sources and excessive moisture.
- Do not overload shelves beyond their recommended weight capacity.
- Always supervise children around the cabinet to prevent accidents.

2. PRODUCT OVERVIEW AND FEATURES

The TokeShimi 20 x 26 Medicine Cabinet Mirror is designed for modern bathrooms, offering versatile storage and a sleek aesthetic. It features a durable aluminum structure and a high-definition tempered mirror.



Figure 2.1: TokeShimi 20x26 Medicine Cabinet Mirror in a modern bathroom setting.

Key Features:

- **Lightweight and Durable Aluminum Structure:** Approximately 65% lighter than traditional wood cabinets, making installation easier. It is waterproof, moisture-proof, and rust-resistant, ensuring longevity in humid bathroom environments.
- **Stepless Adjustable Shelves:** Equipped with two adjustable shelves, allowing for flexible storage configurations to accommodate various item heights.
- **Sleek Frameless Design:** A minimalist aesthetic that complements diverse bathroom decors, from modern to farmhouse.
- **High-Definition Tempered Mirror:** Provides a clear reflection and is designed to be more resistant to breakage compared to standard mirrors, with a shatterproof film for added safety.
- **Soft-Closing Hinges:** Ensures quiet and smooth door operation.
- **Concealed Handle:** For easy and discreet opening.
- **Flexible Mounting Options:** Can be installed as either a recessed or wall-mounted unit. Designed for reversible left or right door installation.

Toke Shimi

Upgraded Aluminum Structure with Tempered Mirror

VS WOOD
WEIGHT
-65%



- Easy Assembly
- Long Lasting
- Moisture-proof
- Rust-proof

Figure 2.2: Benefits of the upgraded aluminum structure, including 65% lighter weight, moisture-proof, and rust-proof properties.

Toke Shimi

Free Adjusting Better Customize Storage



Figure 2.3: Stepless adjustable shelves for customized storage and visual representation of recessed versus surface mounting.


3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Aluminum Cabinet Frame Components (vertical and horizontal sides)
- Cabinet Back Panel
- Mirror Door with Pre-installed Hinges
- Adjustable Glass Shelves (2)
- Shelf Support Clips (clear plastic)
- Mounting Hardware (screws, wall anchors, decorative screw covers)
- Installation and Operating Manual

TokeShimi

Easy to Follow Assembly

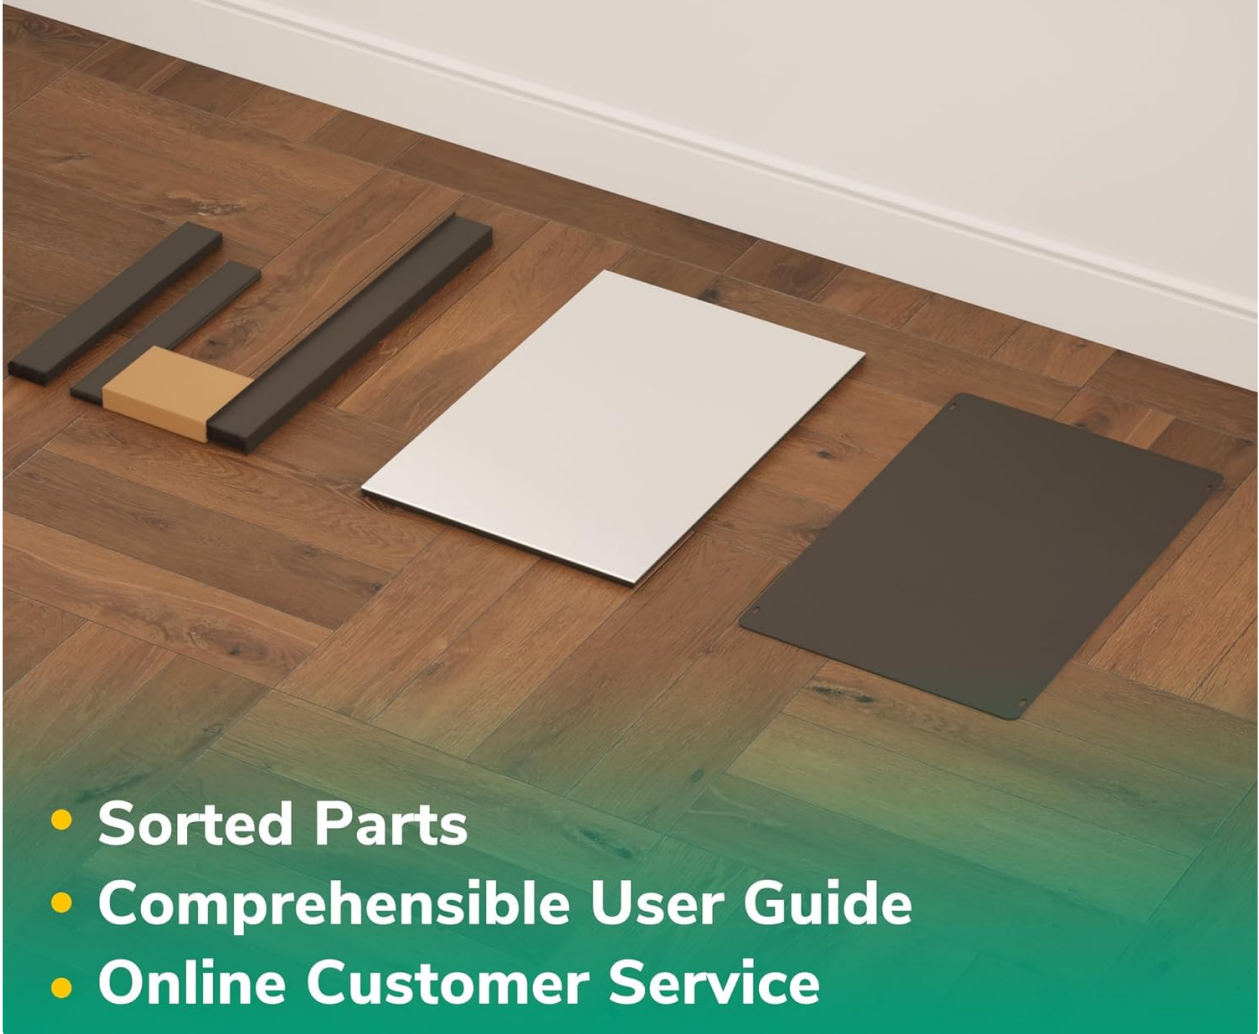

- **Sorted Parts**
- **Comprehensible User Guide**
- **Online Customer Service**

Figure 3.1: Sorted parts for easy assembly, including cabinet components and hardware.

4. INSTALLATION GUIDE

The TokeShimi medicine cabinet offers both surface-mount and recessed installation options. Choose the method that best suits your bathroom design and wall structure.

4.1. Assembly Instructions (Pre-Installation)

1. **Assemble the Cabinet Frame:** Connect the vertical and horizontal aluminum side panels using the provided corner pieces and screws. Ensure all connections are secure.
2. **Insert Back Panel:** Slide the back panel into the grooves of the assembled frame.
3. **Install Shelf Supports:** Insert the clear plastic shelf support clips into the desired holes on the inner side panels. The cabinet features multiple holes for height adjustment.
4. **Attach Mirror Door:** Secure the mirror door to the cabinet frame using the pre-installed soft-closing hinges and screws.

Video not supported. Description: A short video demonstrating the assembly process of the TokeShimi Aluminum Medicine Cabinet, highlighting its features and flexible installation options.

Video 4.1: TokeShimi Aluminum Medicine Cabinet Assembly Overview.

4.2. Surface Mount Installation

1. **Mark Mounting Holes:** Hold the assembled cabinet against the wall at the desired height and location. Use a pencil to mark the positions for the mounting screws through the pre-drilled holes on the back of the cabinet.
2. **Drill Pilot Holes:** Using a power drill, drill pilot holes at the marked locations. Ensure the drill bit size matches the recommended size for your wall anchors.
3. **Insert Wall Anchors:** Gently tap the appropriate wall anchors (expansion buckle for drywall, butterfly buckle for hollow walls) into the pilot holes until they are flush with the wall surface.
4. **Secure Cabinet:** Align the cabinet with the installed wall anchors. Insert the mounting screws through the cabinet's pre-drilled holes and tighten them into the wall anchors until the cabinet is securely fastened to the wall.
5. **Cover Screws:** Apply the decorative screw covers over the visible screw heads inside the cabinet for a clean finish.

Video not supported. Description: A detailed guide demonstrating the steps for wall-mounted installation of the TokeShimi Aluminum Medicine Cabinet, including marking, drilling, and securing the unit.

Video 4.2: Wall-mounted Installation Guide.


4.3. Recessed Mount Installation

Recessed installation requires cutting an opening in your wall. It is recommended to consult a professional if you are unsure about this process.

1. **Determine Cutout Dimensions:** Refer to the 'Cutout Dimension Reference' table in the specifications section or the product diagram for the exact dimensions required for your cabinet size (20x26 IN).
2. **Mark Wall Opening:** Hold the cabinet against the wall and trace its outer edge. Then, mark the precise cutout area on the wall based on the specified recessed dimensions.
3. **Inspect Wall Interior:** Before cutting, use a stud finder and other appropriate tools to inspect the interior of the wall for pipes, electrical wires, or other obstructions. Avoid cutting into these. If obstructions are present, professional assistance is advised.
4. **Cut Wall Opening:** Carefully cut the marked opening in the wall using a drywall saw or similar tool.
5. **Refine Studs (if necessary):** If the opening requires cutting into studs, refine the studs within the wall cavity and construct a frame for the opening to ensure structural integrity and a secure fit for the cabinet.
6. **Drill Holes for Anchors:** Drill pilot holes and insert wall anchors into the framing of the cutout opening as needed for additional support.
7. **Insert Cabinet:** Carefully slide the cabinet into the prepared wall opening.
8. **Secure Cabinet:** Secure the cabinet to the wall framing using screws through the pre-drilled holes inside the cabinet.
9. **Cover Screws:** Apply the decorative screw covers over the visible screw heads inside the cabinet.

Cutout Dimension Reference

Size	Height(in)	Width(in)	Depth(in)
14"×18"	17.72	13.39	≥3.58
16"×24"	23.62	15.75	≥3.58
16"×26"	25.59	15.75	≥3.58
16"×20"	19.69	15.75	≥3.58
20"×26"	25.59	19.69	≥3.58
20"×32"	31.50	19.69	≥3.58
24"×32"	31.50	23.62	≥3.58
30"×26"	25.59	29.53	≥3.58
36"×24"	23.62	35.43	≥3.58
36"×32"	31.50	35.43	≥3.58
40"×32"	31.50	39.37	≥3.58
48"×32"	31.50	47.24	≥3.58

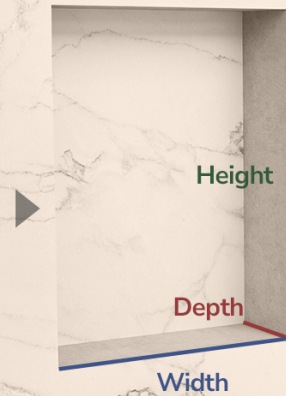

▸ Side View



▸ Top View



Figure 4.1: Cutout Dimension Reference for Recessed Installation.

Video not supported. Description: A detailed guide demonstrating the steps for recessed installation of the TokeShimi Aluminum Medicine Cabinet, including wall preparation and securing the unit.

Video 4.3: Recessed Installation Guide.

5. OPERATING INSTRUCTIONS

5.1. Adjusting Shelves

The cabinet features stepless adjustable shelves, allowing you to customize the storage space to fit items of various heights.

1. **Remove Items:** Clear all items from the shelf you wish to adjust.
2. **Remove Shelf:** Carefully lift the glass shelf from its support clips.
3. **Reposition Clips:** Remove the clear plastic shelf support clips from their current holes. Insert them into the new desired holes at the appropriate height. Ensure the clips are securely seated and level.
4. **Reinsert Shelf:** Place the glass shelf back onto the repositioned support clips.



Figure 5.1: Stepless adjustable shelves for maximum storage flexibility.

5.2. Adjusting Mirror Door Hinges

If the mirror door is not perfectly aligned or closes improperly, the hinges can be adjusted.

1. **Locate Adjustment Screws:** The hinges have multiple screws for adjustment. Typically, one screw adjusts the depth, another adjusts the side-to-side position, and a third adjusts the height.
2. **Make Small Adjustments:** Use a screwdriver to make small turns to the appropriate screws. Test the door's alignment and closing after each adjustment.
3. **Tighten Screws:** Once the desired alignment is achieved, ensure all hinge screws are tightened.

6. MAINTENANCE AND CARE

To ensure the longevity and appearance of your TokeShimi medicine cabinet, follow these care instructions:

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to prevent liquid from seeping into the edges.
- **Cleaning the Cabinet:** Wipe the aluminum frame and interior shelves with a soft, damp cloth. For stubborn spots, use a mild, non-abrasive cleaner. Dry thoroughly with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, ammonia-based products, or harsh chemicals, as these can damage the finish and mirror.
- **Prevent Moisture Buildup:** While the cabinet is moisture-proof, it's good practice to wipe away any standing water or excessive condensation to maintain its pristine condition.

7. TROUBLESHOOTING

7.1. Missing or Defective Parts

If you receive your cabinet with missing or defective parts, such as a broken mirror or a faulty screw:

- **Contact Customer Service:** Refer to the 'Warranty and Support' section for instructions on how to contact TokeShimi customer service directly.
- **Provide Details:** Be prepared to provide photos of the damaged part and your order information.
- **Free Replacement:** TokeShimi offers free replacements for broken or wrong mirrors, and will send replacement parts if needed.

7.2. Door Not Closing Properly

If the mirror door does not close smoothly or is misaligned:



- **Adjust Hinges:** Follow the instructions in Section 5.2 to adjust the door hinges. Small adjustments can correct alignment issues.
- **Check for Obstructions:** Ensure nothing inside the cabinet is preventing the door from closing fully.

8. SPECIFICATIONS

Attribute	Value
Brand	TokeShimi
Model Number	9db4f41b-aeec-4eb6-95a1-a73ff17ec22f
Color	Black
Size	20x26 IN
Product Dimensions	4.41"D x 20"W x 26"H
Mounting Type	Recessed/Wall-Mounted
Frame Material	Aluminum
Number of Shelves	2 (Adjustable)
Special Features	Adjustable Shelf, Assembly Required, Lightweight, Moisture Resistant, Rust Resistant
Item Weight	18.15 pounds

TokeShimi

Dimensions After Assembly

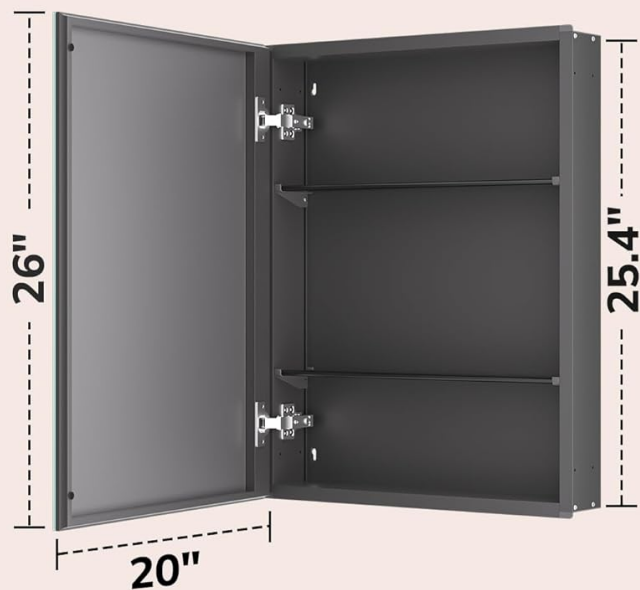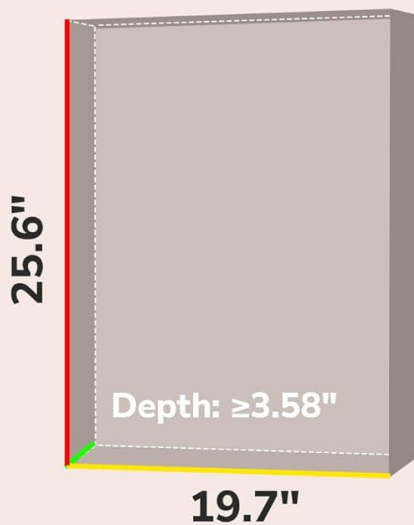

▲ Cutout Dimensions

▲ Cabinet Dimensions

Figure 8.1: Dimensions After Assembly and Cutout Dimensions.

9. WARRANTY AND SUPPORT

TokeShimi is committed to providing high-quality customer service and product support.

- **2-Year Warranty:** We offer a free replacement within 2 years of purchase if the mirror stops working or if there are manufacturing defects.
- **30-Day Free Return:** Products can be returned within 30 days of purchase.
- **24/7 Customer Support:** Our dedicated customer service team is available via email or phone to assist with any questions or issues.

How to Contact Support:


1. Go to the product page on Amazon.
2. Click on "TokeShimi" next to "Sold by" to visit our store or seller profile.
3. Click the "Ask a question" button to open the Seller Messaging Assistant.
4. Follow the prompts, type your question, and click "Send Message". We will respond within 24 hours.

Find Us for Support and Service

- If you need any support before placing an order or after making a purchase, please go to the product page and find us in following steps:

1

• Click "TokeShimi" next to Sold by, and it will take you to the contact page.

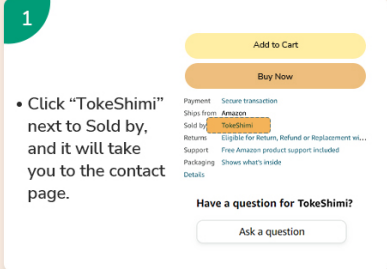

2


About Seller
TokeShimi is committed to providing each customer with the highest standard of customer service.

Have a question for TokeShimi?

Ask a question

- Click the "Ask a question" button and go to the Seller Messaging Assistant.

3

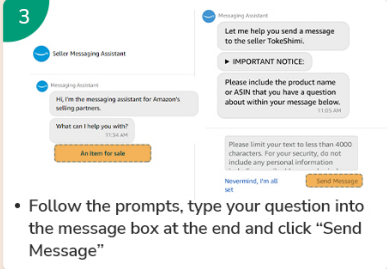

- Follow the prompts, type your question into the message box at the end and click "Send Message"

- Amazon will send the message to us, and we will get back to you within 24 hours.

Figure 9.1: Steps to find and contact TokeShimi customer support.