

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hbada](#) /
- › [Hbada E2 Ergonomic Office Chair Instruction Manual](#)

## Hbada E2

# Hbada E2 Ergonomic Office Chair

## INSTRUCTION MANUAL

Model: E2 | Brand: Hbada

### Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your Hbada E2 Ergonomic Office Chair. Please read this manual thoroughly before assembly and use to ensure proper function and safety. Keep this manual for future reference.

### Safety Information

- Always follow the instructions provided with the chair for proper assembly and use.
- Be cautious when adjusting the chair's parts and when using the reclining function to avoid injury.
- Do not exceed the maximum weight capacity of the chair.
- Ensure all screws and connections are tightened securely before use. Periodically check and re-tighten as needed.
- Keep children and pets away from the chair during assembly.

### Package Contents

Before beginning assembly, verify that all components are present and undamaged. The package should include:


- Chair Base with Wheels
- Pneumatic Cylinder
- Seat Cushion
- Backrest
- Headrest
- Armrests (2)
- Footrest (if included with your model)
- Assembly Hardware (screws, washers, Allen wrench)

## 3D Ergonomic Armrests

Effectively support the elbow



2.95"  
up & down

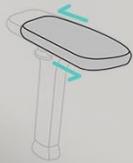

1.97"  
front & back



40°  
left & right



Image: All chair components and hardware neatly organized for assembly.


### Setup and Assembly

Assembly typically takes approximately 30 minutes. Only the provided Allen wrench is required.

1. **Assemble the Base:** Attach the wheels to each leg of the chair base.
2. **Insert Pneumatic Cylinder:** Place the air pneumatic cylinder into the center hole of the assembled base.
3. **Attach Footrest:** Secure the footrest mechanism to the underside of the seat cushion.
4. **Install Armrests:** Screw both armrests into their designated positions on the underside of the seat cushion.
5. **Connect Backrest:** Attach the backrest support to the back of the seat cushion using the provided screws.
6. **Combine Seat and Base:** Carefully place the assembled seat and backrest onto the pneumatic cylinder, ensuring it is firmly seated.
7. **Attach Headrest:** Slide the headrest onto the top of the backrest until it clicks into place or is securely fastened.

# 6-Way Adjustable Lumbar Support

Large circular design, 6-way adjustable waist protection

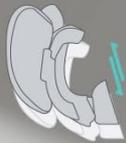

2.36"  
up & down



1.97"  
front & back



10°  
left & right



Image: The Hbada E2 Ergonomic Office Chair fully assembled and ready for use.

## Operating Instructions and Adjustments

The Hbada E2 chair offers multiple adjustment options for personalized comfort:

- **Chair Height Adjustment:** Use the lever located under the seat to raise or lower the chair to your desired height. Pull the lever up while seated to lower, or pull up while standing to raise.
- **6-Way Adjustable Lumbar Support:** The lumbar support can be adjusted vertically (up to 2.36 inches), forward and backward (up to 1.97 inches), and floats 10 degrees left and right. This provides comprehensive support for your lower back.



Image: Detailed view of the 6-way adjustable lumbar support mechanism.

- **3D Adjustable Armrests:** Adjust the armrests in three dimensions: height (up to 2.95 inches), forward and backward (up to 1.97 inches), and rotation (40 degrees left and right). This allows for optimal elbow and arm support.



Image: Illustration of the multi-directional adjustments for the armrests.

- **3D Adjustable Headrest:** The headrest can be adjusted vertically (up to 3.93 inches), forward and backward (up to 1.57 inches), and rotated 60 degrees to support various heights and body types, relieving neck pressure.



Image: Visual guide for adjusting the headrest for optimal neck support.

- **Reclining Function with 3 Lockable Angles:** The chair reclines up to 135 degrees. Use the lever to adjust and lock the tilt at 90 degrees (comfortable office), 115 degrees (leisure and entertainment), or 138 degrees

(short nap).



Image: Different reclining positions of the chair for various activities.

- **Footrest:** If your model includes a footrest, it can be pulled out from under the seat and flipped over to provide leg support for relaxation.

## Key Features

- **Innovative Ergonomic Design:** The Hbada E2 incorporates advanced technology for comfortable posture, featuring an adjustable headrest, 6-way adjustable lumbar support, 3D armrests, breathable mesh fabric, reclining function, and a gravity-sensing chassis.
- **Breathable Mesh Fabric:** The chair features a completely breathable and durable mesh design for improved air permeability and comfort, especially during long periods of use.

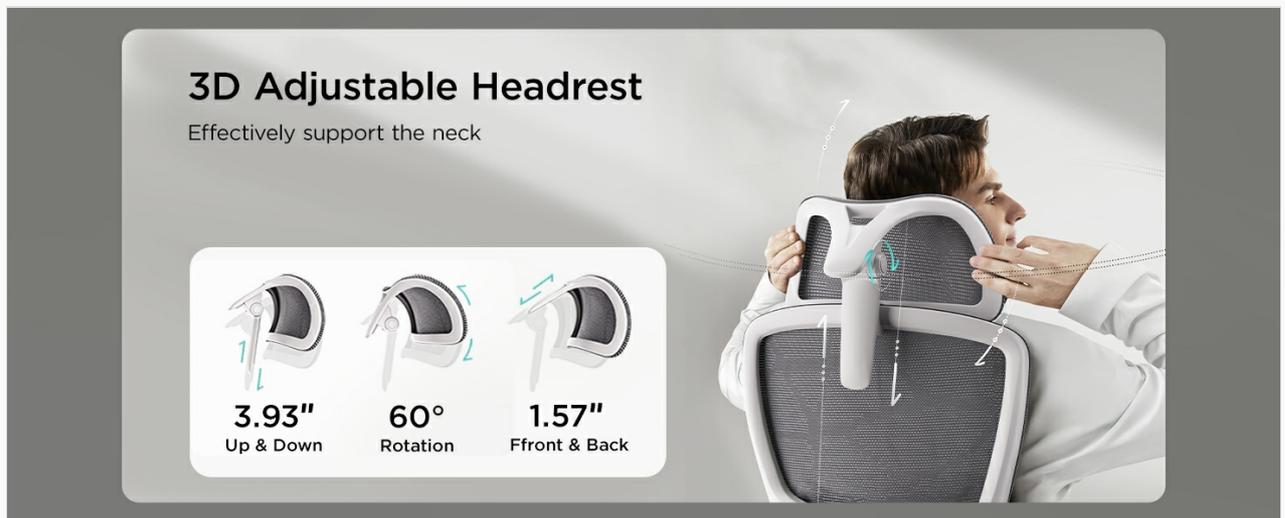


Image: Detail of the breathable mesh material used in the chair's construction.

- **Gravity-Sensing Functional Chassis:** Allows for smooth reclining at different user weights.
- **Aluminum Alloy Wired Control Adjustment:** Provides one-button control for adjustments without needing to bend down.

## Coordinated Wired Control Base

Leading special balanced structure, supports up to 138° recline



Image: Close-up of the wired control lever for convenient adjustments.

- **Durable Components:** Features an SGS certified gas lift, PU-wrapped silent casters, and a high-load-bearing metal five-claw base for stability and longevity.

## 3 Level Locking

Adaptable to different scene requirements



90° Comfortable office



115° Leisure and entertainment



138° Short nap

Image: Key durable components of the chair, including the gas lift, casters, and base.

- **BIFMA Standard Tested:** Tested for a 10-year lifespan, including 120,000 backrest push tests, 102kg backrest pull tests, 60,000 armrest adjustment tests, 120,000 times 78kg load tests, 120,000 gas lift height adjustment tests, and 100,000 caster rolling tests.

## Aluminum Alloy Wired Control Adjustment

Simply toggle the adjuster for one-touch operation, no need to bend over

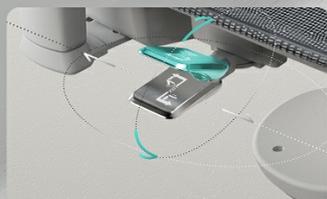


Image: Summary of durability tests passed by the chair.

- **Cleaning:** Wipe down mesh and plastic surfaces with a damp cloth and mild soap. Avoid harsh chemicals.
- **Inspection:** Periodically check all bolts and screws to ensure they are tight. Re-tighten if necessary.
- **Caster Care:** Keep casters free of hair and debris to ensure smooth rolling.
- **Gas Lift:** Do not attempt to disassemble the gas lift. If it malfunctions, contact customer support.

## Troubleshooting

- **Chair Squeaks:** Check and tighten all assembly screws. A small amount of silicone spray on moving parts may help.
- **Chair Does Not Adjust Height:** Ensure the pneumatic cylinder is correctly installed and the lever mechanism is functioning. If issues persist, the gas lift may need replacement.
- **Casters Not Rolling Smoothly:** Clean any debris (hair, dust) from the caster wheels.
- **Backrest/Armrests Feel Loose:** Re-tighten the screws connecting these components to the seat.

## Specifications

Feature	Detail
Brand	Hbada
Model	E2
Color	White
Product Dimensions	30.51"D x 22.24"W x 18.11"H
Back Style	Mesh
Fill Material	Foam
Material	Alloy Steel
Reclining Position Count	3
Indoor/Outdoor Usage	Indoor

## Warranty and Support

Hbada is committed to providing high-quality products and customer satisfaction. For any issues or inquiries, please contact Hbada customer support.

- **Parts Replacement:** Parts are replaced, not repaired.
- **Return Policy:** 30-day return policy.
- **Guaranteed Price:** 15-day guaranteed price.
- **Damaged Upon Arrival:** Repair and replacement guaranteed.

Additional protection plans may be available for purchase, offering extended coverage for 2 or 3 years.

