

Paddie BU9069

Paddie Professional Fully Electric Spa Chair (Model BU9069) User Manual

Important Safety Information and Operating Instructions

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Paddie Professional Fully Electric Spa Chair, Model BU9069. Please read all instructions carefully before assembly and use to ensure proper function and longevity of the product. Keep this manual for future reference.

2. SAFETY INFORMATION

WARNING: Do not exceed the maximum weight capacity of 250kg (550lbs). To clean, use a damp cloth and avoid harsh chemicals. Keep away from heat sources and sharp objects to prevent damage to the chair.

- Ensure the power cord is securely connected and not damaged. Do not operate the chair with a frayed or damaged cord.
- Do not operate the chair if any part is damaged or malfunctioning. Contact customer support for assistance.
- Keep hands, hair, and loose clothing clear of moving parts during operation to prevent injury.
- Always lower the chair to its lowest position when not in use or when unattended.
- This chair is intended for indoor use only.
- Ensure the chair is placed on a stable, level surface before use.

3. PRODUCT FEATURES

- **Fully Motorized Adjustment:** Equipped with 3 independent motors for electric adjustment of the backrest, leg rest, and overall height.
- **Dual Control Methods:** Operable via a wired hand remote control and integrated foot pedal controls.
- **Adjustable Height Range:** Height can be adjusted from 25.4 inches to 30.7 inches.
- **Backrest Angle Adjustment:** Backrest adjusts from 0° (flat) to 90° (upright).
- **Footrest Angle Adjustment:** Leg rest adjusts from 0° (flat) to 90° (downward).
- **Integrated LED Light:** The chair's base features LED lighting for ambient illumination.
- **Ergonomic Design:** Wide backrest and adjustable angles conform to body curves for enhanced client comfort and spinal support.
- **Convertible Footrest:** The footrest can be positioned to provide firm padding for relaxation.



- **Spacious Dimensions:** Offers a 27.0-inch wide seating area.
- **High Stability and Durability:** Constructed with a seamless fixed surface, heavy-duty steel frame, reinforced corners, and anti-slip foot pads.
- **Weight Capacity:** Supports a maximum load of 250kg (550lbs).
- **Premium Materials:** Made with wear-resistant PU leather and 4.3-inch thickened high-resilience foam for comfort and longevity.
- **Detachable Headrest:** Includes an enlarged and detachable headrest pillow for versatility.
- **Easy to Clean:** The PU leather surface is designed for simple maintenance and can be wiped clean.

4. PACKAGE CONTENTS

The Paddie Professional Fully Electric Spa Chair is shipped in two separate packages to ensure safe delivery of all components.

- **Box 1:** Top Cushion
- **Box 2:** Electric Frame

PERFECT COMBINATION OF STYLE AND PRACTICALITY

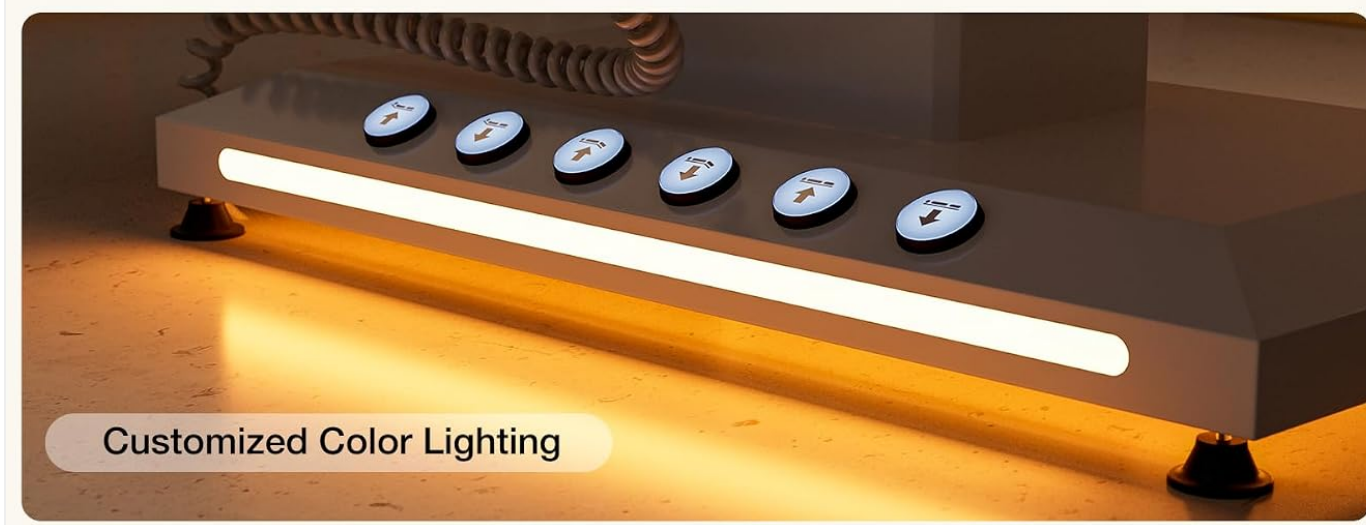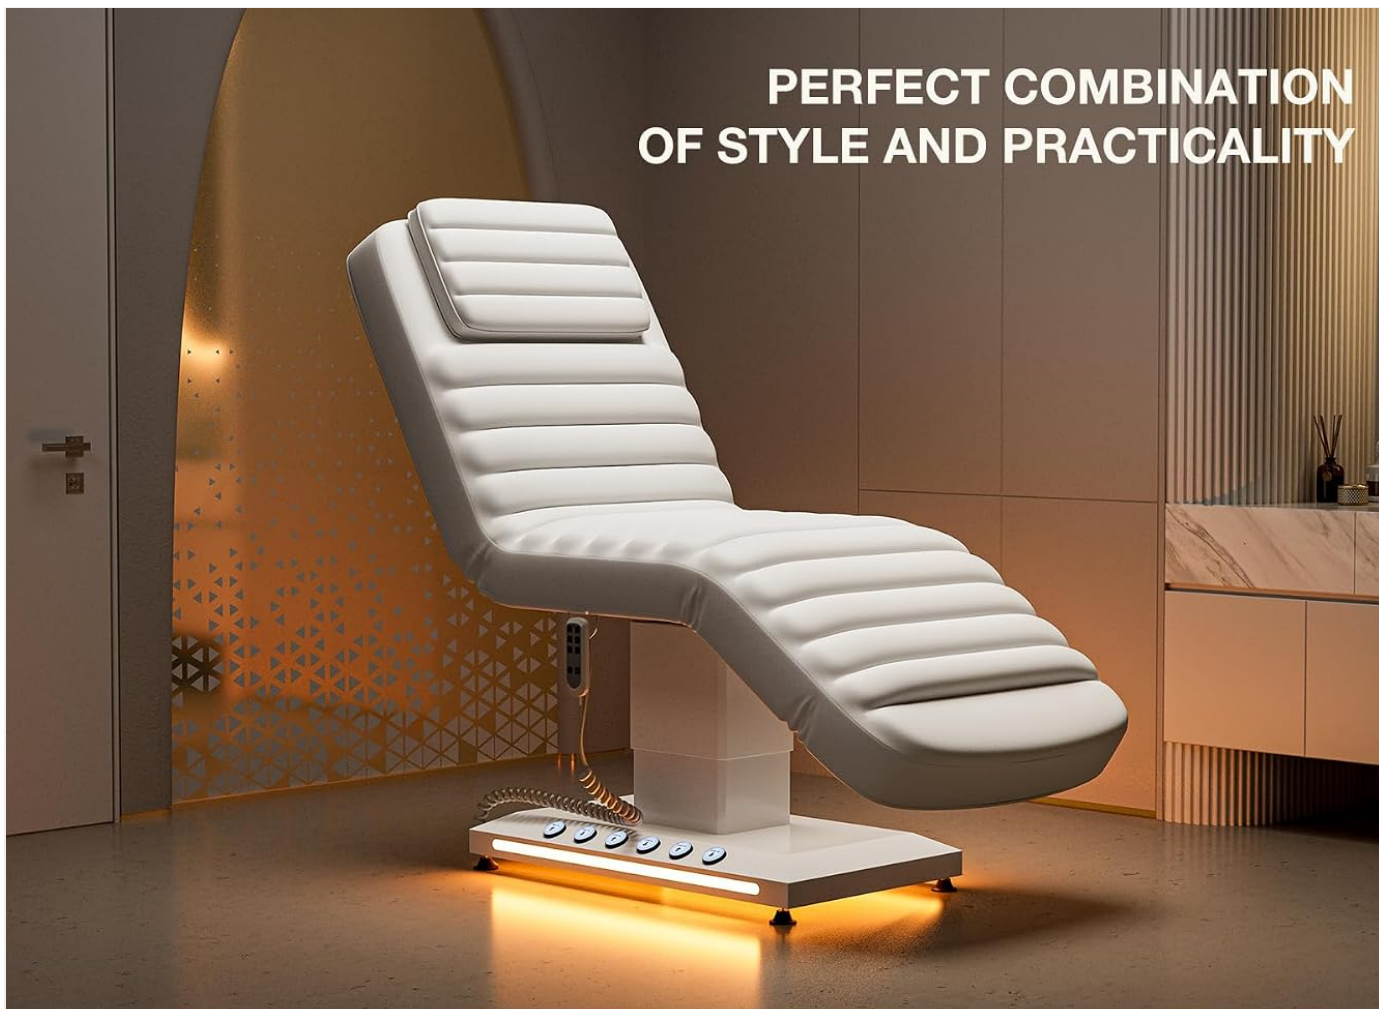

Customized Color Lighting

This image illustrates the product dimensions and indicates the two packages (Package A and Package B) in which the chair components are shipped.

5. SETUP AND ASSEMBLY

Basic assembly is required. It is recommended to have two people for assembly due to the size and weight of the components.

1. Unpack all components from both Box 1 (Top Cushion) and Box 2 (Electric Frame). Verify all parts are present and undamaged.
2. Place the electric frame base on a flat, stable surface where the chair will be used. Ensure there is sufficient space around the chair for operation and movement.
3. Carefully align the top cushion with the electric frame. Follow any specific alignment guides or markings.
4. Secure the top cushion to the electric frame using the provided hardware (bolts, washers, etc.). Tighten all fasteners firmly,

but do not overtighten.

5. Connect the power cable to the designated port on the chair and then plug it into a suitable grounded electrical outlet.
6. Ensure all connections are secure before initial operation.



This image displays the fully assembled spa chair, highlighting its overall structure after setup.

6. OPERATING INSTRUCTIONS


6.1 Powering On/Off

Connect the chair to a standard electrical outlet. The LED lights on the base will illuminate, indicating that the chair is powered and ready for operation.

6.2 Adjusting Chair Positions

The chair offers independent adjustments for the backrest, leg rest, and overall height. These can be controlled using either the hand remote or the foot pedal.

Product Size

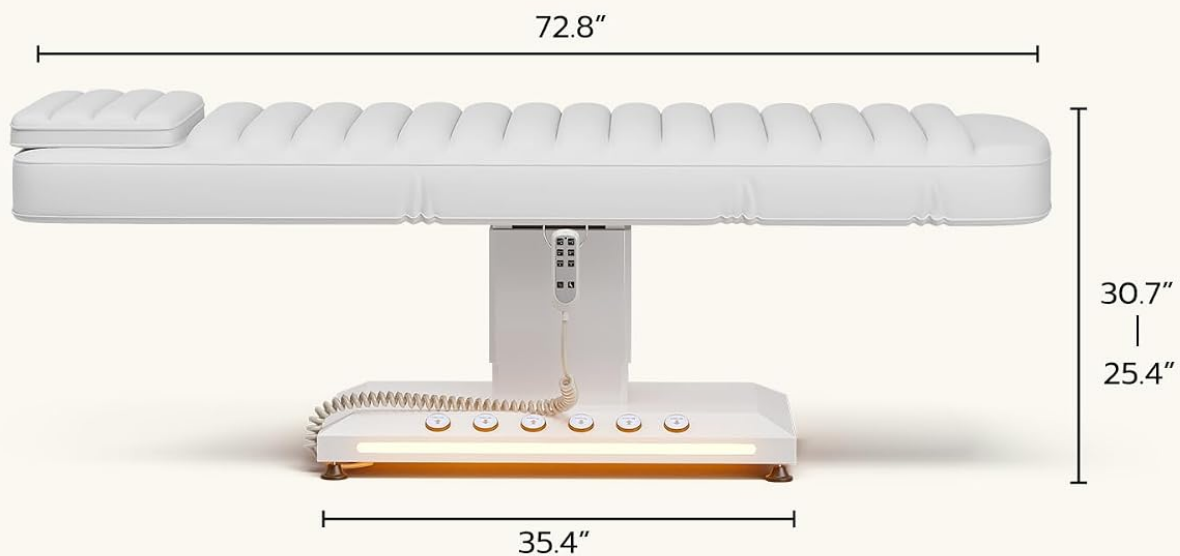

This image demonstrates the chair's ability to adjust both its angle (backrest and leg rest) and overall height.

6.2.1 Hand Remote Control

Use the buttons on the wired hand remote to independently adjust the backrest, leg rest, and overall height of the chair. Each button is typically marked with an icon indicating its function (e.g., up/down arrows for height, backrest angle, leg rest angle).

Two Motorized Control Ways



Hand Remote Control



Foot Pedal Control

This image shows the hand remote control, which allows for precise adjustments of the chair's various sections.

6.2.2 Foot Pedal Control

The foot pedal controls, located on the base of the chair, provide a hands-free alternative for adjustment. Press the corresponding pedals to raise or lower the chair, or adjust the backrest and leg rest angles.

Loading Capacity up to 550lbs

Built to last, stand up to frequent use



Strong electric motor

Powerful thrust ,quiet and easy operation



Reinforced steel frame

Heavy duty, deformation resistant

This image illustrates the foot pedal controls integrated into the chair's base for convenient operation.

6.3 Adjusting LED Lighting

The base of the chair features customizable LED lighting. Use the dedicated buttons on the foot pedal control panel to cycle through different colors or to turn the light on/off.



This image highlights the LED lighting feature at the base of the spa chair, which can be customized.

6.4 Video Demonstration

For a visual guide on the chair's operation and features, please watch the demonstration video below.

Your browser does not support the video tag.

This video, titled "Fully Electric Tattoo Chair Display" by Cosy Homestyle, demonstrates the operational features and adjustments of the electric spa chair.

7. MAINTENANCE AND CARE

7.1 Cleaning

The chair's PU leather upholstery is designed for easy cleaning and hygiene.

- Wipe the surface with a soft, damp cloth.
- For stubborn stains, use a mild soap solution (e.g., diluted dish soap) and then wipe clean with a separate damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, alcohol-based cleaners, or solvents, as these can damage the upholstery and finish.
- Ensure the chair is completely dry before next use or storage.

7.2 General Care

- Regularly inspect all moving parts, electrical connections, and fasteners for wear, damage, or looseness. Tighten any loose bolts as needed.
- Keep the chair away from direct sunlight and extreme temperatures to prevent material degradation and fading.
- Do not place sharp objects directly on the upholstery to avoid punctures or tears.
- Store the remote control in a safe place when not in use to prevent loss or damage.



This image illustrates the construction of the chair's cushioning, including breathable PU leather and high-elastic sponge, emphasizing its durability and ease of cleaning.

8. TROUBLESHOOTING

If you encounter any issues with your spa chair, refer to the following common problems and solutions. If the issue persists, contact customer support.

8.1 Chair Not Responding to Controls

- **Check Power Connection:** Ensure the power cord is securely plugged into both the chair and a functional electrical outlet.
- **Check Power Outlet:** Test the electrical outlet with another device to confirm it is supplying power.
- **Overload Protection:** The chair may have an internal overload protection mechanism. Disconnect power for a few minutes,

then reconnect and try again.

- **Control Cable:** Ensure the remote control cable is securely connected to the chair.

8.2 Unusual Noises During Operation

- **Obstructions:** Check for any obstructions around the moving parts of the chair, such as cables or debris.
- **Loose Components:** Ensure all assembly bolts and connections are tight. Refer to the assembly section.
- **Weight Limit:** Verify that the total weight on the chair does not exceed the maximum capacity of 550lbs (250kg).

8.3 LED Lights Not Functioning

- **Power Connection:** Ensure the chair is properly powered and receiving electricity.
- **Control Settings:** Check the lighting controls on the foot pedal panel to ensure they are activated or to cycle through modes.

9. SPECIFICATIONS

Feature	Detail
Brand	Paddie
Model Name	Electric Spa Chair
Model Number	BU9069
Color	White
Material	PU Leather, Stainless Steel
Product Dimensions (D x W x H)	26"D x 77"W x 31"H
Seat Depth	25.6 inches
Chair Backrest Width	27 inches
Item Weight	198 pounds
Maximum Weight Recommendation	550 pounds (250kg)
Motorized Adjustments	3 Motors (Backrest, Leg Rest, Height)
Height Adjustment Range	25.4" - 30.7"
Backrest Angle Adjustment	0° - 90°
Footrest Angle Adjustment	0° - 90°
Control Ways	Remote Control, Foot Pedal
Upholstery Fabric Type	PU Leather
Fill Material	Foam (4.3" thickened high-resilience foam)
Frame Material Type	Stainless Steel

Included Components	Box 1: Top Cushion, Box 2: Electric Frame
Recommended Uses	Relaxing, Massage, Tattoo, Microblading, Lash Extension, Wax, Rehabilitation, Physical Therapy

10. WARRANTY INFORMATION

Specific warranty details for your Paddie Professional Fully Electric Spa Chair are typically provided at the point of purchase or within separate documentation included with your product. Please retain your proof of purchase for any warranty claims.

For information regarding extended protection plans, please refer to the details provided by the seller or manufacturer at the time of purchase.

11. CUSTOMER SUPPORT

For technical assistance, replacement parts, or further inquiries regarding your Paddie Professional Fully Electric Spa Chair, please contact the seller directly.

Seller: [Cosy Homestyle](#)

Please have your model number (BU9069) and proof of purchase available when contacting support.

© 2026 Paddie. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

