

[Manuals.plus](#) /

› [Comfyer](#) /

› Portable Baby Bottle Warmer User Manual

Comfyer BW01

Portable Baby Bottle Warmer User Manual

Brand: Comfyer | Model: BW01

INTRODUCTION

The Comfyer Portable Baby Bottle Warmer is designed for convenience and efficiency, allowing you to warm milk, formula, or water for your baby anytime, anywhere. Its wireless design, fast heating capabilities, and long-lasting battery make it an essential tool for parents on the go. This manual provides comprehensive instructions for safe and effective use of your new device.



Image: The Comfyer Portable Baby Bottle Warmer in light purple and white, shown next to its product packaging, highlighting its sleek design and portability.

Your browser does not support the video tag.

Video: An overview of the Comfyer Portable Bottle Warmer BW01, demonstrating its key features and ease of use for parents.

KEY FEATURES

- **Wireless & Travel-Ready:** Cord-free design for warming water or milk anywhere, suitable for home, airplane, and car use. Can be attached to a travel bag or stroller.
- **Fast Heating:** Heats water to 104°F in 2 minutes and refrigerated breast milk to 98°F in 4-5 minutes.
- **Long-Lasting Battery:** Fully charges in 2-3 hours, warms 5 oz of milk up to 9-10 times on a full charge, and maintains temperature for 20 hours.
- **Safe & Odor-Free Material:** Features a SUS 316 stainless steel inner container, ensuring no odor and safety, unlike plastic alternatives.

- **Smart Temperature Control:** 5 heating temperature options (98°F, 104°F, 113°F, 122°F, 131°F) for various needs (milk, water, formula, breast milk).
- **Scheduled Time Feeding:** 6 preset timer modes (30, 60, 90, 120, 150, 180 minutes) for preheated and insulated water or milk.
- **Real-Time LED Display:** Shows current temperature and battery levels.

ON-THE-GO PORTABLE BOTTLE WARMER



Put in Bag



Car



Airplane



Camping

Image: The portable bottle warmer is shown being used in diverse environments, including being carried in a bag, placed in a car, used on an airplane, and during a camping trip, emphasizing its versatility for travel.

SAFE AND DURABLE MATERIAL

SUS 316 Stainless Steel

- Rust-resistant
- Food safe
- High-grade



Food grade silicone



Image: A close-up view of the bottle warmer's interior, highlighting the use of SUS 316 stainless steel for rust-resistance, food safety, and high-grade quality, along with food-grade silicone components.

LEAK-PROOF ANTI-MISOPERATION

360°rotation without leakage and put in diaper bag safety



Image: The bottle warmer is placed inside a clear bag, illustrating its leak-proof design and anti-misoperation features, ensuring safe transport in a diaper bag without spills.

WHAT'S IN THE BOX

Upon opening your Comfyer Portable Baby Bottle Warmer package, you will find the following items:

- Portable Milk & Water Warmer x 1

- USB Cable Charger x 1
- User Manual x 1



Image: A visual representation of the items included in the product box: the portable milk and water warmer, a USB charging cable, and the user manual.

SETUP

1. **Initial Cleaning:** Before first use, thoroughly clean all parts of the bottle warmer that will come into contact with milk or water. Refer to the "Maintenance & Cleaning" section for detailed instructions.
2. **First Charge:** Fully charge the device using the provided USB cable and a compatible power adapter. Ensure the device is fully charged before its first use to maximize battery performance. Refer to the "Charging" section for more details.
3. **Familiarize Yourself:** Read through the "Operating Instructions" section to understand the various temperature settings, timer functions, and display indicators.

OPERATING INSTRUCTIONS

The Comfyer Portable Baby Bottle Warmer offers intuitive controls for precise temperature and time settings.

1. **Filling the Warmer:** Open the lid and pour the desired amount of water, breast milk, or formula into the stainless steel inner container. Do not overfill.
2. **Power On:** Press the power button (usually the middle button) to turn on the device. The LED display will show the current temperature.
3. **Setting Temperature:** Press the temperature setting button (usually the left button) to cycle through the 5 available temperature options: 98°F, 104°F, 113°F, 122°F, and 131°F. Select the desired temperature for your baby's milk or water. The device will begin heating automatically.
4. **Using the Timer:** Press the preset timer button (usually the right button) to select a scheduled heating time: 30, 60, 90, 120, 150, or 180 minutes. This feature allows the device to maintain the set temperature for the chosen duration, useful for night feedings or extended outings.
5. **Monitoring Progress:** The real-time LED display will show the current temperature as it heats up and the remaining battery life.
6. **Dispensing:** Once the desired temperature is reached, the device will maintain it. Open the lid and carefully pour the warmed liquid into your baby's bottle. Always test the temperature of the liquid before feeding your baby.

7. **Power Off:** Press and hold the power button to turn off the device when not in use.

FAST HEAT WITH 80W SUPER POWER

2 MINS

Ready for formula mixing

4 MINS

Warm the refrigerated milk



Image: The bottle warmer illustrates its rapid heating capability, showing it can heat water to 104°F in 2 minutes and refrigerated milk in 4-5 minutes, powered by 80W super power.

PRESET TIMER FOR SCHEDULED FEEDING



Image: The bottle warmer displays its preset timer options (30, 60, 90, 120, 150, 180 minutes), designed for scheduled feeding and convenience.

KEEP WATER WARM FOR NIGHT TIME FEEDING

Simultaneously meet the needs of adults drinking water or babies's milk at night



Image: The bottle warmer is shown in a nighttime setting, emphasizing its ability to keep water warm for night feedings, catering to both adult and baby needs.

Your browser does not support the video tag.

Video: A demonstration of the BW01 bottle warmer in daily use, showcasing its practical application and ease of integration into a parent's routine.


CHARGING

The Comfyer Portable Baby Bottle Warmer is equipped with a long-lasting battery and multiple charging options for your convenience.

- **Battery Life:** A full charge allows warming 5 oz of milk up to 9-10 times. The device can maintain temperature for up to 20 hours.
- **Charging Time:** The device fully charges in 2-3 hours using the quick charge adapter.
- **Charging Options:**
 - USB Charging: Connect to any standard USB power source.
 - Car Charging: Use a car charger adapter for convenient charging during travel.
 - Power Bank Charging: Compatible with portable power banks for charging on the go.
- **Battery Indicator:** The real-time LED display shows the current battery level, allowing you to know when to recharge.

LONGER BATTERY LIFE & MULTIPLE CHARGING OPTIONS

No worry about temporary power off during your trip

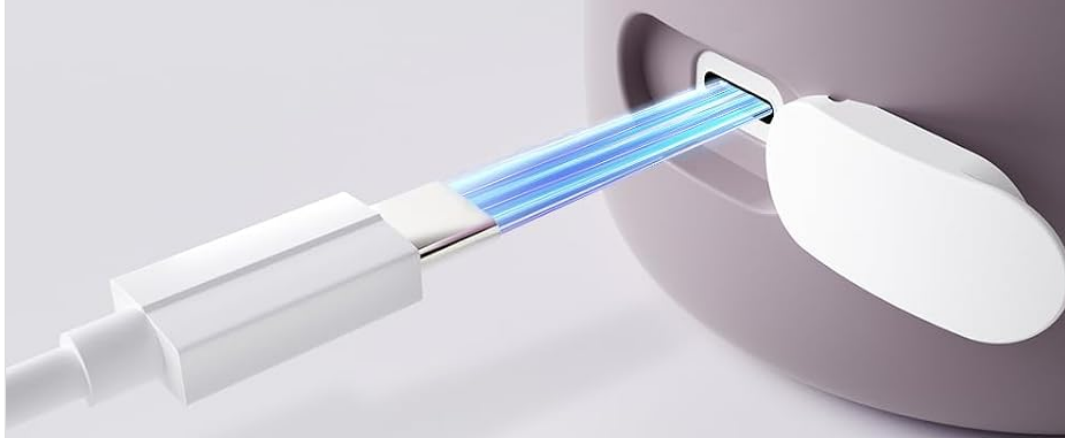

USB Charging



Car Charging



Power Bank Charging

Image: The bottle warmer is depicted with various charging methods, including USB charging, car charging, and power bank charging, highlighting its adaptability for different situations.

MAINTENANCE & CLEANING

Proper maintenance and cleaning ensure the longevity and hygiene of your Comfy Portable Baby Bottle Warmer.

1. **Disassembly:** Open the cover and carefully remove the silicone ring and any other removable parts for thorough

cleaning.

- 2. **Cleaning the Inner Container:** Add water and a mild detergent to the stainless steel inner container. Use a soft brush or sponge to clean it thoroughly. Rinse well with clean water.
- 3. **Cleaning Silicone Parts:** Wash the silicone ring and other silicone components with mild soap and water. Rinse thoroughly to remove all soap residue.
- 4. **Drying:** Ensure all parts are completely dry before reassembling the warmer. Air dry or use a clean, dry cloth.
- 5. **Storage:** Store the clean and dry warmer in a cool, dry place away from direct sunlight.



Image: A step-by-step guide demonstrating how to clean the portable bottle warmer, including opening the cover, removing the silicone ring, brushing the interior with water and detergent, and cleaning silicone parts.

TROUBLESHOOTING

If you encounter any issues with your Comfyer Portable Baby Bottle Warmer, refer to the common problems and solutions below:

Problem	Possible Cause	Solution
Device not turning on.	Low battery or power button not pressed correctly.	Ensure the device is fully charged. Press and hold the power button for a few seconds.
Liquid not heating up.	Insufficient liquid, incorrect temperature setting, or device malfunction.	Ensure there is enough liquid. Check the selected temperature setting. If the issue persists, contact customer support.
Temperature display is inaccurate.	Sensor issue or external temperature interference.	Ensure the device is not exposed to extreme temperatures. If the problem continues, contact customer support.
Leakage from the warmer.	Lid not properly sealed or silicone ring misplaced.	Ensure the lid is securely closed and the silicone ring is correctly positioned. Do not overfill.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Product Dimensions	3.15 x 3.15 x 9.06 inches
Item Model Number	BW01
Batteries	3 Lithium Polymer batteries (included)
Material Composition	PP, SUS 316 Stainless Steel
Item Weight	1.37 pounds
Additional Features	Scheduled Time Feeding, Travel-Ready, Fast Heating, Real-time LED display, Fast Charging

WARRANTY & SUPPORT

Comfyer is committed to providing high-quality products and excellent customer service.

- **Warranty:** Your Comfyer Portable Baby Bottle Warmer comes with a 12-month warranty, which can be extended up to 24 months.
- **Return Policy:** A 7-day return policy is available.
- **Returns on Defects:** Returns are accepted for product defects.
- **Customer Support:** For any inquiries, technical assistance, or warranty claims, please contact our support team via email: support@comfyer.net.

Warranty & Service



12 Months Warranty
(Extend up to 24 Months)



7 Days
Return Policy



Return
On Defects

Email: support@comfyer.net

Image: Information regarding Comfyer's warranty and service, including 12-month warranty (extendable to 24 months), 7-day return policy, returns on defects, and support email address.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question