



[Manuals.plus](#) /

> [Nahenduo](#) /

> Nahenduo Twin XL Adjustable Bed Base User Manual

Nahenduo Twin XI Adjustable Bed Base

Nahenduo Twin XL Adjustable Bed Base User Manual

Model: Twin XI Adjustable Bed Base

INTRODUCTION

Thank you for choosing the Nahenduo Twin XL Adjustable Bed Base. This manual provides important information regarding the assembly, operation, maintenance, and troubleshooting of your new adjustable bed base. Please read this manual thoroughly before use and retain it for future reference.

This adjustable bed base is designed to enhance your comfort and well-being with features such as independent head and foot incline, a quiet motor, and a convenient wireless remote with preset modes.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Ensure all parts are securely fastened before use.
- Keep hands and feet clear of moving parts during operation.
- Do not allow children or pets to play on or under the bed base.
- Do not exceed the maximum weight capacity of 750 lbs.
- Unplug the bed base from the power outlet before cleaning or maintenance.
- Use only the provided power cord and remote control.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Adjustable Bed Base Frame
- Legs (Quantity as per model)
- Wireless Remote Control
- Power Adapter and Cord

- Retainer Bar
- User Manual

SETUP AND ASSEMBLY


The Nahenduo Twin XL Adjustable Bed Base is designed for easy assembly. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all components from the packaging. Place them on a clean, flat surface.
2. **Attach Legs:** Screw the bed legs into the designated threaded holes on the underside of the bed base. Ensure they are tightened securely.
3. **Position Bed Base:** Carefully flip the bed base over and place it in your desired location.
4. **Install Retainer Bar:** Insert the mattress retainer bar into the holes at the foot of the bed base. This prevents the mattress from sliding.
5. **Connect Power:** Plug the power adapter into the bed base's control box, then plug the power cord into a grounded electrical outlet.
6. **Pair Remote (if necessary):** Your remote may come pre-paired. If not, refer to the remote control section for pairing instructions.


Compatible with Various Mattresses




Memory Foam

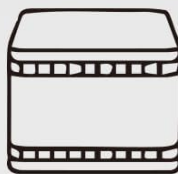

Gel Foam

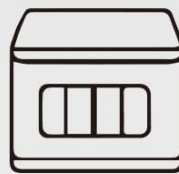

Hybrid

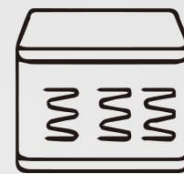

Innerspring

Image: Components of the adjustable bed base, showing the frame, legs, and retainer bar, indicating an easy assembly process.

OPERATING INSTRUCTIONS

Your Nahenduo Adjustable Bed Base is operated using the wireless remote control. The quiet motor ensures smooth and silent adjustments.

Wireless Remote Control

Flat



Lounge



SET YOUR FAVORITE POSITIONS

Zero Gravity



Read & TV



Image: Detailed view of the wireless remote control, highlighting buttons for various adjustments and preset positions.

- **Head Up/Down:** Adjusts the head section of the bed.
- **Foot Up/Down:** Adjusts the foot section of the bed.
- **Flat:** Returns the bed to a completely flat position.
- **Zero Gravity (ZG):** Elevates both the head and foot to a position that mimics weightlessness, promoting circulation and reducing pressure on the back.
- **Flashlight:** Activates the built-in flashlight on the remote.

Adjustable Positions

The bed base offers independent head and foot incline, allowing for a wide range of comfortable positions:

- Head adjustments from 0 to 60 degrees.
- Foot incline from 0 to 40 degrees.

Load Capacity: **750 LBS**

size: 79.5"L x 37.5"W x 12"H



Image: Visual representation of the bed's adjustable range for both head and foot sections, indicating maximum incline angles.

Wireless Remote Control

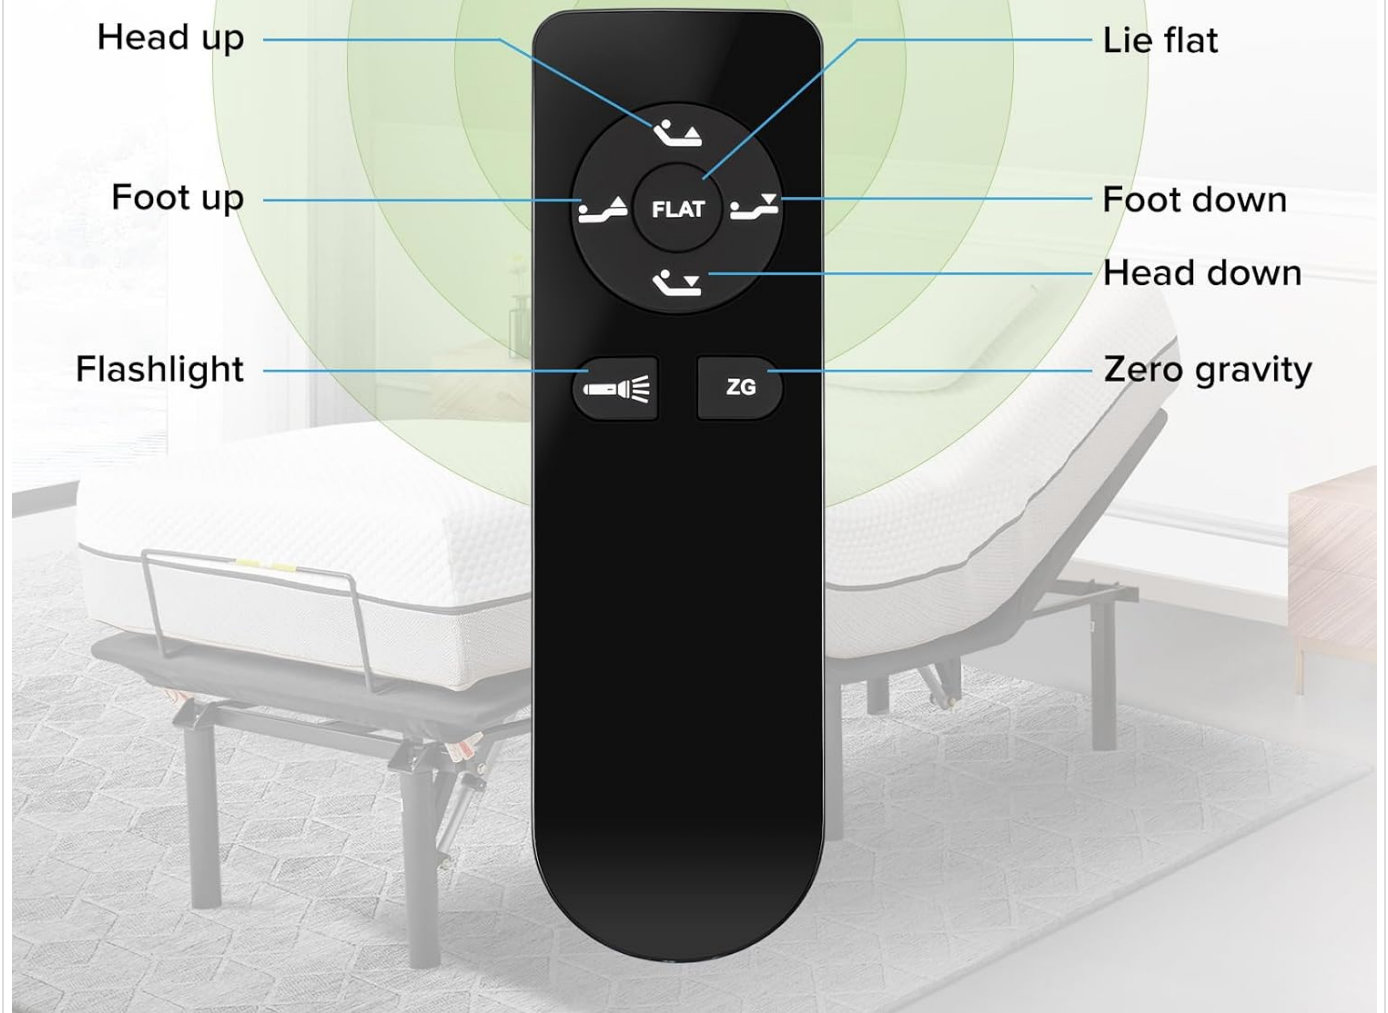


Image: Examples of various comfortable positions achievable with the adjustable bed base, including flat, lounge, zero gravity, and reading/TV positions.

Benefits of Adjustable Positions

GIVE YOUR FAMILY THE BEST CARE



Relieve Back Pain



Better Digestion



Relieve Snoring



Boost Circulation



Elders



Pregnant Women



Special Patients



Couples



Image: Illustrates the health and comfort benefits of using an adjustable bed, such as improved circulation and relief from snoring. The adjustable bed base can provide numerous benefits:

- Relieve Back Pain
- Better Digestion
- Relieve Snoring
- Boost Circulation
- Suitable for Elders, Pregnant Women, Special Patients, and Couples


Mattress Compatibility

This adjustable bed base is compatible with most mattress types and sizes, including Memory Foam, Gel Foam, Hybrid, and Innerspring mattresses.


Compatible with Various Mattresses




Memory Foam

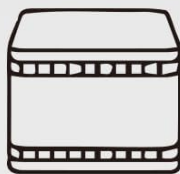

Gel Foam

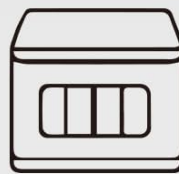

Hybrid

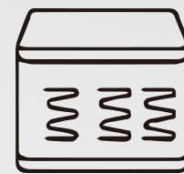

Innerspring

Image: Visual guide demonstrating the bed base's compatibility with different mattress materials.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your adjustable bed base, follow these maintenance guidelines:

- **Cleaning:** Wipe the frame with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners. Ensure the bed base is unplugged before cleaning.
- **Motor Care:** The motor is designed for quiet and reliable operation. No special maintenance is required for the motor itself. Keep the area around the motor free from dust and obstructions.
- **Remote Control:** Keep the remote control dry and clean. Replace batteries as needed (battery type not specified, assume standard AAA/AA).
- **Regular Inspection:** Periodically check all bolts and connections to ensure they are tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter any issues with your adjustable bed base, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Bed base does not operate.	No power supply; Remote not paired; Remote batteries low.	Check power cord connection; Ensure outlet is functional; Re-pair remote (refer to remote section); Replace remote batteries.
Motor makes unusual noise.	Obstruction under bed; Loose connection.	Check for objects under the bed base; Ensure all bolts are tightened.
Bed base moves slowly or unevenly.	Overload; Obstruction.	Ensure weight does not exceed 750 lbs; Check for obstructions.

If the problem persists after attempting these solutions, please contact customer service.

SPECIFICATIONS

Feature	Detail
Size	Twin XL
Product Dimensions	80"L x 38"W x 11.3"H
Special Features	Adjustable, Ergonomic, Head and Foot Incline, Remote Control, Zero Gravity Mode
Color	Antique Black
Finish Type	Polished
Included Components	Base, Slat
Brand	Nahenduo
Assembly Required	Yes
Manufacturer	Nahenduo
UPC	769047559307
Item Weight	72.6 pounds
Item Model Number	Twin XI Adjustable Bed Base
Maximum Load Capacity	750 lbs

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or contact the manufacturer directly. Protection plans are also available for extended coverage.

If you have any questions, require assistance with assembly, or need troubleshooting support, please do not hesitate to contact Nahenduo customer service representatives. All parts included in your package are clearly indicated, and support is available for any inquiries.

You can typically find contact information on the product packaging, the seller's website, or through your purchase

platform.

© 2024 Nahenduo. All rights reserved.