

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WELLFOR](#) /

› [WELLFOR ROSA 24x30 Bathroom Medicine Cabinet Instruction Manual](#)

## WELLFOR ROSA2430MC-LR

# WELLFOR ROSA 24" x 30" Bathroom Medicine Cabinet Instruction Manual

Model: ROSA2430MC-LR

## INTRODUCTION

Thank you for choosing the WELLFOR ROSA 24" x 30" Bathroom Medicine Cabinet. This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your new medicine cabinet. Please read all instructions carefully before beginning installation.



*Image: The WELLFOR ROSA 24" x 30" Bathroom Medicine Cabinet, closed, showcasing its sleek design.*

## PRODUCT FEATURES

- **Anodized Chrome Aluminum Frame:** Crafted from premium anodized chrome aluminum, offering superior rust resistance and long-term durability.
- **Blum Soft-Close Hinges:** Equipped with premium Blum hinges for a smooth, quiet closing experience, enhancing longevity.
- **180° Reversible Door Installation:** Allows for left or right opening to suit your bathroom layout.
- **Adjustable Glass Shelves:** Includes 3 ultra-clear 8mm thick adjustable glass shelves, supporting up to 35 lbs total.
- **Tri-View Glass Mirrors:** Provides a panoramic view for comprehensive grooming.
- **Surface or Recessed Mount:** Supports both installation types, with a surface mount kit included.

# Chrome Aluminum Cabinet



**Durability**




**Easy to clean**



**Rust and moisture  
proof**



**Crisp Reflection**

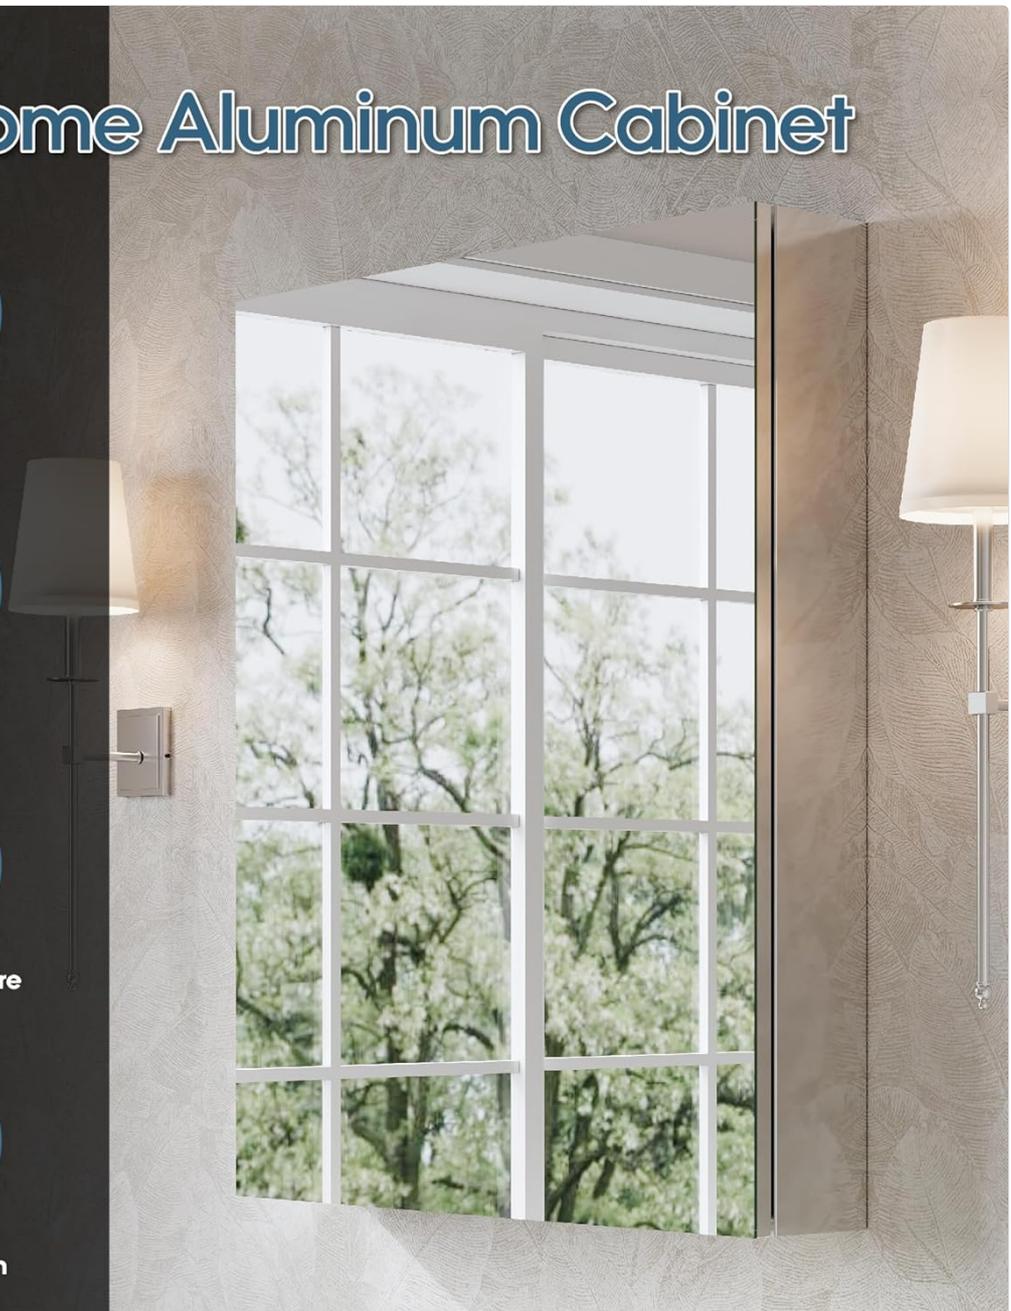

*Image: Interior view of the WELLFOR medicine cabinet, highlighting the adjustable glass shelves and Blum soft-close hinges.*

## SETUP AND INSTALLATION


This medicine cabinet can be installed using either a surface mount or a recessed mount method. A surface mount kit is included. Please ensure you have the necessary tools and assistance for installation.

### Dimensions and Rough-in Sizes

The cabinet measures **W 24" x D 4.81" x H 30"**. For recessed mounting, the recommended rough-in size is **W 23.5" x D 3.75" x H 29.5"**.

**Medicine Cabinet Size:** 24(W) x 30(H) x 4-13/16(D)inches

**Recessed Cutout Size:** 23-1/2(W) x 29-1/2(H) x 3-13/16(D)inches

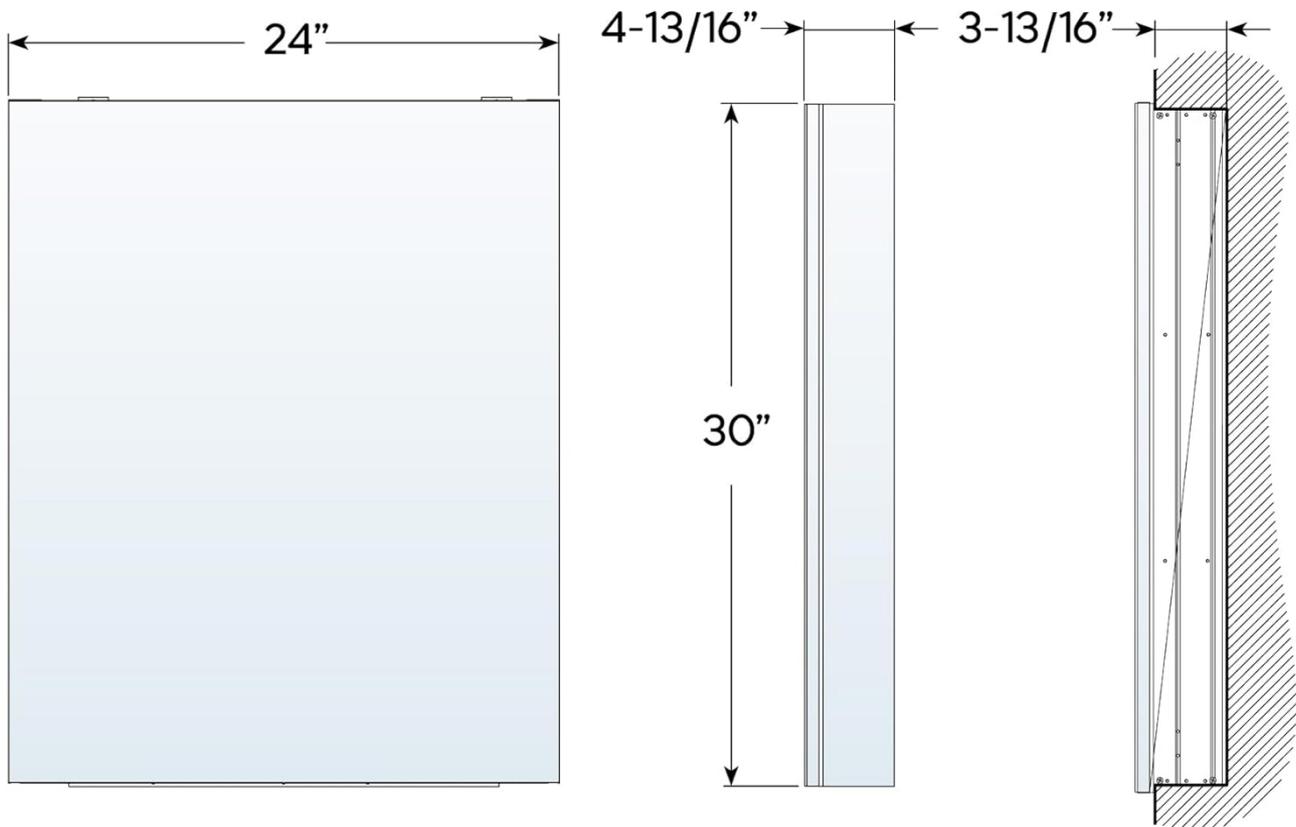

*Image: Detailed diagram illustrating the external dimensions of the medicine cabinet and the required recessed cutout size for installation.*

## Installation Steps Overview

- 1. Prepare the Wall:** For recessed mounting, ensure the wall opening matches the specified rough-in dimensions. For surface mounting, identify the desired location and mark mounting points.
- 2. Install Mounting Brackets:** Secure the bottom mounting bracket to the wall using appropriate fasteners. Ensure it is level and securely attached.
- 3. Position the Cabinet:** Carefully place the medicine cabinet onto the bottom bracket. Ensure it is centered and level.
- 4. Secure Top Brackets:** Install the top mounting brackets, securing the cabinet firmly to the wall.
- 5. Attach Side Panels (Surface Mount):** If surface mounting, peel off the adhesive backing and attach the mirrored side panels to the cabinet.
- 6. Remove Protective Film:** Carefully peel off any protective film from the mirror surfaces.
- 7. Install Adjustable Shelves:** Insert the shelf brackets into the desired holes inside the cabinet and place the glass shelves on top.

## Installation Video Guide

Your browser does not support the video tag.

*Video: A detailed installation guide for the WELLFOR ROSA medicine cabinet, demonstrating the steps for secure mounting.*

## OPERATING INSTRUCTIONS

### Reversible Door Functionality

The WELLFOR ROSA medicine cabinet features a 180° reversible door. This allows you to install the door to open from either the left or the right side, providing flexibility to match your bathroom layout and personal preference. This decision should be made during the initial installation process.



*Image: Illustration demonstrating the reversible door design, allowing the cabinet to open from either the left or right side.*

### Adjusting Glass Shelves

The cabinet includes three 8mm ultra-clear adjustable glass shelves. To adjust the shelf height:

1. Carefully remove any items from the shelf you wish to adjust.
2. Lift the glass shelf slightly and remove the shelf brackets from their current positions.
3. Reinsert the shelf brackets into the desired holes at the new height. Ensure all four brackets are securely in place and level.
4. Gently place the glass shelf back onto the brackets.



*Image: Visual representation of the three layers of adjustable glass shelves, highlighting their flexibility for customized storage.*

## MAINTENANCE

### Cleaning the Cabinet and Mirrors

To maintain the pristine appearance of your WELLFOR medicine cabinet, regularly clean the mirrored surfaces and aluminum frame. Use a soft, lint-free cloth with a mild glass cleaner or a damp cloth. Avoid abrasive cleaners or

harsh chemicals that could damage the finish or mirror coating.



*Image: Detail of the removable side mirrored panels, emphasizing the ease of cleaning and maintenance.*

## **Rust and Moisture Resistance**

The anodized chrome aluminum frame provides excellent resistance to rust and moisture, making it ideal for bathroom environments. Ensure proper ventilation in your bathroom to further minimize moisture buildup.



*Image: Graphic highlighting the heavy-duty aluminum frame's moisture and rust-resistant qualities for long-lasting use.*

## TROUBLESHOOTING

Most issues can be resolved by reviewing the installation steps or adjusting the components. If you encounter any problems not covered here, please contact WELLFOR customer support for assistance.

- **Door not closing smoothly:** Check the Blum soft-close hinges for any obstructions or misalignment. Adjust the hinges as needed according to the hinge manufacturer's instructions.
- **Cabinet appears uneven:** Verify that the mounting brackets are level and securely fastened to the wall. Adjust as necessary.
- **Shelves are wobbly:** Ensure the shelf brackets are fully inserted into the support holes and that the glass shelves are seated correctly.

## SPECIFICATIONS

<b>Brand</b>	WELLFOR
<b>Model Number</b>	ROSA2430MC-LR
<b>Product Dimensions (Overall)</b>	4.81"D x 24"W x 30"H
<b>Recess Rough-in Size</b>	23.5"W x 3.75"D x 29.5"H
<b>Material</b>	Anodized Chrome Aluminum Frame, Glass Mirrors, Glass Shelves
<b>Number of Shelves</b>	3 (Adjustable, 8mm Ultra-Clear Glass)
<b>Weight Capacity (Total)</b>	35 Pounds
<b>Installation Type</b>	Surface Mount or Recessed Mount
<b>Special Features</b>	Adjustable glass shelves, Soft-close door, Reversible Installation, Tri-view mirrors
<b>Assembly Required</b>	Yes
<b>Item Weight</b>	30 Pounds
<b>UPC</b>	750656880302



*Image: A table detailing cabinet dimensions for both surface mount and recessed rough-in sizes across different models.*

## **CUSTOMER SUPPORT**

For any questions, concerns, or assistance with your WELLFOR medicine cabinet, please contact our customer support team. We offer 24/7 support to ensure your satisfaction.

If your cabinet arrives damaged, please contact us immediately for a replacement.

Visit the [WELLFOR Store on Amazon](#) for more products and information.