

soges 10FZXJMC24002L-85BK-NA

soges LED Medicine Cabinet Mirror User Manual

Model: 10FZXJMC24002L-85BK-NA

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your soges LED Medicine Cabinet Mirror. Please read this manual thoroughly before installation and use to ensure proper function and safety. Keep this manual for future reference.

Important Safety Information

WARNING: This product contains electrical components and is intended for use in a bathroom, a moist environment. Always ensure that the product is dry before touching any electrical parts. Do not use the product if the cord is damaged or if it is exposed to excessive moisture. Always unplug the product when not in use. This product is heavy and must be securely mounted to the wall. Always follow the installation instructions carefully to prevent the product from falling and causing injury. The product contains glass shelves and a mirror, which can shatter if not handled properly. Always be careful when handling the product and keep it out of reach of children and pets. Always unplug the product before cleaning it.

PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- LED Medicine Cabinet Mirror Unit
- Tempered Glass Shelves (2)
- Mounting Hardware Kit
- Instruction Manual

SPECIFICATIONS

Brand	soges
Model Number	10FZXJMC24002L-85BK-NA
Color	Black
Material	Glass, Aluminum Frame

Product Dimensions (D x W x H)	4.5" x 20.5" x 33.5"
Item Weight	23.3 Pounds
Number of Shelves	2 (Tempered Glass)
Mounting Type	Wall Mount (Recessed or Surface)
Shape	Oval
Additional Features	LED Lighting, Brightness Dimming, Tri-Color Function, Anti-Fog, Storage

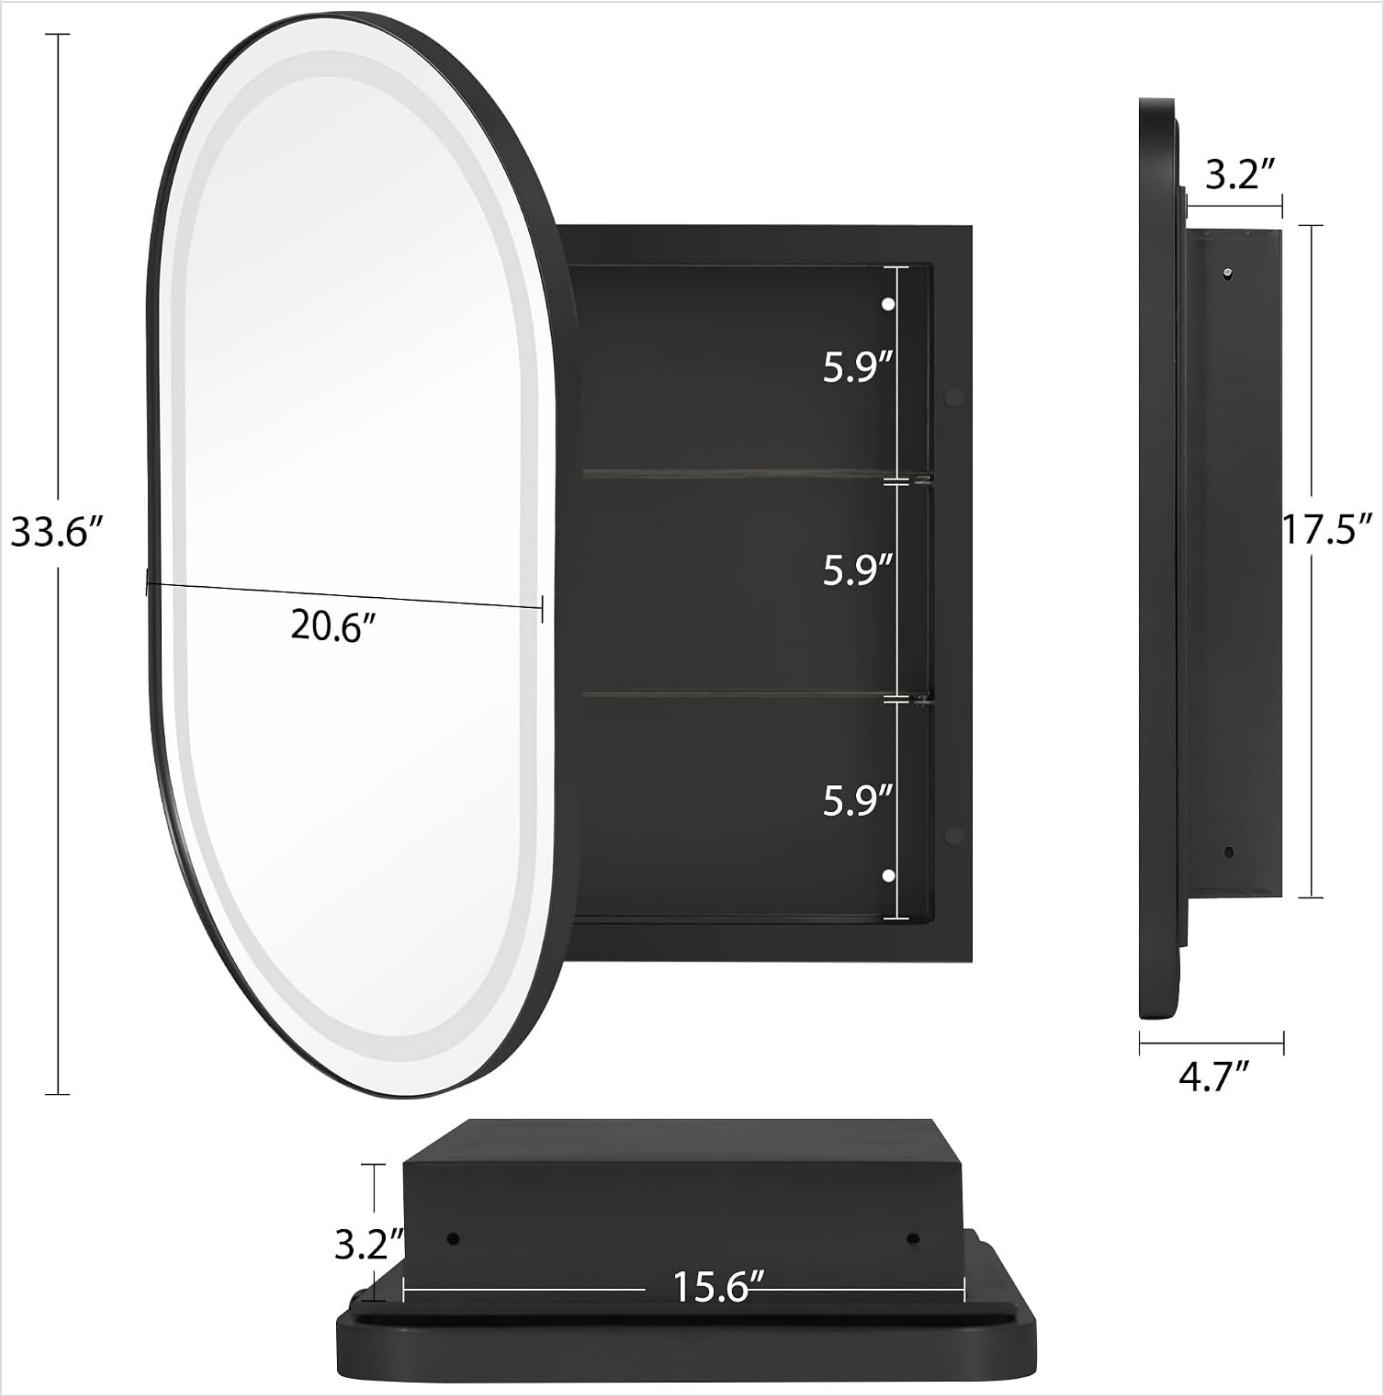


Image: Detailed dimensions of the medicine cabinet mirror, including overall height (33.6"), width (20.6"), and depth (4.7"), along with internal shelf spacing (5.9").

SETUP AND INSTALLATION

The soges LED Medicine Cabinet Mirror offers two installation methods: Recessed Mount and Surface Mount. Detailed instructions with illustrations and labeled parts are included in your package. Always ensure the power is off at the circuit breaker before beginning any electrical work.

Tools Required (Not Included):

- Drill
- Screwdriver (Phillips and Flathead)
- Measuring Tape
- Level
- Pencil
- Wire Strippers (for electrical connection)

General Installation Steps:

1. **Plan Location:** Choose a suitable location on your bathroom wall, considering both aesthetic placement and access to electrical wiring. Ensure there are no hidden pipes or electrical lines in the wall where you plan to cut or drill.
2. **Prepare Wall:** Depending on your chosen installation method (Recessed or Surface), prepare the wall accordingly. For recessed mounting, a wall opening of appropriate dimensions will be required. For surface mounting, ensure the wall surface is clean and flat.
3. **Mount Bracket/Cabinet:** Secure the mounting bracket or the cabinet directly to the wall using the provided hardware. Use a level to ensure it is perfectly straight. For recessed mounting, slide the cabinet into the prepared opening and secure it.
4. **Electrical Connection:** Connect the mirror's electrical wiring to your bathroom's electrical supply. This step should ideally be performed by a qualified electrician to ensure safety and compliance with local codes. Ensure all connections are secure and insulated.
5. **Install Shelves:** Once the cabinet is securely mounted, insert the tempered glass shelves into the desired positions inside the cabinet.
6. **Test Functionality:** Restore power at the circuit breaker and test all functions of the mirror, including LED lighting, dimming, color change, and anti-fog.

Two installation Methods



Recessed Mount



Surface Mount

Image: Visual representation of the two available installation methods: Recessed Mount, where the cabinet is set into the wall, and Surface Mount, where it is mounted directly onto the wall surface.

OPERATING INSTRUCTIONS

Your soges LED Medicine Cabinet Mirror features an integrated LED lighting system with adjustable brightness, three color temperature options, and an anti-fog function.

LED Lighting and Color Temperature Adjustment:

The mirror is equipped with a touch switch located on the mirror surface.

- **Power On/Off:** Short touch the power icon on the mirror to turn the LED light on or off.
- **Change Color Temperature:** With the light on, short touch the color temperature icon (often represented by a sun or light bulb) to cycle through the three available color temperatures: Warm Light (3000K), Natural Light (4500K), and Cool Light (6500K).

Short Touch to Change Color

Hold the button to adjust brightness from 3000K - 6500K



Touch switch



Dispel fog

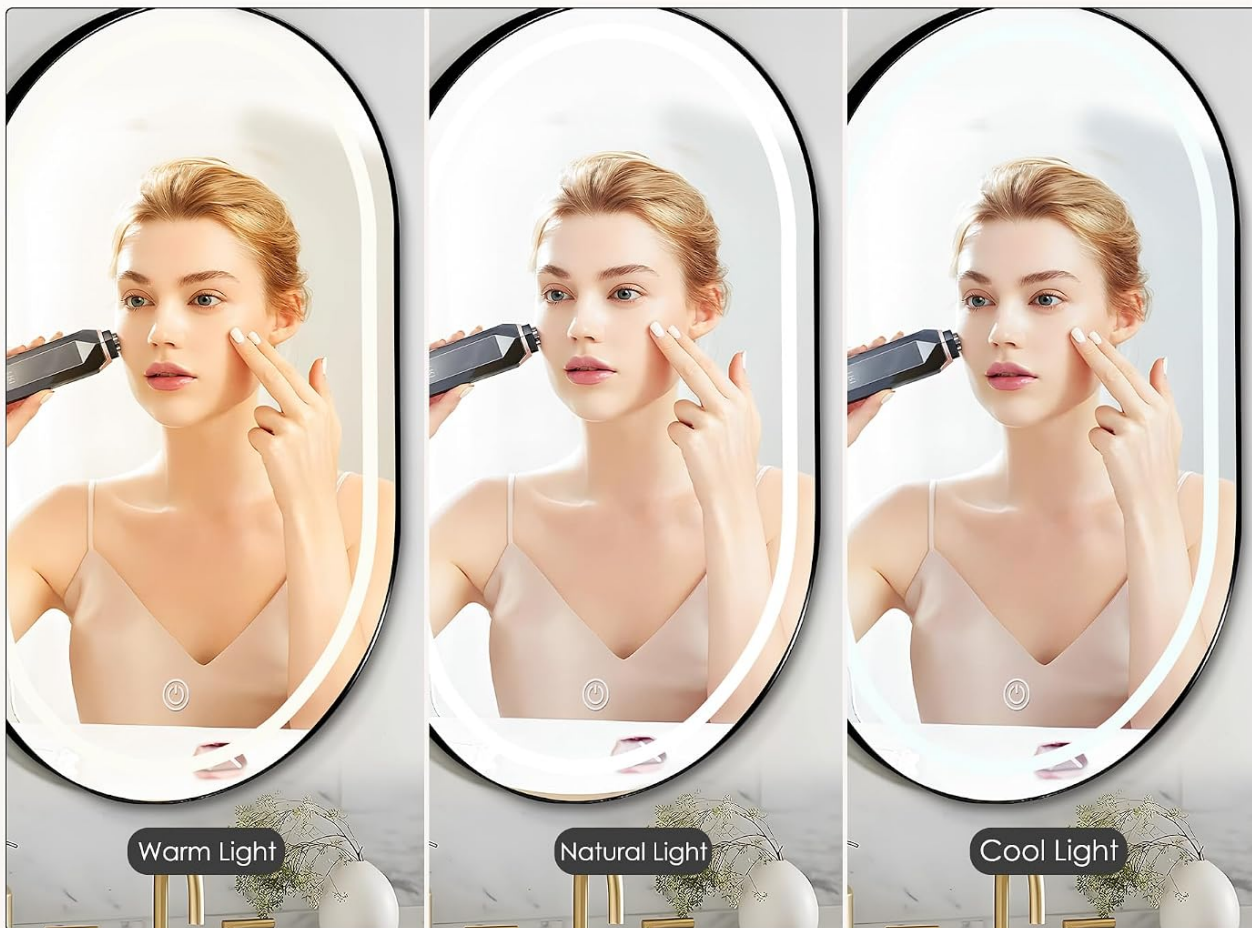


Image: A user interacting with the touch switch to change the LED light color temperature, illustrating Warm Light (3000K), Natural Light, and Cool Light (6500K) options.


Brightness Dimming:

To adjust the brightness of the LED light:

- **Dimming:** With the light on, long press the power icon on the mirror. The brightness will cycle through different levels (e.g., 10%, 40%, 70%, 100%). Release your finger when the desired brightness is reached.
- **Memory Function:** The mirror features a memory function that will recall your last brightness setting when the light is turned on again.



Long Touch Dimming Brightness



Memory Function

Remember your personal brightness settings

Image: A hand pressing the touch switch to adjust the brightness, with indicators for 10%, 40%, 70%, and 100% brightness levels, and an icon for the memory function.

Anti-Fog Function:

The mirror includes an anti-fog feature to maintain a clear reflection in steamy bathroom conditions.

- **Activate Anti-Fog:** Short touch the anti-fog icon (often represented by a cloud with an 'X' or steam lines) on the mirror surface to activate or deactivate the anti-fog function.



Anti-Fog High Definition Waterproof Mirror

Image: A user viewing their reflection in the mirror, demonstrating the clarity provided by the anti-fog feature.

Storage Shelves:

The cabinet provides two tempered glass shelves for organized storage of bathroom essentials.

Large Storage Space



Image: The open medicine cabinet revealing two tempered glass shelves, organized with various personal care items, demonstrating the large storage capacity.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your medicine cabinet mirror.

- **Cleaning the Mirror:** Always unplug the product before cleaning. Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror surface, to prevent liquid from seeping into electrical components.
- **Cleaning the Cabinet:** Wipe the interior and exterior surfaces of the cabinet with a soft, damp cloth. For stubborn spots, a mild soap solution can be used, followed by wiping with a clean, dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Electrical Components:** Ensure all electrical connections and the power cord remain dry and undamaged. If any damage is observed, discontinue use and consult a qualified electrician.
- **Shelf Care:** The tempered glass shelves can be removed for thorough cleaning. Handle them carefully to avoid breakage.

TROUBLESHOOTING

If you encounter issues with your medicine cabinet mirror, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
LED light does not turn on.	No power supply, loose electrical connection, faulty switch, damaged LED driver.	Check if the circuit breaker is on. Verify electrical connections are secure (consult an electrician if unsure). Ensure the touch switch is clean and responsive. If the issue persists, contact customer support.
Light flickers or is dim.	Unstable power, incorrect dimming setting, damaged LED component.	Ensure the power supply is stable. Adjust brightness using the long-press function. If flickering continues, there may be an internal component issue; contact customer support.
Anti-fog function not working.	Anti-fog feature not activated, electrical issue.	Ensure the anti-fog icon has been touched to activate the function. Check for power supply issues as described above.
Mirror surface is scratched or damaged.	Improper cleaning, accidental impact.	Use only soft cloths and non-abrasive cleaners. Avoid sharp objects near the mirror. Minor scratches may be polished with specialized kits, but deep damage may require replacement.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical assistance or have questions not covered in this manual, please contact soges customer support through their official website or the retailer where the product was purchased.

Please have your model number (10FZXJMC24002L-85BK-NA) and purchase date ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question