

[Manuals.plus](#) /

› [AZHAR](#) /

› AZHAR Electric Scooter with Seat, Model K8 (36V 13AH) - User Manual

AZHAR K8

AZHAR Electric Scooter with Seat (Model K8, 36V 13AH)

User Instruction Manual

1. INTRODUCTION

This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your AZHAR Electric Scooter with Seat, Model K8. Please read this manual thoroughly before using the scooter to ensure proper function and safety.



Image 1.1: The AZHAR Electric Scooter with Seat, featuring a compact design and integrated basket.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury or property damage.

- Always wear a helmet and appropriate safety gear (knee pads, elbow pads) when riding.
- Do not ride in wet conditions, heavy rain, or through puddles.
- Ensure all bolts and quick releases are securely tightened before each ride.
- Do not exceed the maximum weight limit of 265 pounds (120 kg).

- Observe all local traffic laws and regulations.
- Avoid riding on uneven surfaces, steep inclines, or in heavy traffic.
- Do not perform stunts or aggressive maneuvers.
- Keep hands and feet on the handlebars and foot deck at all times during operation.
- Charging: Only use the provided charger. Do not charge unattended. If the battery shows signs of damage or overheating, discontinue use and contact support immediately.



Image 2.1: The scooter features integrated headlights, brake lights, and turn signals for enhanced visibility and safety.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- AZHAR Electric Scooter with Seat
- Charger

- Mounting Tool Kit
- Basket
- 2 Bike Reflectors
- User Manual (this document)

4. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the main components of your AZHAR Electric Scooter.



Image 4.1: Overview of the AZHAR Electric Scooter, highlighting features such as the 650W peak motor, 25 MPH max speed, 36V 13Ah battery, 25 miles travel distance, 14-inch pneumatic tires, and front/rear disc brakes.

4.1 Motor and Power System

The scooter is equipped with a 500W motor, capable of reaching a peak power of 650W, providing efficient propulsion. The power is supplied by a 36V 13AH lithium-ion battery.


500W Powerful Motor



Image 4.2: Detailed view of the 500W powerful brushless motor integrated into the rear wheel.

36V 13/AH

Large Capacity Battery

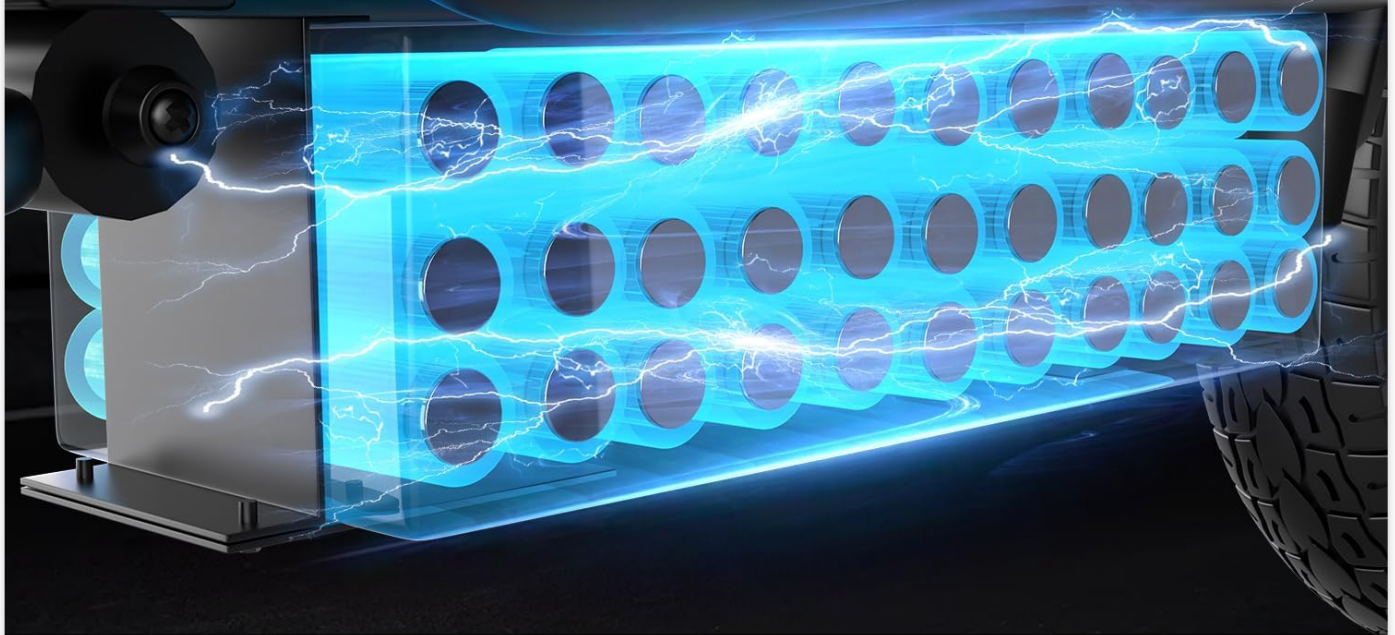

36V 13AH
(Large Capacity)



25Miles
(Max Range)



4-6H
(Charging Time)



BMS
(Safe & Reliable)

Image 4.3: The 36V 13AH large capacity Li-ion battery system, featuring a safer charging port and providing up to 25 miles of range with a 4-6 hour charging time.

4.2 Suspension and Tires

For a comfortable ride, the scooter features dual front and rear shock absorbers and 14-inch pneumatic tires. These components are designed to absorb road imperfections.

Our



Front and Rear Dual Suspensions



Other

Image 4.4: Illustration of the scooter's front and rear dual suspension system, designed for enhanced ride comfort compared to single suspension models.



Image 4.5: The 14-inch pneumatic tires are designed to be puncture-resistant and suitable for various terrains, including mountain roads, city roads, and gravel roads, providing enhanced grip and traction.

4.3 Controls and Display

The handlebar features essential controls and a digital display for monitoring ride information.

Great Features



Image 4.6: The handlebar features a digital display showing speedometer, speed switch, driving distance, and battery power. Controls include a headlight switch, turn signal button, and bell.

5. SETUP AND ASSEMBLY

Your AZHAR Electric Scooter requires minimal assembly. Follow these steps to prepare your scooter for its first ride.

1. **Unpacking:** Carefully remove all components from the packaging. Retain the packaging box for one month in case of returns or exchanges.
2. **Handlebar Installation:** Attach the handlebar to the steering column. Ensure it is securely fastened using the provided mounting tools.
3. **Seat Adjustment:** Adjust the seat height to a comfortable position. Ensure the quick-release lever is securely closed after adjustment.
4. **Basket Attachment:** Secure the basket to the designated mounting points, typically at the rear of the scooter.
5. **Initial Charge:** Before the first use, fully charge the scooter's battery. Connect the charger to the scooter's charging

port and then to a power outlet. The indicator light on the charger will change when fully charged.

6. **Pre-Ride Check:** Before each ride, inspect the tires for proper inflation, check brake functionality, and ensure all fasteners are tight.

6. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your electric scooter.

1. **Power On:** Press and hold the power button on the display to turn on the scooter.
2. **Speed Modes:** Use the speed switch button on the handlebar to cycle through available speed modes (if applicable).
3. **Starting the Ride:** Place one foot on the deck and push off with the other foot to gain initial momentum. Once moving, gently press the throttle to engage the motor.
4. **Braking:** Use the front and rear disc brakes by squeezing the brake levers on the handlebars. Apply brakes smoothly to avoid sudden stops.
5. **Lighting:** Activate the headlight using the dedicated switch for night riding or low-light conditions. Use the turn signals to indicate your direction to others.
6. **Folding (if applicable):** To fold the scooter for storage or transport, follow the specific folding mechanism instructions. Ensure the scooter is powered off before folding.



Image 6.1: The scooter's foldable design allows for easy storage and transport, fitting conveniently into a car trunk.

7. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use high-pressure water or immerse any electrical components.
- **Tire Pressure:** Check tire pressure regularly and inflate to the recommended PSI (refer to tire sidewall for details).
- **Brakes:** Periodically inspect brake pads and discs for wear. Adjust brake cable tension as needed to ensure responsive braking.
- **Battery Care:** Charge the battery fully after each use. If storing for an extended period, charge the battery to 50-70% every 1-2 months. Avoid completely draining the battery.
- **Fasteners:** Regularly check and tighten all screws, bolts, and quick-release mechanisms.

8. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; loose connections	Charge the battery; check all cable connections.
Reduced range or speed	Low tire pressure; heavy load; cold weather; battery degradation	Inflate tires to correct pressure; reduce load; ensure battery is fully charged.
Brakes feel weak	Worn brake pads; loose brake cable	Inspect and replace brake pads if worn; adjust brake cable tension.
Unusual noises during operation	Loose components; debris in wheels	Check and tighten all fasteners; inspect wheels for obstructions.

If you encounter issues not listed here or require further assistance, please contact AZHAR customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	AZHAR
Model Name	K8
Motor Power	500W (Peak 650W)
Battery	36V 13AH Lithium-ion
Max Speed	Up to 25 MPH
Max Range	Up to 20 Miles
Charging Time	4-6 Hours
Tire Size	14 Inches
Tire Type	Pneumatic
Brake Style	Front and Rear Disc Braking
Suspension Type	Dual Suspension
Weight Limit	265 Pounds (120 kg)
Frame Material	Alloy Steel
Special Features	Basket, Digital Display, Non-Slip Deck, Seat, Speedometer, Adjustable Handlebar
Certifications	UL 2272



Image 9.1: Detailed dimensions of the AZHAR Electric Scooter, including seat height (33.5"), scooter length (50.8"), handle height (42.5"), handle width (20.9"), scooter width (8.6"), and pedal length (17.7"). The scooter weighs 49.6 lbs and has a maximum load capacity of 220 lbs.

10. WARRANTY AND SUPPORT

AZHAR is committed to providing quality products and customer satisfaction.

- **Warranty:** The AZHAR Electric Scooter comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects.
- **Returns & Exchanges:** Returns and exchanges are supported within 30 days of purchase. Please retain the original packaging for one month. Contact customer service before initiating a return to avoid package loss.
- **Customer Support:** For any issues, questions, or warranty claims, please describe the problem and attach relevant pictures when contacting support.



Image 10.1: AZHAR provides customer support for product inquiries and assistance.

Contact Email: ebikeservice25@outlook.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question