

## Gigaset VS280

# Gigaset VS280 Baby Monitor User Manual

Model: VS280

## 1. INTRODUCTION

This manual provides essential instructions for the safe operation and maintenance of your Gigaset VS280 Baby Monitor. Please read this manual thoroughly before using the device and retain it for future reference. The Gigaset VS280 is designed to provide secure audio and video monitoring of infants, elderly individuals, or pets, offering peace of mind through its reliable features.

## 2. SAFETY INFORMATION

- Keep the baby unit and its cables out of reach of children (at least 3 feet / 1 meter away) to prevent strangulation hazards.
- Do not place the baby unit or parent unit in or near water.
- Use only the AC adapters provided by Gigaset. Using unauthorized adapters may damage the device and void the warranty.
- Ensure proper ventilation for both units. Do not cover them with blankets or other materials.
- This product is not a medical device and should not be used as a substitute for responsible adult supervision.
- The operating temperature range is 0°C to 40°C (32°F to 104°F).

## 3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1x Parent Unit (Monitor)
- 1x Baby Unit (Camera)
- 2x AC Power Adapters
- 1x Quick Start Guide (This User Manual)



Image: The Gigaset VS280 Baby Monitor, showing both the white parent unit with a 2.8-inch LCD screen and the white baby unit (camera).

## 4. PRODUCT OVERVIEW

### 4.1 Parent Unit (Monitor)

- 2.8-inch LCD Screen: Displays live video feed from the baby unit.
- Control Buttons: For menu navigation, volume adjustment, zoom, and two-way talk.
- Microphone: For two-way communication.
- Speaker: For audio from the baby unit and lullabies.
- Antenna: For secure 2.4GHz FHSS signal transmission.
- Power/Charging Port.

### 4.2 Baby Unit (Camera)

- Camera Lens: Captures video.
- Infrared LEDs: For automatic night vision.
- Microphone: Picks up sounds from the monitored area.
- Speaker: Plays lullabies and allows two-way communication.
- Temperature Sensor: Monitors the room temperature.
- Power/Charging Port.

## 5. SETUP

### 5.1 Charging the Parent Unit

1. Connect one AC adapter to the parent unit's charging port.
2. Plug the adapter into a power outlet.

3. Charge the parent unit for at least 4 hours before initial use to ensure optimal battery life. The battery icon on the screen will indicate charging status.

## 5.2 Powering the Baby Unit

1. Connect the second AC adapter to the baby unit's power port.
2. Plug the adapter into a power outlet. The baby unit will power on automatically.

## 5.3 Positioning the Units

- Place the baby unit at least 3 feet (1 meter) away from the baby's crib or play area.
- Ensure the camera has a clear view of the monitored area. The camera angle can be manually adjusted.
- Position the parent unit in a location where you can easily monitor the screen and hear alerts.
- Avoid placing units near other electronic devices that may cause interference.



Image: An illustration demonstrating the 1000ft range of the Gigaset VS280 baby monitor, with the parent unit and baby unit positioned in different rooms of a house.

## 5.4 Secure Connection

The Gigaset VS280 uses encrypted 2.4GHz FHSS technology for a secure and private connection between the parent and baby units. No Wi-Fi connection is required, ensuring your privacy and preventing unauthorized access.

# Secure and Encrypted Transmission



Image: A graphic depicting the secure and encrypted transmission between the baby unit and parent unit, symbolized by a shield icon, ensuring privacy.

## 6. OPERATING INSTRUCTIONS

### 6.1 Power On/Off

- To power on the parent unit, press and hold the **POWER** button.
- To power off, press and hold the **POWER** button again until the screen turns off.
- The baby unit powers on automatically when connected to power.

### 6.2 Live Video Monitoring

Once both units are powered on and linked, the parent unit will automatically display the live video feed from the baby unit on its 2.8-inch LCD screen.

## 2.8" LCD Screen



Image: A close-up view of the parent unit's 2.8-inch LCD screen displaying a clear image of a baby.

### 6.3 Two-Way Talk (Intercom)

To speak to the person near the baby unit:

1. Press and hold the **TALK** button on the parent unit.
2. Speak clearly into the microphone on the parent unit.
3. Release the **TALK** button to hear sounds from the baby unit again.



## Two-Way, Talk-Back Intercom



Image: A visual representation of the two-way talk feature, showing a baby and a parent communicating through the monitor with speech bubbles.

### 6.4 Night Vision

The baby unit automatically activates infrared night vision in low-light conditions, providing a clear black-and-white video feed on the parent unit.



Image: A split image demonstrating the night vision capability, showing a baby sleeping in a well-lit room (top) and the same baby in a dark room with clear black-and-white night vision (bottom).

## 6.5 Lullabies and Soothing Sounds

The monitor includes 2 lullabies and soothing sounds to help comfort the baby. Access these through the parent unit's menu.

# Lullabies and Soothing Sounds



Image: The baby unit with musical notes floating around it, representing the lullabies and soothing sounds feature.

## 6.6 VOX Mode (Sound-activated Screen)

In VOX mode, the parent unit's screen will activate when sound is detected from the baby unit, conserving battery life. You can adjust the sensitivity level in the menu.



# Sound-activated Screen Mode



Image: The parent unit displaying a crying baby and sound level indicators, demonstrating the sound-activated screen mode (VOX) while parents sleep in the background.

## 6.7 Temperature Monitoring

The baby unit features a built-in temperature sensor that displays the room temperature on the parent unit's screen. An alert can be set for temperature deviations.

# Temperature Sensor



Image: A close-up of the parent unit's screen highlighting the temperature display, showing "77°F" next to an image of a sleeping baby.

## 6.8 Zoom Function

Use the control buttons on the parent unit to zoom in on the video feed for a closer view of the monitored area.

## 6.9 Battery Life

The parent unit offers up to 19 hours of video streaming on a full charge, allowing for extended monitoring without constant recharging.

## Long Battery Life



Image: A graphic emphasizing the long battery life, showing the parent unit with a sleeping baby on screen and an icon indicating up to 19 hours of video streaming.

## 7. MAINTENANCE

- Clean the units with a dry, soft cloth. Do not use abrasive cleaners or solvents.
- Keep the camera lens clean for optimal video quality.
- Store the units in a dry, dust-free environment when not in use.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No picture/sound on parent unit.	Units are not powered on or out of range.	Ensure both units are plugged in and powered on. Move parent unit closer to baby unit.
Poor video/audio quality.	Interference or units are too far apart.	Move units closer. Avoid placing near other electronic devices. Clean camera lens.

Problem	Possible Cause	Solution
Parent unit battery drains quickly.	Battery not fully charged or aged battery.	Ensure full charge (19 hours video streaming). If battery life significantly reduced, contact support for replacement options.
VOX mode not activating.	Sensitivity setting is too low.	Adjust VOX sensitivity in the parent unit's menu.

## 9. SPECIFICATIONS

- **Model:** VS280
- **Screen Size:** 2.8 inches LCD
- **Transmission Frequency:** 2.4GHz FHSS
- **Maximum Range:** Up to 1000 feet (open field)
- **Battery Life (Parent Unit):** Up to 19 hours (video streaming)
- **Special Features:** 2-Way Audio, Brightness Control, Night Vision, Portable, Temperature Sensor, Lullabies, 2x Zoom, VOX Mode
- **Power Input:** 5V DC (via included AC adapters)
- **Operating Temperature:** 0°C to 40°C (32°F to 104°F)
- **Dimensions (Parent Unit):** Approximately 4.72 x 2.5 x 1.31 inches
- **Weight (Item):** Approximately 15.8 ounces

## 10. WARRANTY AND SUPPORT

Gigaset products are designed for reliability and performance. For warranty information, please refer to the warranty card included with your purchase or visit the official Gigaset website. If you encounter any issues or have questions regarding your Gigaset VS280 Baby Monitor, please contact Gigaset customer service:


- **Phone:** +1 855 976-8611 (Standard landline tariff may apply)
- **Online Support:** Visit the Gigaset website for FAQs and further assistance.

Please have your model number (VS280) and purchase details ready when contacting support.








© 2025 Gigaset Technologies GmbH. All rights reserved.

### Related Documents - VS280

	<p><a href="#">Gigaset VS280 Video Baby Monitor Quick Start Guide</a></p> <p>This guide provides essential information for setting up and using the Gigaset VS280 Video Baby Monitor, including safety instructions, operational features, and warranty details.</p>
---	--

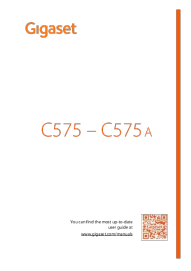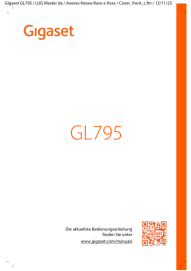

 <p>The cover of the Gigaset E630 - E630A user manual features the Gigaset logo at the top left. Below it, the model numbers 'E630 - E630A' are printed in a large, bold font. At the bottom, there is a small QR code and some text in German.</p>	<p><a href="#">Gigaset E630 - E630A User Manual</a></p> <p>Comprehensive user manual for the Gigaset E630 and E630A cordless telephone system. Covers setup, operation, features, troubleshooting, and technical specifications.</p>
 <p>The cover of the Gigaset C330 user manual is white with the Gigaset logo at the top. The model number 'C330' is prominently displayed in the center. The bottom section is a solid grey color.</p>	<p><a href="#">Gigaset C330 Cordless Phone User Manual: Setup, Features, and Operation</a></p> <p>Comprehensive user manual for the Gigaset C330 cordless telephone, covering setup, base and handset features, safety, making calls, managing contacts, and settings. Learn how to get the most out of your Gigaset phone.</p>
 <p>The cover of the Gigaset C575 - C575 A user manual is white with the Gigaset logo at the top. The model numbers 'C575 - C575 A' are printed in a large, bold font. At the bottom, there is a small QR code and some text in German.</p>	<p><a href="#">Gigaset C575 / C575 A Cordless Phone User Manual</a></p> <p>Comprehensive user guide for the Gigaset C575 and C575 A cordless telephone systems, covering setup, calling, contact management, answering machine, safety, and troubleshooting.</p>
 <p>The cover of the Gigaset GL795 user manual is white with the Gigaset logo at the top. The model number 'GL795' is prominently displayed in the center. The bottom section is a solid orange color.</p>	<p><a href="#">Gigaset GL795 Bedienungsanleitung</a></p> <p>Umfassende Bedienungsanleitung für das Gigaset GL795 Mobiltelefon, die detaillierte Anweisungen zur Einrichtung, Bedienung, Telefonie, Nachrichten, Anwendungen, Einstellungen und Sicherheitshinweise bietet.</p>
 <p>The cover of the Gigaset C470 user guide features a photograph of the black cordless handset and base station. The Gigaset logo is visible in the bottom left corner.</p>	<p><a href="#">Gigaset C470 User Guide: Features and Operation</a></p> <p>Discover the Gigaset C470 cordless telephone with this user guide. Learn about its features including ECO DECT, SMS, hands-free calling, and setup. Find support information and operational details.</p>