

[Manuals.plus](#) /

› [HONOR](#) /

› HONOR CHOICE Watch 2i Smart Watch User Manual

HONOR fa657f70-5f14-4b8b-9fed-9a77e6ef5a06



HONOR CHOICE Watch 2i User Manual

Bluetooth Calling Smart Watch with 1.85-inch AMOLED Display

1. INTRODUCTION

Welcome to the user manual for your new HONOR CHOICE Watch 2i. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your smartwatch. Please read this manual carefully to ensure proper use and to maximize the features of your device.



Figure 1.1: The HONOR CHOICE Watch 2i, a sleek black smartwatch with a vibrant display.

2. WHAT'S IN THE BOX

Your HONOR CHOICE Watch 2i package should contain the following items:

- HONOR CHOICE Watch 2i (1 unit)
- Charging Cable (1 unit)
- Instruction Manual (1 unit)

3. SETUP

3.1 Initial Charging

Before first use, fully charge your HONOR CHOICE Watch 2i. Connect the magnetic charging cable to the charging port on the back of the watch and plug the USB end into a power adapter (not included) or a computer's USB port.

One Time Charges Two-Week Usage

Features a 330mAh high-capacity battery,
supports power-saving mode as well.

With comprehensive software and hardware optimization, it achieves
an impressive two-week battery life on a single charge
Eliminating the worry of battery life for smartwatches.



Figure 3.1: The HONOR CHOICE Watch 2i being charged, highlighting its extended battery life.

3.2 App Installation and Pairing

1. Download the **HONOR Health App** from your smartphone's app store (compatible with Android and iOS).
2. Open the app and follow the on-screen instructions to create an account or log in.
3. Navigate to the device pairing section within the app and select your HONOR CHOICE Watch 2i from the list of available devices.
4. Confirm the pairing request on both your smartphone and the watch.

HONOR Health APP

Streamlined Data Recording and Analysis

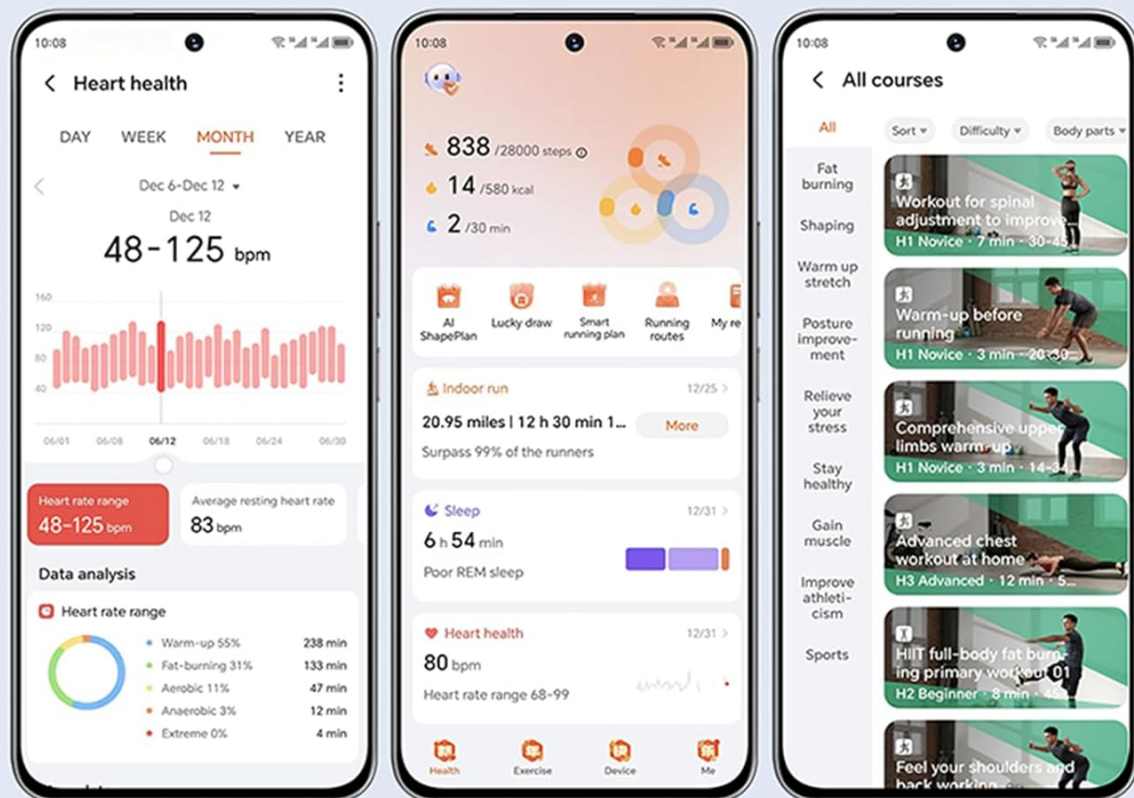


Figure 3.2: The HONOR Health App interface, demonstrating its data recording and analysis capabilities.

3.3 Initial Configuration

Once paired, the app will guide you through initial settings such as personal information, notification preferences, and watch face selection. You can customize watch faces from a variety of options, including dynamic and gallery faces.



Diario del sonno Sogni d'oro Con l'orologio



Monitorare la qualità e gli stadi del sonno, comprese le proporzioni di sonno leggero, sonno profondo, veglia e sonno REM, nonché i sonnellini, per aiutarvi a dormire più profondamente

Figure 3.3: Customizable watch faces on the HONOR CHOICE Watch 2i.

4. OPERATING THE WATCH

4.1 Basic Navigation

The HONOR CHOICE Watch 2i features a 1.85-inch AMOLED touchscreen and a physical crown/button for navigation. Swipe left/right, up/down to access different functions and menus. Press the crown to return to the home screen or access the app list.



Schermo AMOLED da 1,85 pollici Presenta immagini straordinarie

Dotato di un grande schermo AMOLED da 1,85 pollici.
Un elevato rapporto schermo/corpo del 75%.
Un display delicato con 322 ppi.

Figure 4.1: Detail of the watch's metallic texture and independent crown/buttons.

4.2 Bluetooth Calling

When connected to your smartphone via Bluetooth, you can make and receive calls directly from your watch. The watch supports quick answering and easy dialing.



Bluetooth Call Quick Answering and Easy Dialing



Quick Message Reply

Can't answer the call?
One-tap quick reply
Easy and convenient without
misunderstandings

Initiate the Call, Stay Connected

A simple tap to call and stay connected with family and friends anytime



Figure 4.2: Bluetooth call functionality on the HONOR CHOICE Watch 2i.

4.3 Health Monitoring

The watch continuously monitors various health metrics:

- **Heart Rate:** 24-hour heart rate tracking.
- **SpO2:** Blood oxygen saturation monitoring.
- **Sleep Tracking:** Analyzes sleep quality and stages (light, deep, REM).
- **Stress Levels:** Monitors stress and provides breathing exercises.
- **Menstrual Cycle Tracking:** For female users.

Abnormal readings will trigger alerts. Detailed data can be viewed in the HONOR Health App.



All-Day Health Monitoring Always with You Always Care



Heart Rate



Blood Oxygen



Stress Levels

One-Tap Health Check Clear and Instant Results



Sleep Log Sweet Dreams With the Watch



Figure 4.3: All-day health monitoring features.

4.4 Workout Modes

The watch supports over 109 workout modes, including running, cycling, hiking, and more. It can automatically recognize 5 types of exercises. For outdoor activities, the app can record and map your movement trajectories using your smartphone's GPS.

109-Types of Sports Logs Workout Together Never Alone



Figure 4.4: The watch tracking a cycling workout, demonstrating its 109+ sports modes.

4.5 Smart Features

The HONOR CHOICE Watch 2i offers additional smart functionalities:

- **Notifications:** Receive alerts for calls, messages, and app notifications.
- **Quick Message Reply:** Send pre-set quick replies to messages.
- **Music Control:** Control music playback on your paired smartphone.
- **Camera Control:** Remotely control your smartphone's camera.
- **Do Not Disturb Mode:** Silence notifications during specific times.
- **SOS One-Tap Assistance:** For emergency contacts.
- **Portable Calendar:** Effortless planning.

**Texture metallica
Cornice centrale**

**Indipendente
Corona e pulsanti**

Trasuda individualità e raffinatezza.

La corona e i pulsanti indipendenti garantiscono un funzionamento comodo e riducono al minimo i tocchi accidentali.

Armonizza perfettamente estetica e funzionalità



Figure 4.5: Overview of smart features on the watch.

5. MAINTENANCE

5.1 Charging

To maintain optimal battery life, charge your watch regularly. The 330 mAh battery provides up to 14 days of usage on a single charge. Use the provided magnetic charging cable.

5.2 Cleaning

Wipe the watch and strap regularly with a soft, dry cloth. If necessary, use a slightly damp cloth and then dry thoroughly. Avoid using harsh chemicals or abrasive materials.

5.3 Water Resistance

The HONOR CHOICE Watch 2i is rated 1ATM and IP68, meaning it is resistant to dust and can withstand immersion in water up to 1 meter for 30 minutes. It is suitable for daily use and light water activities, but not for diving or high-pressure water activities.

5.4 Strap Replacement

The watch features a quick-release strap mechanism, allowing for easy replacement. Simply slide the pin on the strap to detach it and attach a new one.



Quadrante personalizzabile Cambia come desideri

Quadranti dinamici e design ricco di motivi dinamici.
Dai vita alle tue foto. Trasforma i momenti memorabili nel quadrante dell'orologio.
Alza per riattivare lo schermo, accedi facilmente al tempo e alle informazioni.

Figure 5.1: Quick-release strap for easy customization.

6. TROUBLESHOOTING

If you encounter issues with your HONOR CHOICE Watch 2i, try the following common solutions:

- **Watch not turning on:** Ensure the watch is fully charged.
- **Cannot pair with phone:** Ensure Bluetooth is enabled on both devices. Restart both the watch and phone. Check if the HONOR Health App is updated.
- **Inaccurate health data:** Ensure the watch is worn snugly on your wrist, not too tight or too loose. Clean the sensors on the back of the watch.
- **Notifications not appearing:** Check notification settings in the HONOR Health App and your phone's system settings to ensure the app has necessary permissions.
- **Short battery life:** Reduce screen brightness, disable unnecessary features like always-on display, and limit background app refresh.

For more detailed troubleshooting, refer to the help section within the HONOR Health App or visit the official HONOR support website.

7. SPECIFICATIONS

Feature	Specification
Brand	HONOR
Model	fa657f70-5f14-4b8b-9fed-9a77e6ef5a06
Display	1.85-inch AMOLED Touchscreen
Operating System	Android 9.0 (compatible with Android and iOS)
Connectivity	Bluetooth

Battery Life	Up to 14 days (typical usage)
Water Resistance	1ATM, IP68
Weight	100 g
Dimensions	10.3 x 10.2 x 5 cm
Additional Features	Bluetooth Call, Health Monitoring (Heart Rate, SpO2, Sleep, Stress), 109+ Workout Modes

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official HONOR support website. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, you can also visit the [HONOR Store on Amazon](#).