



[Manuals.plus](#) /

› [MAHANCRIIS](#) /

› MAHANCRIIS MTWT18001 Overbed Table User Manual

MAHANCRIIS MTWT18001

MAHANCRIIS MTWT18001 Overbed Table User Manual

Model: MTWT18001 | Brand: MAHANCRIIS

1. INTRODUCTION

Thank you for choosing the MAHANCRIIS MTWT18001 Overbed Table. This versatile and adjustable table is designed to enhance comfort and convenience in various settings, including bedrooms, living rooms, and offices. It can function as a mobile bed desk, standing workstation, bar table, dining table, laptop table, writing desk, hospital nursing table, or drafting table. This manual provides essential information for safe assembly, operation, and maintenance of your new overbed table.



Image 1.1: Full view of the MAHANCRISS MTWT18001 Overbed Table.

2. SAFETY INFORMATION

- Always lock at least two lockable casters diagonally to prevent accidental sliding of the product.
- Do not climb on the table. This is prohibited to prevent tipping and potential injury.
- Ensure all screws and fasteners are securely tightened during assembly and periodically check for tightness during use.
- Do not exceed the maximum weight recommendation of 100 pounds (45.3 kg).
- Keep children and pets away from the table during assembly.

3. PACKAGE CONTENTS


Before beginning assembly, please verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Overbed Table (Tabletop and Frame Components)
- 1 x Accessory Kit (Includes all necessary screws, fasteners, and tools like Allen Key, Screw Driver)
- 1 x Assembly Guide

4. ASSEMBLY INSTRUCTIONS

Assembly of the MAHANCRISS MTWT18001 Overbed Table is designed to be straightforward. Follow the detailed illustrated instructions provided in the included Assembly Guide. All parts are labeled for easy identification.


1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify against the package contents list.
2. **Assemble Frame:** Follow the step-by-step diagrams in the Assembly Guide to connect the metal frame components using the provided screws and tools. Ensure all connections are secure.
3. **Attach Casters:** Securely attach the 360° swivel casters to the bottom of the table legs. Ensure the locking mechanisms are functional.
4. **Install Tabletop:** Mount the tabletop onto the assembled frame, aligning it correctly and securing it with the designated fasteners.
5. **Adjust Height:** Before final tightening, adjust the table to your desired initial height using the adjustment knobs on the legs.

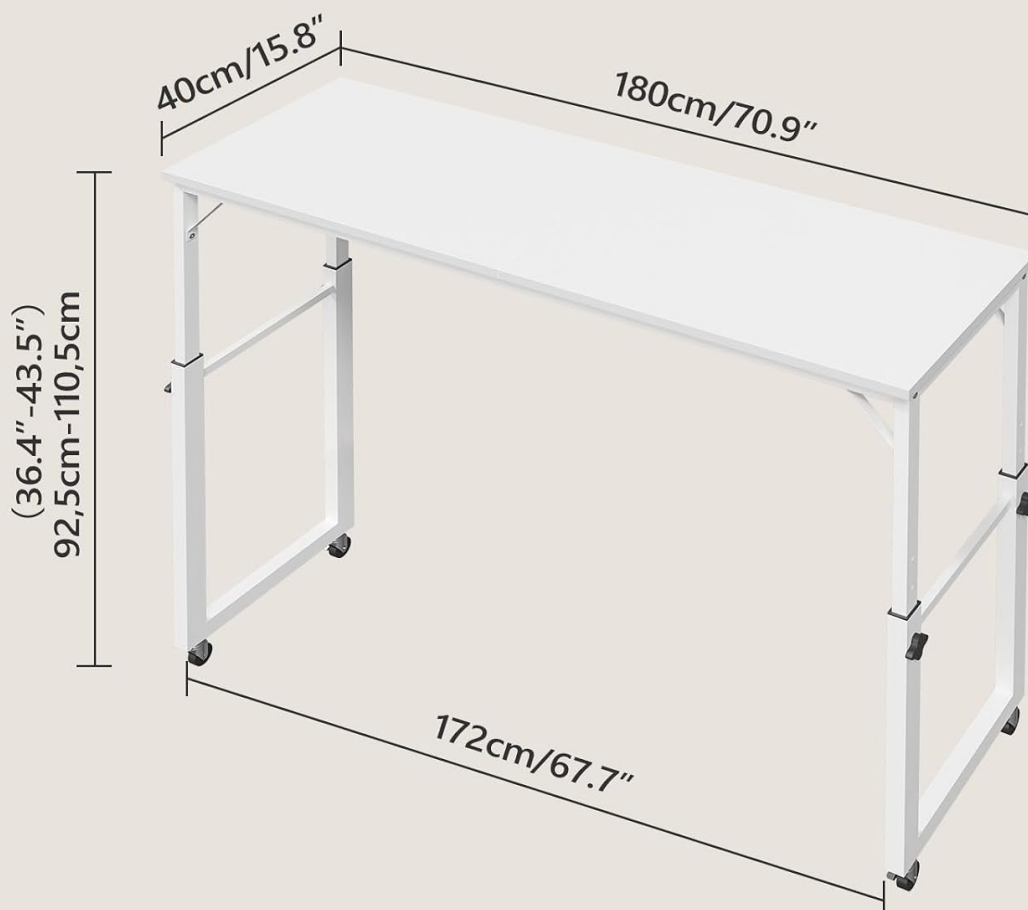


Small Single
30"x 75"



Twin Bed
38"x 75"

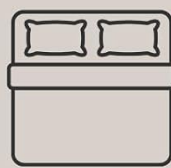

Full Bed
54"x 75"

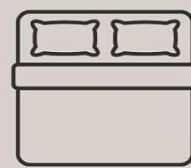

Queen Bed
60"x 80"

Image 4.1: Product dimensions and compatibility with various bed sizes (Small Single, Twin, Full, Queen).



High-Quality Panel

Enduring, smooth, and easy to clean.



Stable Construction

Built to last with lasting stability
for reliable support.



Image 4.2: Detail of the stable construction with metal frame and high-quality panel.



Image 4.3: Illustration of the 360° swivel casters with locking brakes.

5. OPERATING INSTRUCTIONS

The MAHANCRIIS MTWT18001 Overbed Table offers adjustable height and mobility for various uses.

5.1 Adjusting Height

The table features four adjustable height levels to suit different needs and bed heights. The height range (bottom to top) is from 36.4 inches (92.5 cm) to 43.5 inches (110.5 cm).

- **Height Options:** 43.5" (110.5 cm), 41.1" (104.5 cm), 38.8" (98.5 cm), 36.4" (92.5 cm).
- To adjust, loosen the adjustment knobs on both legs, raise or lower the tabletop to the desired height, and then securely tighten the knobs. Ensure both sides are adjusted to the same level for stability.



Image 5.1: Detail of the adjustable height feature and adjustment knob.

5.2 Using Locking Wheels

The table is equipped with 4 swivel casters for easy movement. Each wheel has a locking mechanism to secure the table in place.

- To move the table, ensure all wheel brakes are in the 'OFF' position.
- To secure the table, push the lever on at least two diagonal casters to the 'ON' or locked position.

5.3 Versatile Applications

The overbed table is designed for multiple uses:

- **Overbed Desk:** Ideal for working, studying, or dining while in bed.
- **Standing Workstation:** Adjust to a higher setting for a comfortable standing desk.
- **Bar or Dining Table:** Can be used in living rooms or dining areas for entertaining.
- **Laptop Table/Writing Desk:** Provides a spacious surface for computing or writing tasks.



Image 5.2: The overbed table in use over a queen-sized bed.



Image 5.3: The overbed table configured as a standing desk.

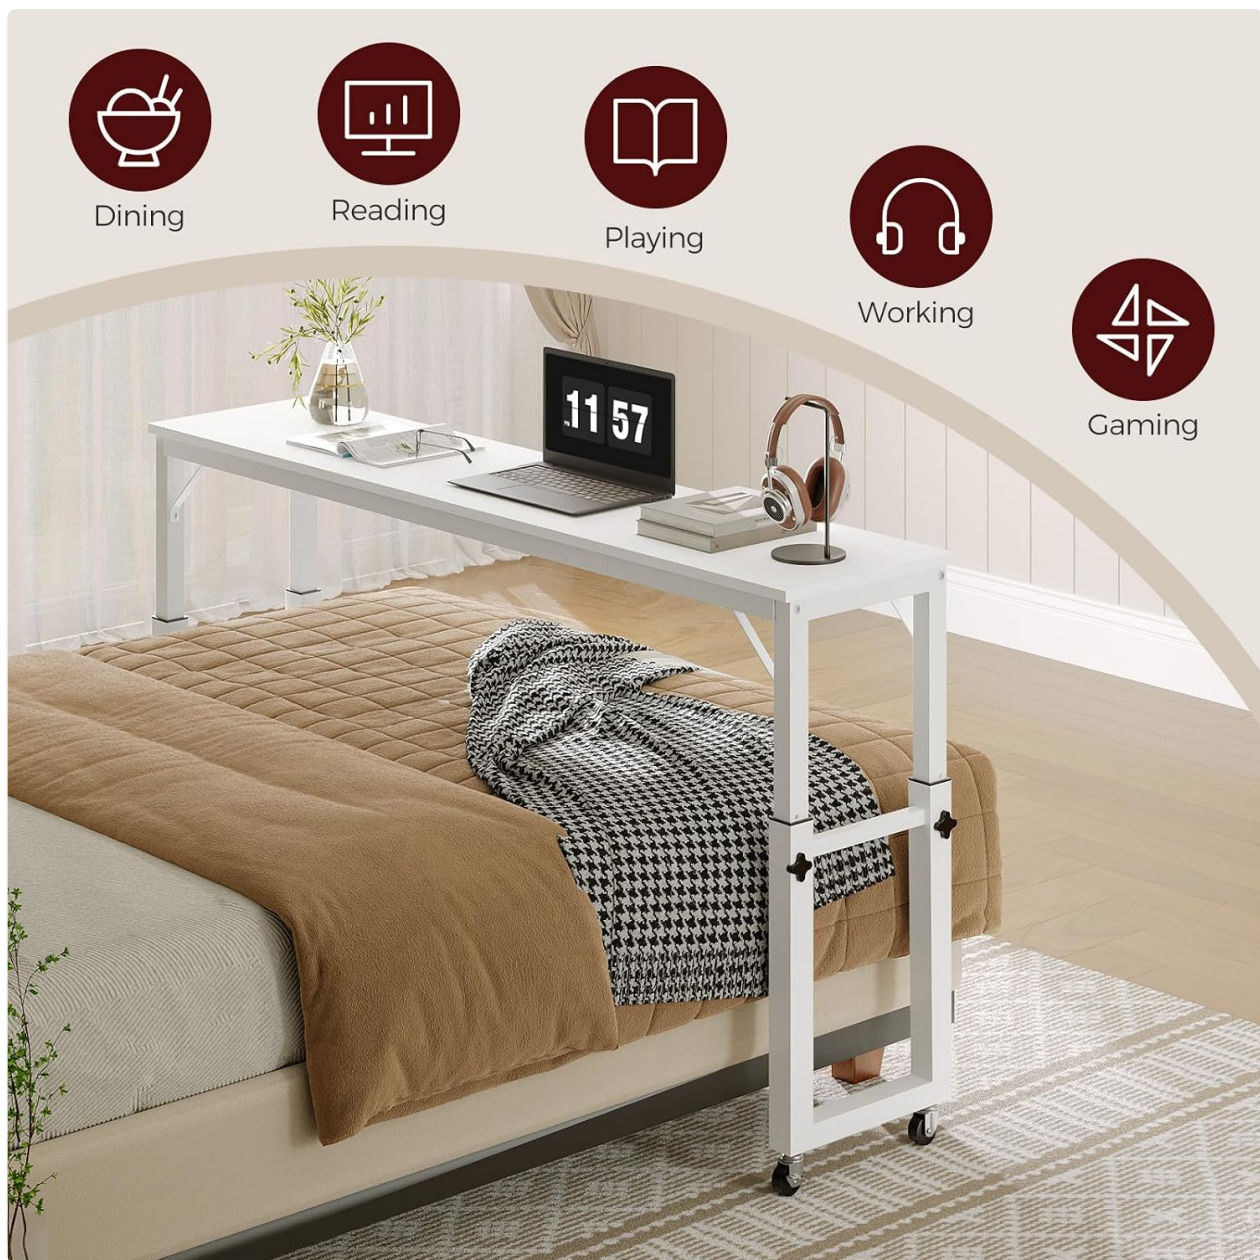


Image 5.4: Visual representation of the table's multifunctional capabilities.

Your browser does not support the video tag.

Video 5.1: Official MAHANCRIIS video demonstrating various uses of the overbed table, including as a bed desk, standing desk, and bar table.

6. MAINTENANCE

To ensure the longevity and appearance of your MAHANCRIIS Overbed Table, follow these simple maintenance guidelines:

- **Cleaning:** The smooth coated surface is easy to clean. Wipe the tabletop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Regular Checks:** Periodically inspect all screws and fasteners to ensure they remain tight. Re-tighten if necessary to maintain stability.
- **Caster Care:** Keep the wheel casters free of debris (hair, dust, etc.) to ensure smooth movement.
- **Weight Limit:** Always adhere to the maximum weight recommendation of 100 pounds to prevent structural damage.

7. TROUBLESHOOTING

If you encounter any issues with your overbed table, refer to the following common troubleshooting tips:

- **Table Wobbles:**
 - Ensure all assembly screws are fully tightened.
 - Verify that the table is on a flat, even surface.
 - Check that both height adjustment knobs are securely tightened and set to the same level.
- **Wheels Not Rolling Smoothly:**
 - Check for debris (e.g., hair, lint) caught in the casters and remove it.
 - Ensure the wheel brakes are fully disengaged ('OFF' position).
 - Note that movement on thick carpets may be less smooth than on hard floors.
- **Difficulty Adjusting Height:**
 - Loosen the adjustment knobs completely before attempting to change the height.
 - Ensure no weight is on the tabletop when adjusting height.

8. SPECIFICATIONS

Feature	Specification
Brand	MAHANCRIIS
Model Name	MTWT18001
Product Dimensions (D x W x H)	15.8" x 70.9" x 43.5" (40cm x 180cm x 110.5cm)
Adjustable Height Range	36.4" to 43.5" (92.5cm to 110.5cm)
Item Weight	38.8 pounds (17.6 kg)
Maximum Weight Recommendation	100 pounds (45.3 kg)
Frame Material	Metal
Top Material Type	Engineered Wood (Particleboard)
Color	White
Table Design	Overbed Table
Special Features	Adjustable Height, Rolling Casters with Brakes, Multifunctional
Room Type	Bedroom, Living Room, Office
Assembly Tools Included	Allen Key, Screw Driver

9. WARRANTY INFORMATION

Specific warranty details for the MAHANCRIIS MTWT18001 Overbed Table are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging, the retailer's website where the product was purchased, or contact MAHANCRIIS customer support directly.

10. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact MAHANCRIIS customer support. Contact information can typically be found on the product packaging, the official MAHANCRIIS website, or through the retailer from whom you purchased the product.