

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Jugeman](#) /

› Jugeman P99 Smart Watch User Manual

Jugeman P99

Jugeman P99 Smart Watch User Manual

Model: P99

1. INTRODUCTION

Thank you for choosing the Jugeman P99 Smart Watch. This device is designed to enhance your daily life with its comprehensive features, including Bluetooth calling, health monitoring, and various sports modes. This manual provides detailed instructions to help you set up, operate, and maintain your smart watch.



Image: The Jugeman P99 Smart Watch in Wine Red, showcasing its large display and sleek design.

2. WHAT'S IN THE BOX

- Jugeman P99 Smart Watch
- User Manual


3. INITIAL SETUP

To begin using your Jugeman P99 Smart Watch, please follow these steps to connect it with your smartphone via the "GloryFit" APP.

1. **Download the GloryFit App:** Open your phone's app store (Google Play Store for Android or Apple App Store for iOS) and search for "GloryFit". Download and install the application.
2. **Enable Bluetooth:** On your smartphone, navigate to your settings and ensure Bluetooth is turned on.

3. **Pair the Device:** Open the GloryFit app. Follow the on-screen prompts to add a new device. Select "P99" from the list of available devices to initiate pairing. Confirm the pairing request on both your phone and the smart watch.
4. **Grant Permissions:** Allow the GloryFit app necessary permissions for notifications, calls, and health data synchronization to ensure full functionality.

First of all, please be sure to connect our smart watch through the "GloryFit" APP

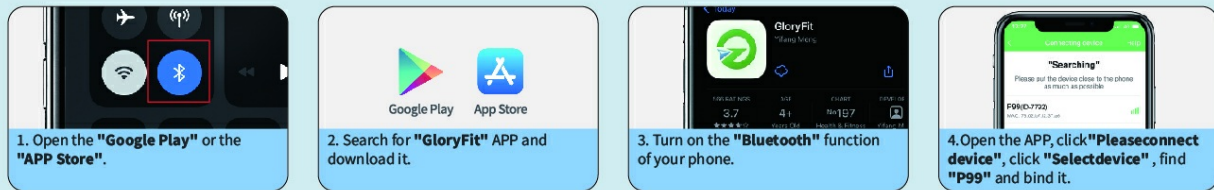

How to make a call please follow? Follow these steps :

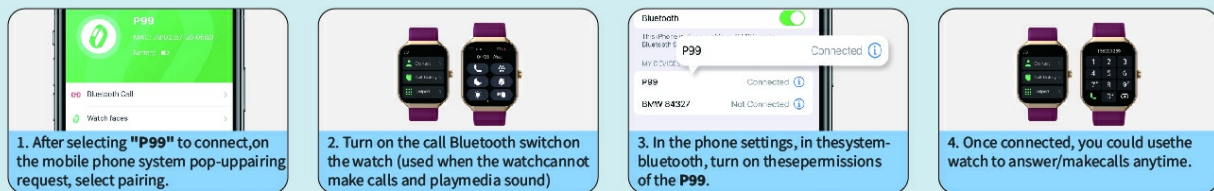


Image: Visual guide demonstrating the steps to connect the smart watch to the GloryFit app and enable Bluetooth calling.

4. OPERATING THE SMART WATCH

4.1 Bluetooth Call and Message Reminder

The Jugeman P99 Smart Watch features a built-in microphone and Hi-Fi speaker, allowing you to make and receive calls directly from your wrist. It also displays notifications from various apps and SMS messages.

- **Making/Receiving Calls:** Once connected via Bluetooth, you can access call logs, contacts, and a dial pad directly on the watch.
- **Message Notifications:** Receive alerts for incoming calls, SMS, and app notifications (e.g., Facebook, WhatsApp, Instagram).

BLUETOOTH CALL

Make or answer calls directly on the watch at anytime and anywhere.



Microphone



Call logs



Speaker



Dial pad



Contacts



Image: Illustration of the Bluetooth call function, showing the watch displaying an incoming call and options for microphone, call logs, speaker, dial pad, and contacts.

4.2 Display and Watch Faces

The watch features a 1.96-inch TFT HD color display with a 320*386 resolution, offering clear visuals and high touch sensitivity. You can personalize your watch face from over 250 options or use your own photos.

1.96"

Full Touch Screen

320*386 Screen Resolution Larger screen with clearer resolution for better visual enjoyment

CLEARER
VIEW



Image: Close-up view of the 1.96-inch HD touch screen, highlighting its clear resolution and vibrant display.

250+

Customized watch face



1. Change the Dial as You Wish Rich dials to meet diverse aesthetics.
2. Support custom dials, choose favorite photo as dial to create a unique smartwatch

Image: A collage of various customizable watch faces available for the Jugeman P99 Smart Watch, demonstrating the wide range of aesthetic options.

4.3 Multi-Functionality

The P99 Smart Watch offers a variety of useful functions beyond calls and notifications:

- Timer and Stopwatch
- Alarm Clock
- Sedentary Reminder
- Music Control
- Weather Forecast
- Brightness Adjustment
- Photo Control (remote camera shutter)
- Calculator

Multi-Function Smart Watch



Bluetooth
Call



Message
Remind



Breathing
Training




Women's
Health



Stopwatch
& Timer



Music
Control



Camera
Control



Weather
Display



Luminance
Regulation





Voice
Assistant



Sedentary
Notification



Find
Phone

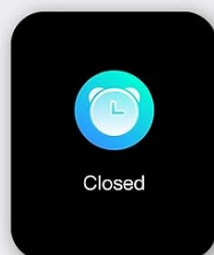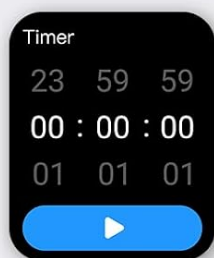

Find phone



The bell has stopped

Image: An overview of the multi-functional capabilities of the smart watch, including icons for Bluetooth call, message reminder, breathing training, women's health, stopwatch, music control, camera control, weather display, luminance regulation, voice assistant, sedentary notification, and find phone.

5. HEALTH MONITORING

The P99 Smart Watch is equipped with an advanced optical sensor for comprehensive health tracking.

- **24-hour Heart Rate Monitoring:** Continuously tracks your heart rate throughout the day.
- **SpO2 Measurement:** Monitors your blood oxygen saturation levels.
- **Sleep Quality Detection:** Analyzes your sleep patterns, including deep sleep, light sleep, and awake time, to provide insights into your sleep health.

All health data can be viewed and analyzed in detail within the "GloryFit" APP.



Image: Displays the watch's heart rate monitoring interface with a graph of heart rate over time, and the sleep monitor interface showing sleep duration and stages (deep sleep, light sleep, awake).

Your browser does not support the video tag.

Video: An official product video demonstrating the 1.96" HD display, various sports modes, heart rate monitoring, and sleep tracking features of the Jugeman P99 Smart Watch.

6. SPORTS MODES AND WATERPROOFING

6.1 113+ Sports Modes

The fitness watch supports over 113 sports modes, including running, cycling, walking, basketball, yoga, and more. During your exercise, the activity tracker records data such as steps taken and calories burned.

6.2 IP68 Waterproof Rating

With an IP68 water and dust resistant rating, the smart watch can be used during hand washing and in the rain. *Note: It is not suitable for swimming or hot baths.*



Image: Demonstrates the IP68 waterproof capability, showing icons for rain, shower, and sweat, indicating the watch's resistance to these conditions.

7. CHARGING

The Jugeman P99 Smart Watch uses magnetic charging for convenience. Ensure the charging pins align correctly with the watch's charging points.

- **Charging Time:** Approximately 2.5 hours for a full charge.
- **Average Usage:** 5-7 days on a single charge.
- **Power-saving Mode:** Up to 26 days.
- **Standby Time:** Up to 30 days.



Image: Illustrates the magnetic charging process for the smart watch, showing the charging cable connected to the watch and battery life indicators.

8. SPECIFICATIONS

Feature	Detail
Model Name	P99
Brand	Jugeman
Screen Size	1.96 Inches
Shape	Rectangular
Connectivity Technology	Bluetooth
Water Resistance	IP68
Battery Cell Composition	Lithium Polymer
Item Weight	2.89 ounces
Package Dimensions	6.46 x 3.74 x 0.75 inches
Operating System	Android Wear 2.7
Special Feature	Camera
GPS	GPS Via Smartphone

9. TROUBLESHOOTING

- If you encounter issues with your Jugeman P99 Smart Watch, please try the following common troubleshooting steps:
- **Connection Issues:** Ensure Bluetooth is enabled on your phone and the watch is within range. Restart both the watch and your phone, then try pairing again.
 - **App Synchronization:** Make sure the GloryFit app is running in the background and has all necessary permissions enabled. Check for app updates.
 - **Notifications Not Appearing:** Verify that app notifications are enabled in both your phone's settings and within the

GloryFit app for specific applications.

- **Inaccurate Data:** Ensure the watch is worn correctly, not too loose or too tight, and that the sensors are clean.
- **Battery Drain:** Reduce screen brightness, limit background app refresh, and disable unnecessary features to extend battery life.
- **Watch Not Responding:** Try a hard reset by pressing and holding the side button for approximately 10-15 seconds until the watch restarts.

For persistent issues, refer to the official Jugeman support resources or contact customer service.

10. WARRANTY AND SUPPORT

The Jugeman P99 Smart Watch comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, warranty claims, or any other inquiries, please contact Jugeman customer service through the contact information provided on their official website or within the GloryFit application.

© 2024 Jugeman. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I download or access the gallery to save pictures on the Jugeman P99 Smart Watch?

The Jugeman P99 Smart Watch does not have a built-in "gallery" app for storing and viewing a collection of photos directly on the device. However, you can use your phone's gallery to customize the...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0DYT5Q2H2>

More documents and user manuals: <https://manuals.plus/>