

VEVOR J950

VEVOR Folding Metal Wire Scooter Rear Basket Instruction Manual

Model: J950

1. INTRODUCTION

This manual provides essential instructions for the safe and proper installation, operation, and maintenance of your VEVOR Folding Metal Wire Scooter Rear Basket. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

- **Weight Capacity:** Do not exceed the maximum load capacity of 33 lbs (15 kg). Overloading can affect scooter stability and lead to accidents.
- **Secure Attachment:** Ensure the basket is securely attached to the scooter's 1-inch receiver hitch before each use. Verify all pins and fasteners are properly engaged.
- **Folding Mechanism:** Exercise caution when folding or unfolding the basket. Keep hands clear of pinch points and operate the spring lock carefully to prevent injury.
- **Load Distribution:** Distribute items evenly within the basket to maintain scooter balance. Avoid placing heavy items on one side.
- **Visibility:** Ensure the basket does not obstruct the scooter's lights or reflectors. The basket includes integrated reflectors for enhanced visibility.
- **Regular Inspection:** Periodically inspect the basket for any signs of damage, wear, or loose components. Do not use if damaged.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Folding Metal Wire Rear Basket
- 2 x Clevis Pins (Diameter: 9.5 mm)
- 1 x L-Shaped Bracket
- 1 x Bolt

- 1 x Butterfly Nut
- 1 x Washer

4. SPECIFICATIONS

Model Number	J950
Material	Iron
Color	Black
Mounting Type	Rack Mount (1-inch Receiver Compatible)
Item Weight	9 lbs (4.1 kg)
Load Capacity	33 lbs (15 kg)
Product Dimensions (L x W x H)	17.7 x 17.7 x 15.3 inches (450 x 450 x 390 mm)

5. SETUP AND INSTALLATION

The VEVOR Scooter Rear Basket is designed for easy installation on mobility scooters equipped with a 1-inch receiver hitch. No specialized tools are required beyond those provided.

1. **Prepare the Basket:** Unpack all components and ensure they are free from damage.
2. **Attach L-Shaped Bracket:** Secure the L-shaped bracket to the basket's mounting plate using the provided bolt, washer, and butterfly nut. Ensure it is tightened firmly.
3. **Insert into Receiver:** Slide the L-shaped bracket into your scooter's 1-inch receiver hitch. Align the holes on the bracket with the holes on the receiver.
4. **Secure with Clevis Pins:** Insert the clevis pins through the aligned holes to secure the basket to the receiver. Ensure the pins are fully engaged and locked.
5. **Unfold the Basket:** If the basket is in its folded position, carefully release the spring locks and unfold the sides and bottom into the open basket configuration. Ensure all panels are securely locked into place.



Figure 5.1: Foldable Design of the Rear Basket

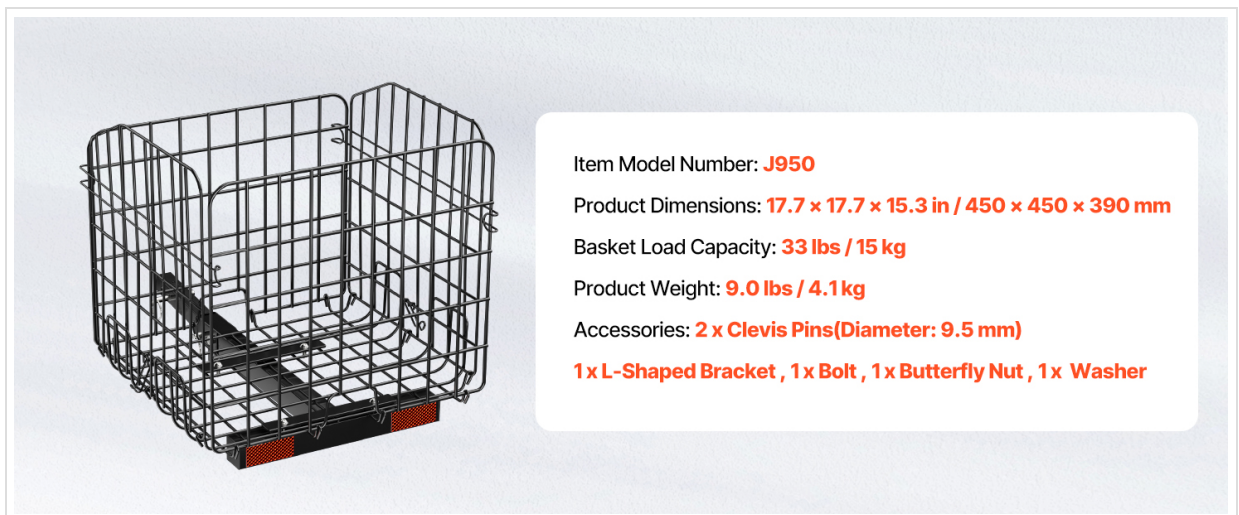


Figure 5.2: Product Specifications and Included Components

6. OPERATING INSTRUCTIONS

Once installed, the VEVOR Scooter Rear Basket provides convenient storage for various items.

1. **Unfolding for Use:** If the basket is folded, gently pull the sides outwards and push the bottom down until all locking mechanisms click into place, forming a stable basket shape.
2. **Loading Items:** Place items such as groceries, bags, or personal belongings into the basket. Ensure

the total weight does not exceed 33 lbs (15 kg).

3. **Secure the Load:** For safety, ensure all items are stable and will not shift or fall out during transit. Consider using bungee cords or a cargo net for loose items.
4. **Folding for Storage:** To fold the basket, empty its contents. Carefully disengage the locking mechanisms for the sides and bottom, allowing the basket to collapse flat. Secure it in the folded position using the spring lock to save space when not in use.



Figure 6.1: Rear Basket in Use on a Mobility Scooter

Achieve Your Daily Loading Needs

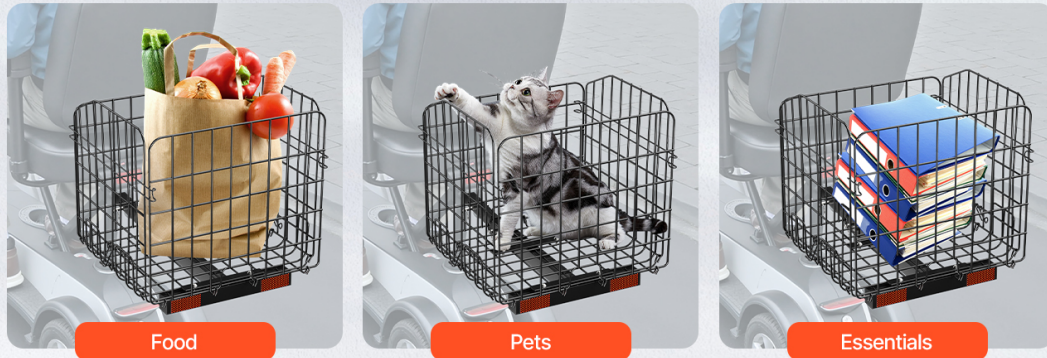



Figure 6.2: Examples of Items Carried in the Basket

7. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your VEVOR Scooter Rear Basket.

- **Cleaning:** Wipe the basket with a damp cloth and mild detergent as needed. Avoid abrasive cleaners or solvents that could damage the rust-proof coating.
- **Inspection:** Regularly check all welds, joints, and the folding mechanism for signs of wear, damage, or corrosion. Ensure all fasteners (pins, bolt, nut) remain tight.
- **Rust Prevention:** The basket features a rust-proof coating. If any scratches or chips occur, touch up with appropriate rust-inhibiting paint to prevent corrosion.
- **Storage:** When not in use for extended periods, store the basket in a dry place to protect it from extreme weather conditions.


High-Quality Materials

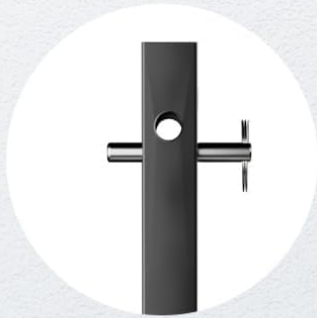

Strong & Durable



Anti-deformation

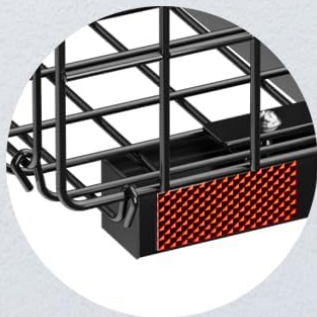

Rust-Proof



Figure 7.1: High-Quality Materials and Construction Details

8. TROUBLESHOOTING

If you encounter issues with your scooter rear basket, refer to the following common solutions:

- **Basket Rattles or Squeaks:**

- Ensure all clevis pins and the L-shaped bracket bolt are securely tightened.
- Check that the folding mechanism is fully engaged and locked in both the open and folded positions.
- Verify that items inside the basket are not loose and causing noise. Secure them with a net or bungee cords.

- **Difficulty Folding/Unfolding:**

- Ensure no debris is obstructing the moving parts of the folding mechanism.
- Apply a small amount of silicone lubricant to the pivot points if movement is stiff.
- Confirm the spring locks are fully disengaged when attempting to fold or unfold.

- **Basket Appears Slanted or Unstable:**

- Re-check the installation of the L-shaped bracket and clevis pins to ensure they are correctly seated in the scooter's receiver.
- Verify that the scooter's receiver hitch itself is not damaged or bent.
- Ensure the load within the basket is evenly distributed and not exceeding the weight limit.

9. WARRANTY INFORMATION

This VEVOR product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official VEVOR website for detailed warranty terms and conditions. Keep your proof of purchase for any warranty claims.

10. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your VEVOR Scooter Rear Basket, please contact VEVOR customer service through their official website or the contact information provided in your product packaging.

You can also visit the [VEVOR Store on Amazon](#) for more product information and support resources.