

Mepplzian Arched Medicine Cabinet

Mepplzian Arched Medicine Cabinet with Mirror

Model: Arched Medicine Cabinet (16x32 Inch, Brushed Nickel-Right Hinges)

Brand: Mepplzian

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Mepplzian Arched Medicine Cabinet with Mirror. Please read all instructions carefully before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.

SAFETY INFORMATION

WARNING: Measure wall size before installation. Use caution when handling glass mirror. Follow installation instructions for secure mounting.

- Always wear appropriate safety gear, including gloves and eye protection, during assembly and installation.
- Ensure the mounting surface is structurally sound and capable of supporting the weight of the cabinet and its contents.
- Do not overtighten screws during assembly to prevent damage to materials.
- Keep small parts away from children to prevent choking hazards.
- This cabinet is designed for wall-mounted installation only. Do not attempt recessed installation.

PRODUCT FEATURES

- **Premium Construction:** Crafted with E1-grade MDF and rust-resistant aluminum alloy hinges for durability in humid bathroom environments. Features a tempered glass mirror for safety.
- **Smart Storage Solution:** Includes 3 adjustable shelves, each supporting up to 15 lbs, plus a hidden compartment. The 16x31 inch interior provides ample space for toiletries and essentials.
- **Arched Design:** Offers a sleek and unique aesthetic.
- **FSC-Certified Wood Frame:** The cabinet frame is made from responsibly sourced wood.

- **Door Opening:** Single door design, opens from LEFT to RIGHT.

INSTALLATION GUIDE

1. Pre-Installation Checks

Before beginning installation, carefully measure your bathroom wall to ensure the cabinet fits the intended space. Consider the height from the sink to the ceiling and the distance between any wall lights.



Image: Measure Your Space. This diagram illustrates how to measure the available space for your medicine cabinet, including vertical clearance from the sink and horizontal clearance if wall lights are present.

Product Dimensions

Please check the size carefully before ordering!

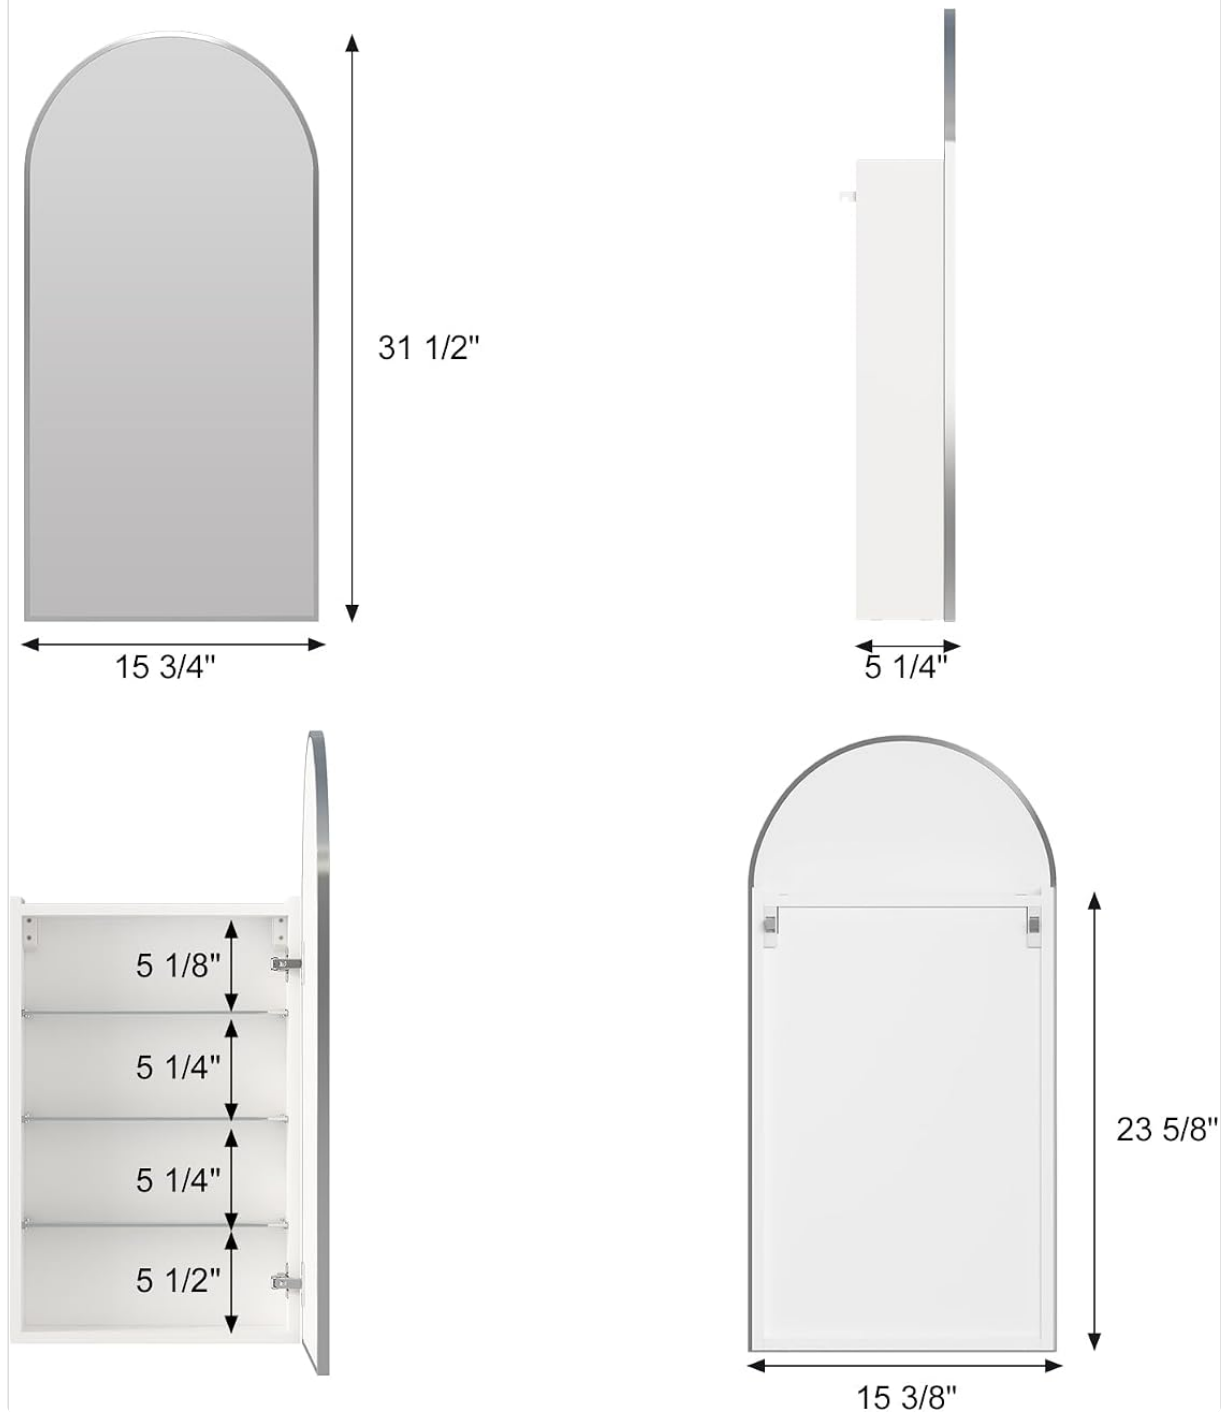


Image: Product Dimensions. This image provides precise measurements of the cabinet's exterior and interior, including shelf heights, to aid in planning your installation.

2. Tools Required (Not Included)

- Drill
- Measuring Tape
- Level
- Screwdriver (Phillips head)
- Pencil

3. Assembly Steps

The cabinet comes with pre-drilled holes and detailed instructions. Follow the provided assembly diagram carefully.

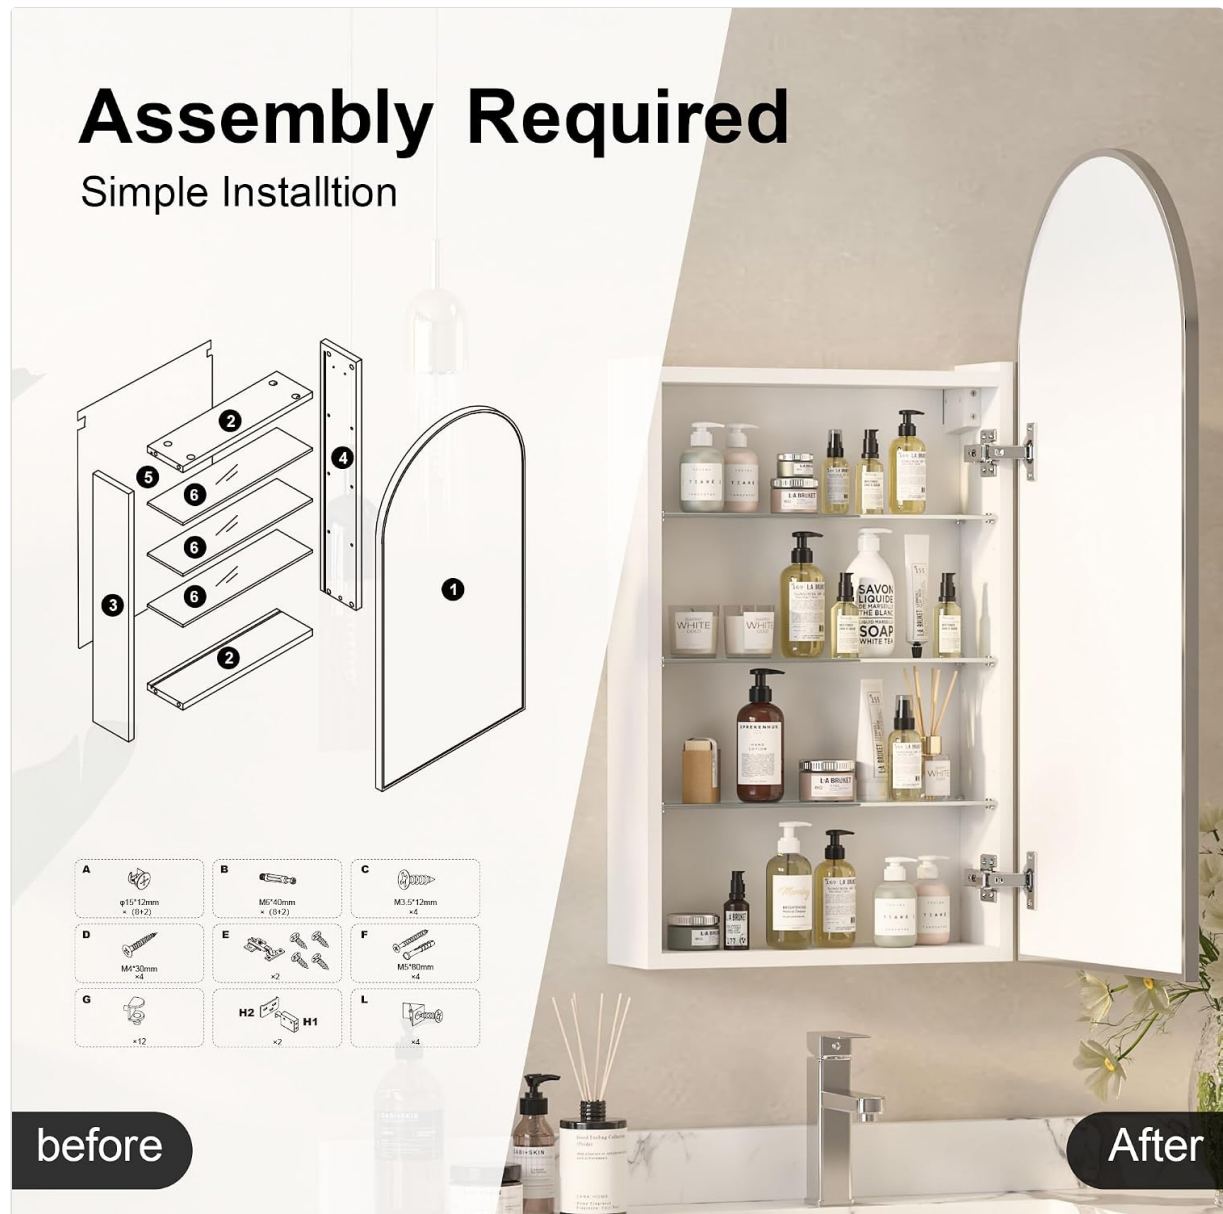


Image: Assembly Required. This diagram illustrates the components and sequence for assembling the medicine cabinet before mounting.

4. Mounting the Cabinet

IMPORTANT: This medicine cabinet is designed for **wall-mounted installation only**. It is NOT suitable for recessed installation.

Medicine Cabinet -Wall Mounted Only

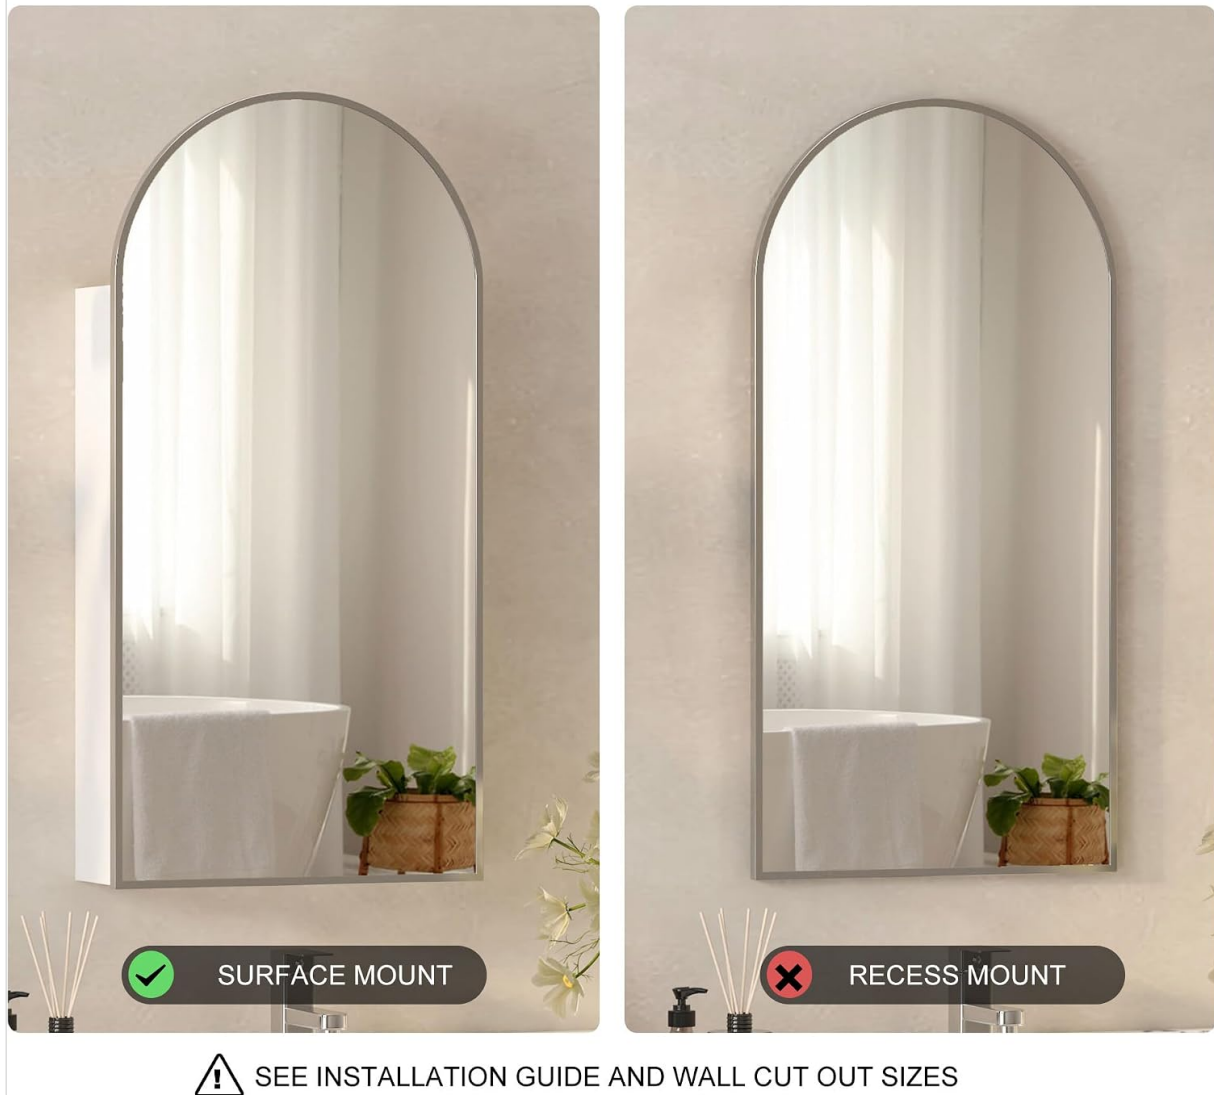


Image: Medicine Cabinet - Wall Mounted Only. This image clearly distinguishes between the correct surface mount method and the incorrect recessed mount method.

Use the provided mounting hardware to securely attach the cabinet to the wall. Ensure the cabinet is level before tightening all fasteners.



Image: Installation Methods. This image provides visual guidance on the steps for mounting the cabinet and adjusting the hangers.

5. Determining Mirror Cabinet Size (Video Guide)

For additional guidance on determining the appropriate size and placement for your mirror cabinet, please watch the official video below.

Your browser does not support the video tag.

Video: How to determine the size of a mirror cabinet. This video provides visual instructions and tips for selecting and measuring the correct size for your mirror cabinet installation.

OPERATION

To open the cabinet door, gently pull the mirror from the right side. The door is designed to open from left to right. The adjustable shelves inside can be repositioned to accommodate items of various heights. Simply lift and move the shelf supports to your desired level.



Image: Cabinet Interior. This image shows the cabinet with its door open, displaying the adjustable glass shelves and storage capacity.

Choose an appropriate door opening according to the actual situation



Image: Door Opening Options. This image illustrates the two possible door opening directions, though this specific model opens left to right.

MAINTENANCE

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into the edges.
- **Cleaning the Cabinet:** Wipe the exterior and interior surfaces with a soft, damp cloth. For stubborn spots, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, ammonia-based products, or solvents, as these can damage the finish and mirror.
- **Regular Inspection:** Periodically check all screws and hardware to ensure they remain tight. Tighten as needed.

TROUBLESHOOTING

Door Misalignment or Uneven Gap

If the cabinet door appears misaligned or has an uneven gap, the hinges may need adjustment. The aluminum alloy hinges are designed for easy adjustment. Refer to the hinge adjustment section in the detailed assembly instructions (if provided separately) or gently adjust the screws on the hinges to achieve proper alignment.

Cabinet Not Flush Against the Wall

If the cabinet is not sitting flush against the wall after installation, check the mounting brackets. Ensure that the far outside edge of the mounting brackets are positioned inside the inside edge of the medicine cabinet frame. Incorrect placement can cause the cabinet to tip forward. Adjust the mounting brackets and the adjustment screws on the back of the hanger as necessary.

SPECIFICATIONS

Feature	Detail
Brand	Mepplzian
Model Name	Arched Medicine Cabinet
Color	Brushed Nickel-right Hinges
Material	Engineered Wood (MDF), Metal (Frame), Glass (Mirror, Shelves)
Product Dimensions (D x W x H)	5.1"D x 15.7"W x 31.4"H
Item Weight	25.2 Pounds
Number of Shelves	3 (Adjustable)
Weight Capacity per Shelf	15 lbs (approx. 6.8 kg)
Installation Type	Wall Mounted Only
Additional Features	Waterproof, Tempered Glass Mirror, Rust-resistant Hinges
Country of Origin	China

WARRANTY AND SUPPORT

Mepplzian products are manufactured to high-quality standards. For any questions regarding assembly, missing parts, or product performance, please contact Mepplzian customer support. Specific warranty details may be provided with your purchase documentation. Please retain your proof of purchase for warranty claims.

For assistance, please visit the [Mepplzian Store on Amazon](#).