

## Keazile KZ-Grand

# Keazile 48x32 Inch LED Lighted Medicine Cabinet User Manual

Model: KZ-Grand | Brand: Keazile

## 1. INTRODUCTION

Thank you for choosing the Keazile 48x32 Inch LED Lighted Medicine Cabinet. This manual provides essential information for the safe and efficient installation, operation, and maintenance of your new medicine cabinet. Please read all instructions carefully before installation and retain this manual for future reference.

## 2. PRODUCT FEATURES

- **3 Color & Brightness Adjustable LED Light:** Features cool, natural, and warm light modes. Brightness is steplessly adjustable from 10%-100%.
- **Anti-fog Function:** Activates to clear mirror fog automatically within 10-15 minutes, with an automatic 1-hour shut-off for safety and energy efficiency.
- **Light Setting Memory Function:** Retains the last used light color and brightness settings.
- **Built-in Outlet & USB Ports:** Includes a DC outlet and two USB ports for charging bathroom appliances.
- **Fully Adjustable & Removable Glass Shelves:** Two tempered glass shelves provide flexible storage space.
- **ETL Certified:** Meets safety performance standards for quality and reliability.
- **Surface & Recessed Mount Options:** Can be installed as a surface mount or recessed mount. Side glass panels are detachable for recessed installation.
- **Mirrors on Both Sides:** Cabinet door features mirrors on both sides for convenient grooming.

## 3. PACKAGE CONTENTS

Please ensure all components are present and undamaged before proceeding with installation:

- Medicine Cabinet Unit
- Tempered Glass Shelves (3)
- Accessory Kit (includes mounting hardware, silicone buffers)
- User Manual

## 4. SPECIFICATIONS

| Feature                  | Detail                                                                                                                                       |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|
| Brand                    | Keazile                                                                                                                                      |
| Model Name               | Grand                                                                                                                                        |
| Size                     | 48 in. x 32 in.                                                                                                                              |
| Product Dimensions       | 5"D x 48"W x 32"H                                                                                                                            |
| Material                 | Aluminum, Glass                                                                                                                              |
| Color                    | Black                                                                                                                                        |
| Mounting Type            | Recessed or Surface Mounted                                                                                                                  |
| Number of Shelves        | 3                                                                                                                                            |
| Item Weight              | 79.3 Pounds                                                                                                                                  |
| Weight Limit (per shelf) | 11 Pounds                                                                                                                                    |
| Special Features         | ETL Certification, Smart Touch Control, Lighting Memory Function, Dimmable, 3 Color Lighting Modes, Defogger, Space-saving, Soft-close Hinge |

## 5. SAFETY INFORMATION

Please observe the following safety precautions during installation and use:

- Always disconnect power at the circuit breaker before installation or maintenance.
- Installation should be performed by a qualified electrician if hardwiring is chosen.
- Wear appropriate personal protective equipment (PPE) such as safety glasses and gloves during installation.
- Handle glass components with care to prevent breakage and injury.
- Ensure the mounting surface is structurally sound and capable of supporting the cabinet's weight.
- Do not overload shelves beyond the specified weight limit.
- Keep electrical components dry and away from water.

## 6. INSTALLATION

The Keazile medicine cabinet supports both surface mount and recessed mount installations. Choose the method that best suits your bathroom design.

### 6.1 Prepare Installation Tools

Gather the following tools before starting installation:

- Pencil
- Measuring Tape
- Level
- Drill

- Screwdriver
- Safety Glasses

## 6.2 Surface Mount Installation

1. Confirm the desired installation location and mark spots for the top bracket.
2. Drill at the marked spots and securely attach the top bracket to the wall.
3. Carefully place the cabinet onto the top bracket. Secure the two bottom brackets to the bottom of the cabinet, then install the side panels.



### Two way to connect power supply :



Option 1: Hardwired



Option 2: Wall Switch



Image: Keazile Medicine Cabinet showing both surface mount and recessed mount options, along with power connection methods (hardwired or wall switch). The surface mount option is shown on the left, with the cabinet mounted directly onto the wall.

## 6.3 Recessed Mount Installation

For recessed mounting, the cabinet is designed to fit into a wall cutout. The side glass panels are detachable to allow for a flush fit.

1. Remove the side panels and detach the cabinet door(s).

2. Make an outline for the cabinet cutout on the wall, then carefully cut through the wall and remove the cutout section. Refer to the dimensions table for precise cutout measurements.
3. Place the cabinet into the cutout opening. Secure the cabinet to the wall studs or appropriate anchors, then reinstall the cabinet door(s).

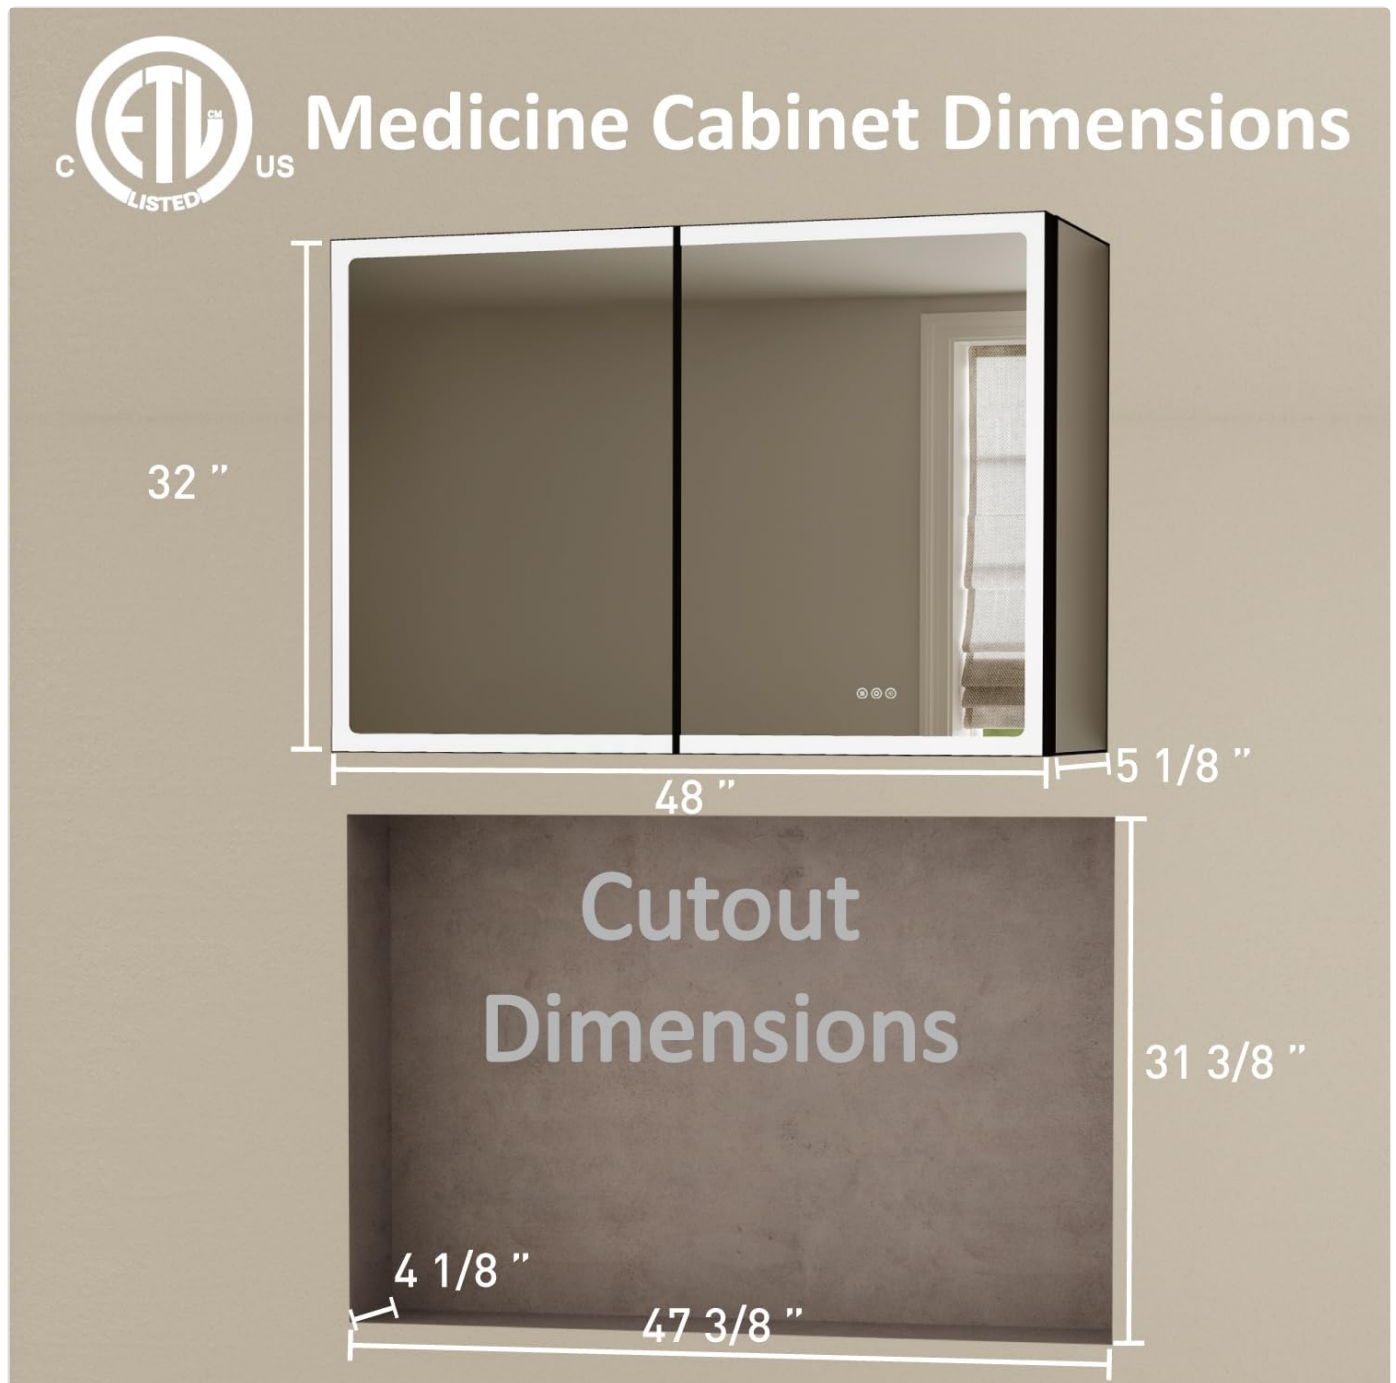


Image: Detailed dimensions for the Keazile Medicine Cabinet (48"W x 32"H x 5"D) and the corresponding wall cutout dimensions (47 3/8"W x 31 3/8"H x 4 1/8"D) for recessed installation.

## 6.4 Power Connection

The cabinet can be powered in two ways:

- **Hardwired:** Connect the cabinet wiring directly to your household power supply using appropriate wire connectors. This option requires professional installation.
- **Wall Switch:** Connect the cabinet wire to a dedicated wall switch for convenient on/off control.

## 6.5 Video Installation Guide

For a visual guide on installation, please refer to the following video:

Your browser does not support the video tag.

Video: DeerValley Mirrored Medicine Cabinet Installation Guide. This video demonstrates the steps for installing a mirrored medicine cabinet, including preparing the wall and mounting the unit.

## 7. OPERATING INSTRUCTIONS

Your Keazile medicine cabinet features intuitive touch controls for various functions.

### 7.1 LED Lighting Control

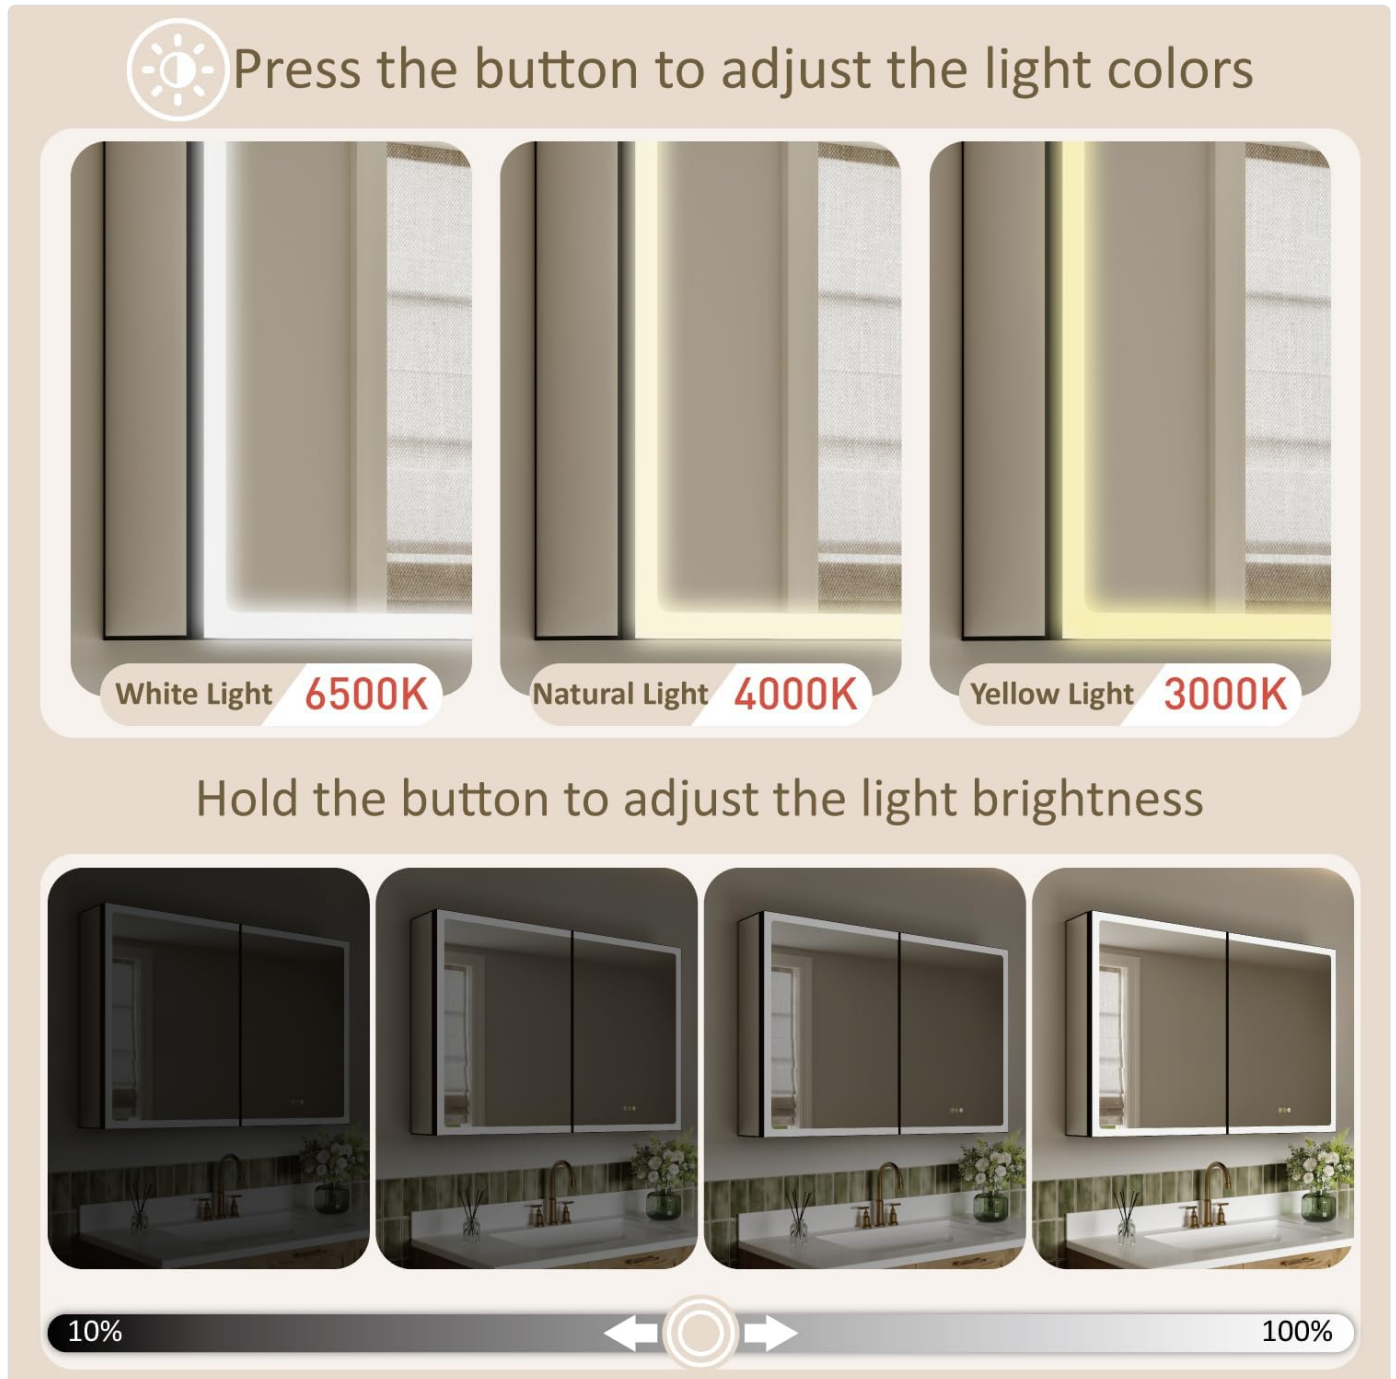



Image: Illustration of the 3 color light options (White, Natural, Yellow) and the stepless dimming function from 10% to 100% brightness on the Keazile Medicine Cabinet.

- **Power ON/OFF:** Short press the power button (usually indicated by a circle icon) on the mirror surface to turn the LED lights ON or OFF.
- **Adjust Color Temperature:** Short press the light mode button (usually indicated by a sun icon) to cycle through 3 color temperatures: cool light (6500K), natural light (4000K), and warm light (3000K).

- **Adjust Brightness:** Long press the light mode button to adjust the brightness from 10% to 100%. Release when the desired brightness is reached.
- **Memory Function:** The cabinet will remember your last chosen color temperature and brightness setting.

## 7.2 Anti-Fog Function

# Quick & Safe Anti-fog

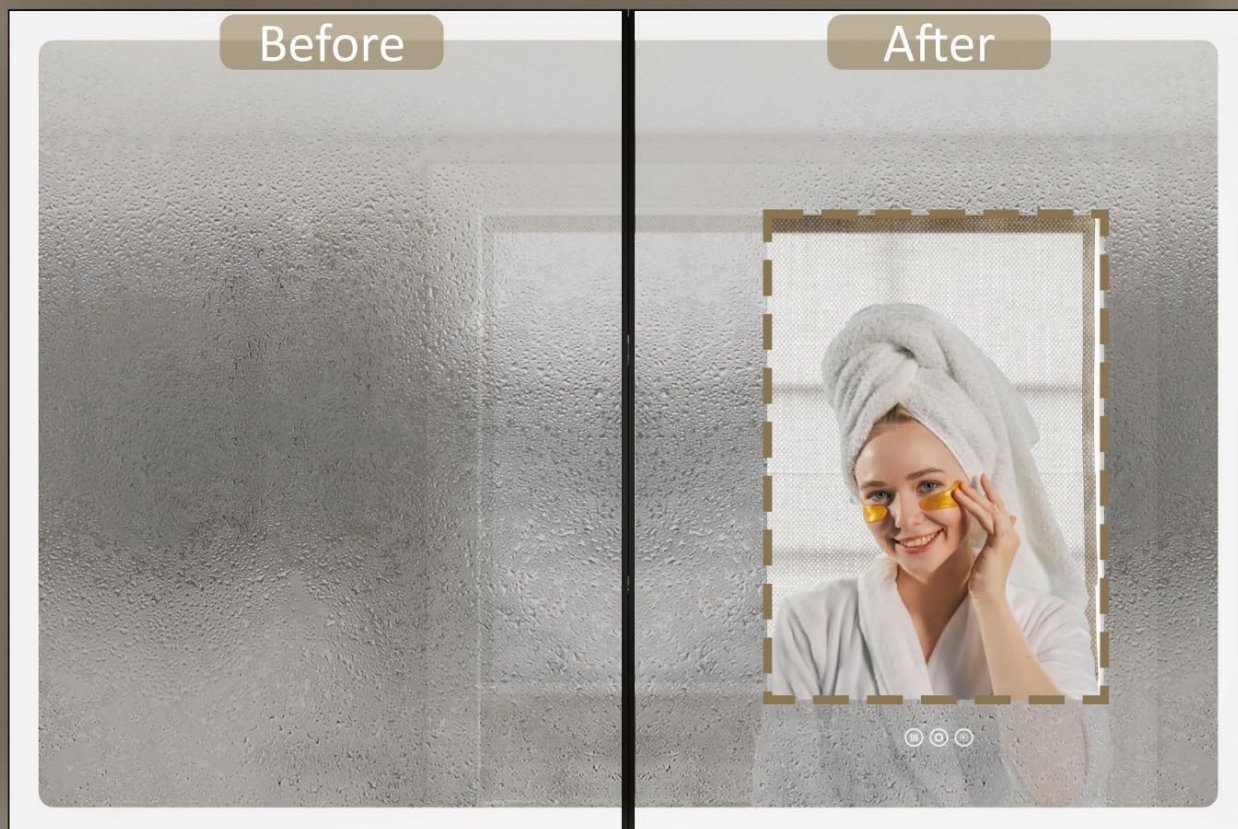

Touch to activate anti-fog function, wait few minutes, the mist on the mirror will automatically disappear, shut off after 60 minutes




ENERGY  
SAVING

Image: Demonstrates the quick and safe anti-fog function of the Keazile Medicine Cabinet, showing a clear mirror after activation compared to a fogged one. The anti-fog feature automatically shuts off after 60 minutes.

- **Activate Defogger:** Touch the anti-fog button (usually indicated by a steam icon) on the mirror surface. The mirror's center panel will begin to defog.
- **Automatic Shut-off:** The defogging function will automatically turn off after 1 hour to conserve energy.

## 7.3 Internal Features

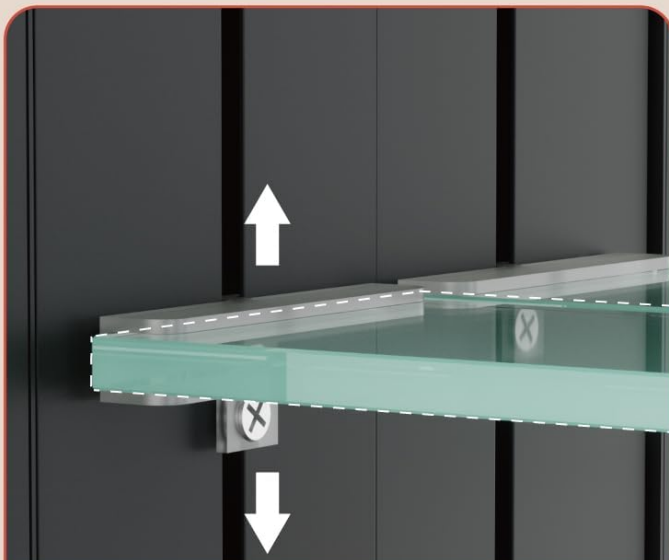

Adjustable Tempered Glass Shelves



Adjustable Soft Close Hinge



2 USB Ports & 1 DC Outlets



Silicone Buffer

Image: Close-up view of the Keazile Medicine Cabinet's internal features, including adjustable tempered glass shelves, adjustable soft-close hinges, built-in DC outlet and 2 USB ports, and silicone buffers for door protection.

- **Adjustable Shelves:** The tempered glass shelves can be adjusted to different heights to accommodate items of various sizes. Simply lift and reposition the shelf supports.
- **Built-in Outlets & USB:** Utilize the internal DC outlet and two USB ports to power or charge electric toothbrushes, razors, beauty devices, and other small electronics.
- **Soft-Close Hinges:** The cabinet doors are equipped with soft-close hinges for quiet and smooth operation.

## 7.4 Video Operating Guide

For a visual guide on operating the cabinet's features, please refer to the following video:

Your browser does not support the video tag.

Video: Keazile Medicine Cabinet with Light. This video showcases the various lighting and anti-fog functions of the Keazile medicine cabinet, demonstrating how to adjust brightness, color temperature, and activate the defogger.

## 8. MAINTENANCE

---

To ensure the longevity and optimal performance of your medicine cabinet, follow these maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth and a mild, non-abrasive glass cleaner to clean the mirror surfaces. Avoid harsh chemicals or abrasive materials that could damage the finish.
- **Electrical Components:** Ensure all electrical connections remain dry. Do not spray water directly onto the cabinet's electrical parts.
- **Hinges:** Periodically check the soft-close hinges for smooth operation. If needed, gently wipe away any dust or debris.
- **Shelves:** Clean glass shelves with a glass cleaner. Ensure they are securely seated on their supports.

## 9. TROUBLESHOOTING

---

If you encounter any issues with your medicine cabinet, refer to the following common troubleshooting steps:

- **Lights Not Working:**
  - Check if the power supply is connected correctly.
  - Ensure the wall switch (if used) is in the ON position.
  - Verify that the circuit breaker is not tripped.
- **Anti-Fog Not Activating/Working:**
  - Ensure the anti-fog button is pressed.
  - Allow 10-15 minutes for the defogger to reach full effectiveness.
- **Outlets/USB Ports Not Functioning:**
  - Check the internal power switch for the outlets/USB ports (if applicable).
  - Ensure the main power to the cabinet is active.
- **Door Not Closing Smoothly:**
  - Inspect hinges for any obstructions or damage.
  - Ensure the cabinet is level and securely mounted.

If the issue persists after attempting these steps, please contact customer support.

## 10. WARRANTY & SUPPORT

---

Keazile is committed to providing high-quality products and excellent customer service.

- **Warranty:** This product comes with a 2-year warranty, ensuring carefree use and coverage for manufacturing defects.
- **Customer Service:** For any questions, technical assistance, or warranty claims, please contact Keazile customer support. We offer 24/7 online service and email assistance within 24 hours.

Keazile

Image: Keazile brand logo.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**