

- Manuals.plus /
- › AXIAOLIFH /
- › ZL02D Smart Watch User Manual

AXIAOLIFH ZL02D

ZL02D Smart Watch User Manual

Model: ZL02D | Brand: AXIAOLIFH

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your ZL02D Smart Watch. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. The ZL02D Smart Watch is designed to be a versatile companion, offering features such as heart rate monitoring, blood pressure measurement, sleep tracking, and smart notifications.



Image: The ZL02D Smart Watch in blue, showcasing its circular display with various health and activity metrics, including steps, heart rate, and current weather, along with the date and time.

PACKAGE CONTENTS

Upon opening the package, please verify that all items are present:

- ZL02D Smart Watch
- Charging Cable
- User Manual (this document)
- Bracelet Strap

SETUP

1. Initial Charging

Before first use, fully charge your ZL02D Smart Watch. Connect the provided charging cable to the charging port on the back of the watch and plug the USB end into a standard USB power adapter (not included) or a computer's USB port. The watch display will indicate charging status. A full charge typically takes approximately 2 hours.

2. App Installation and Pairing

The ZL02D Smart Watch requires the DAFIT application for full functionality and data synchronization. The watch is compatible with Android 5.0+ and iOS 9.0+ devices.

1. Download the DAFIT app from your device's app store (Google Play Store for Android, Apple App Store for iOS).
2. Ensure Bluetooth is enabled on your smartphone.
3. Open the DAFIT app and follow the on-screen instructions to create an account or log in.
4. Within the app, navigate to the device pairing section (usually indicated by a device icon or "Add Device").
5. Select "ZL02D" or the corresponding device name from the list of available Bluetooth devices.
6. Confirm the pairing request on both your smartphone and the watch if prompted.

Once paired, the watch will synchronize time and data with your smartphone.

OPERATING INSTRUCTIONS

The ZL02D Smart Watch features a 1.28-inch full touch screen and side buttons for navigation and interaction.

Basic Navigation

- **Touch Screen:** Swipe left/right, up/down to navigate through menus and screens. Tap to select an option.
- **Side Button:** Typically used to return to the home screen, wake the screen, or access the main menu.

Health Monitoring

The watch can monitor various health indicators. For accurate readings, ensure the watch is worn snugly on your wrist.

- **Heart Rate Measurement:** Navigate to the heart rate interface on the watch. The watch will automatically begin measuring your heart rate.
- **Blood Pressure Measurement:** Navigate to the blood pressure interface. The watch will initiate the measurement.
- **Sleep Tracking:** Wear the watch while sleeping. It will automatically track your sleep patterns and provide data in the DAFIT app.

NOTE: Measurement data is for reference only and cannot be used as medical data.

Smart Features

- **Smart Reminders:** Once paired with the DAFIT app, the watch can receive notifications for calls, messages, and app alerts from your smartphone. Configure notification settings within the DAFIT app.
- **Bluetooth Call / Incoming Call Rejection:** The watch supports Bluetooth calls and one-click rejection of incoming calls. When an incoming call is received, you can choose to answer or reject it directly from the watch.

incoming call One-click rejection

After the APP is connected and paired, you can directly refuse to answer the call on the bracelet anytime, anywhere, and experience the convenient life brought by smart wear



Image: The ZL02D Smart Watch screen showing an incoming call notification, with icons for answering (green phone) and rejecting (red phone) the call.

- **Weather Forecast:** The watch can display real-time weather conditions after syncing with the DAFIT app and your phone's location services.

Weather forecast

Your weather steward, real-time weather conditions, provide convenience for your work and travel



Image: A person tying their shoe, with a pink ZL02D Smart Watch on their wrist displaying the current weather forecast, including temperature and conditions.

MAINTENANCE

Water Resistance (IP67)

The ZL02D Smart Watch features an IP67 professional waterproof design. This means it is resistant to splashes, rain, and brief immersion in water up to 1 meter for 30 minutes. It is suitable for daily use such as washing hands or light rain exposure.

IMPORTANT: Do not use the watch for swimming, diving, hot showers, or in saunas. Exposure to hot water or steam may

damage the waterproof seals. Avoid pressing buttons underwater.

IP67 waterproof

IP67 professional waterproof design, splashing and washing hands are easy to wear and worry-free



Image: Two ZL02D Smart Watches, one black and one blue, partially submerged in water, illustrating their IP67 water resistance.

Cleaning and Care


- Wipe the watch and strap regularly with a soft, damp cloth.

- Avoid using harsh chemicals, cleaning solvents, or strong detergents, as these may damage the watch's finish or components.
- Ensure the charging contacts are clean and dry before charging to prevent corrosion.

TROUBLESHOOTING

Problem	Possible Solution
Watch does not turn on	Ensure the watch is fully charged. Connect it to the charging cable and allow it to charge for at least 30 minutes before attempting to power on.
Unable to pair with smartphone	Ensure Bluetooth is enabled on your smartphone. Make sure the watch is within Bluetooth range (approx. 10 meters). Restart both the watch and your smartphone. Clear Bluetooth cache on your phone (Android) or forget the device and re-pair. Ensure the DAFIT app is updated to the latest version.
Inaccurate health readings	Ensure the watch is worn snugly on your wrist, not too loose or too tight. Avoid excessive movement during measurement. Note that readings are for reference only.
Notifications not received	Check notification permissions for the DAFIT app on your smartphone. Ensure the DAFIT app is running in the background. Verify that notifications are enabled within the DAFIT app settings for specific applications. Ensure the watch is connected via Bluetooth.
Screen unresponsive	Try restarting the watch by pressing and holding the side button for several seconds until it powers off, then power it back on. If unresponsive, allow the battery to fully drain and then recharge.

SPECIFICATIONS

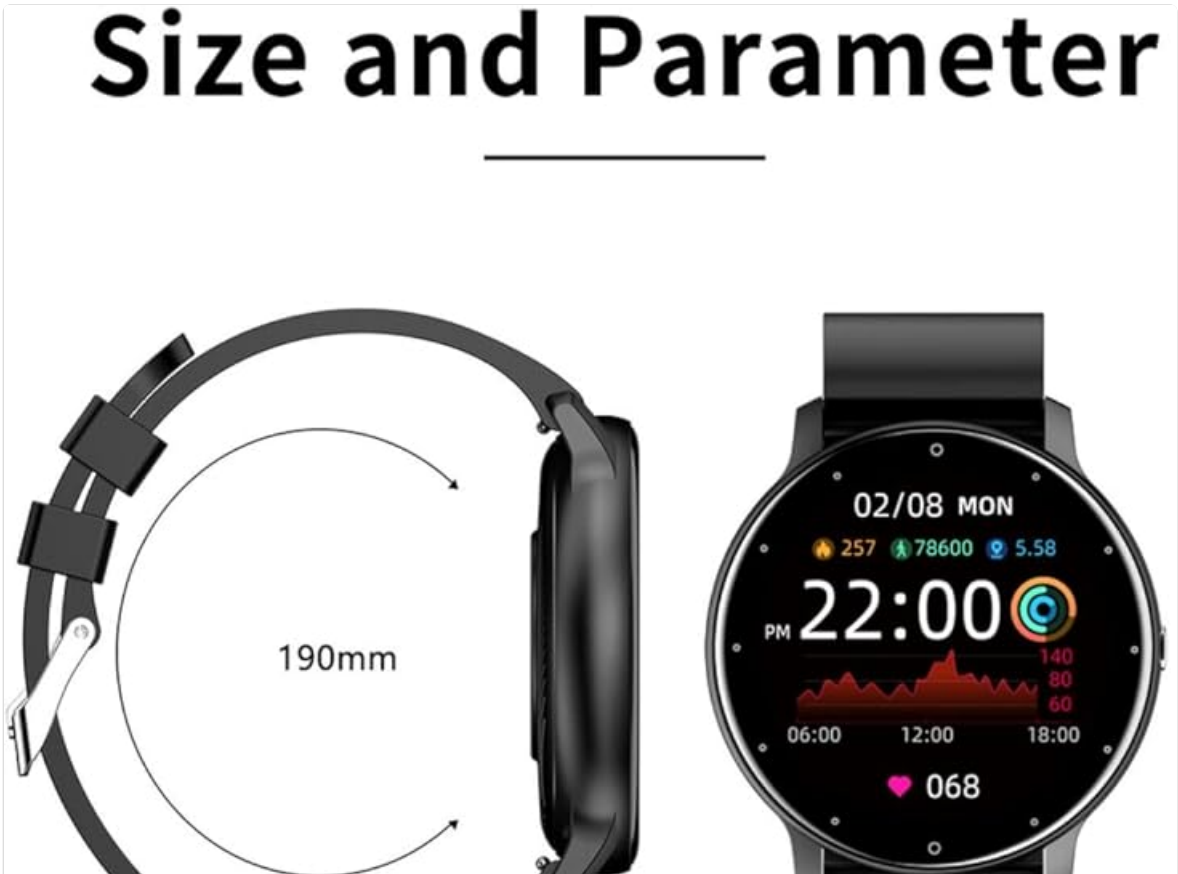

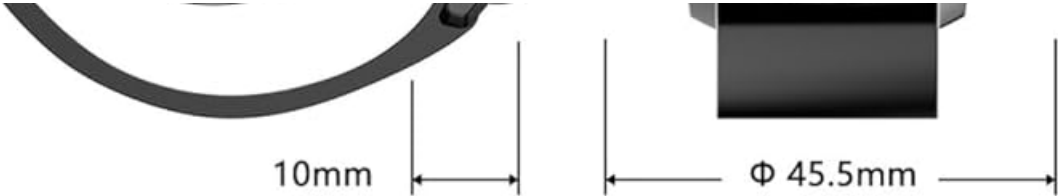
	
Display	1.28 inch full fit full touch screen 240*240px
Operation	Full touch and side buttons
CPU	GR5515
Bluetooth	Bluetooth 4.0 (Support Bluetooth 5.0)
Waterproof	IP67 waterproof
Heart rate sensor	HRS3300
Acceleration sensor	SC7A20
Battery	200mAh
Strap	Silica gel
System	IOS9.0+ and Android5.0+

Image: A detailed diagram illustrating the dimensions of the ZL02D Smart Watch (45.5mm diameter, 10mm thickness, 190mm strap length) alongside a table of its technical specifications.

Feature	Detail
Model	ZL02D
Brand	AXIAOLIFH
Display	1.28 inch Full Touch Screen, 240*240px, 2.5D Curved Glass
Operation Mode	Touch + Button
CPU	GR5515

Feature	Detail
Connectivity	Bluetooth 4.0 (supports Bluetooth 5.0)
Waterproof Rating	IP67 Professional Waterproof
Battery Capacity	220 mAh
Memory Storage	128 MB
Heart Rate Sensor	HRS3300
Acceleration Sensor	SC7A20
Wrist Strap Material	Silicone Strap (Silica gel)
Compatible Platforms	Android 5.0+ and iOS 9.0+
Product Dimensions	45.5mm (diameter) x 10mm (thickness)
Product Weight	35g

WARRANTY AND SUPPORT

Specific warranty details are typically provided with your purchase documentation or on the product packaging. For technical support, troubleshooting assistance, or warranty claims, please refer to the contact information provided by your retailer or the manufacturer, AXIAOLIFH.

Please retain your proof of purchase for warranty purposes.

© 2025 AXIAOLIFH. All rights reserved.
This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

What is the pairing code or app required for the AXIAOLIFH ZL02D Smart Watch?

The AXIAOLIFH ZL02D Smart Watch does not typically require a manual entry pairing code. Instead, it uses the DAFIT application for pairing and synchronization. To connect your watch, follow these steps: Download the App: Search for...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0F32HDMVW>

More documents and user manuals: <https://manuals.plus/>