

Manuals.plus /

› MINISO /

› MINISO MS191 AI Translation Earbuds User Manual

MINISO MINISO MS191 BLACK

MINISO MS191 AI Translation Earbuds User Manual

Model: MINISO MS191 BLACK | Brand: MINISO

INTRODUCTION

The MINISO MS191 AI Translation Earbuds are designed to provide seamless real-time language translation and high-quality audio experience. These open-ear clip wireless headphones support 135 languages, making them ideal for travel, business, and learning. With features like AI chat, device-assisted translation, and a comfortable open-ear design, the MS191 enhances cross-cultural communication and daily audio needs.



Image: Overview of the MINISO MS191 AI Translation Earbuds.

WHAT'S IN THE BOX

Upon unboxing your MINISO MS191 AI Translation Earbuds, please ensure all the following components are present:

- MINISO MS191 Earbuds (Left and Right)

- Charging Box
- USB-C Charging Cable
- User Manual
- Packaging Box

The Box Includes:

- Ms191 Ear Clip Headphones
- Headphone Charging Box
- User Manual
- Usb-C Charging Cable

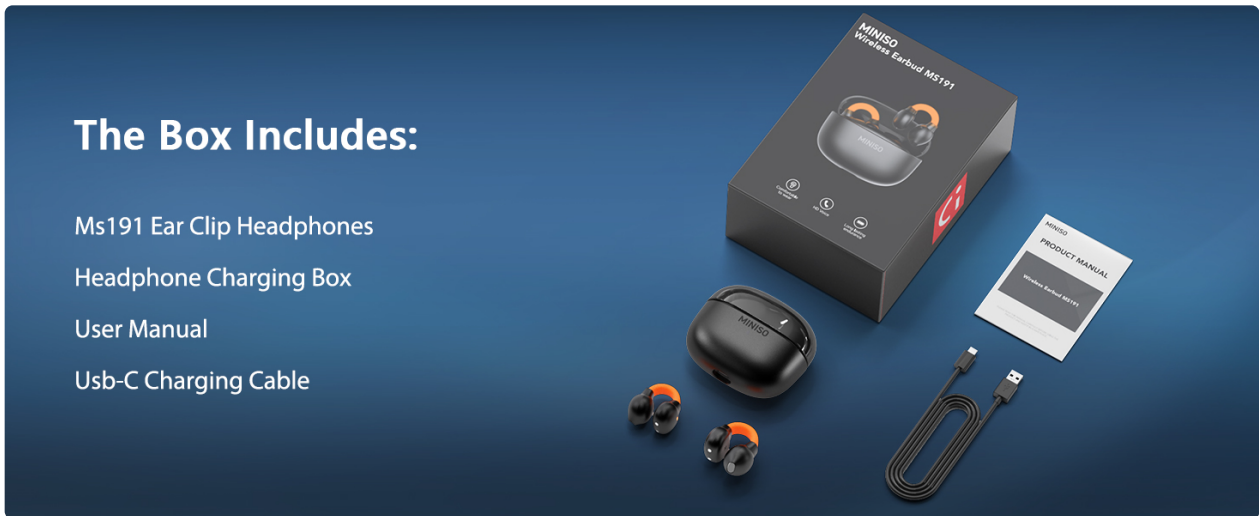


Image: All components included in the MINISO MS191 package.


PRODUCT OVERVIEW

The MINISO MS191 earbuds feature an open-ear clip design for comfortable, all-day wear. The charging case is compact and designed for portability. The earbuds themselves have a distinctive orange glowing element, indicating their active status and adding a unique visual appeal.



Image: The MINISO MS191 earbuds resting in their charging case.

The earbuds are designed to fit securely and comfortably without entering the ear canal, making them suitable for extended use during various activities. They are also waterproof, providing durability for active lifestyles.

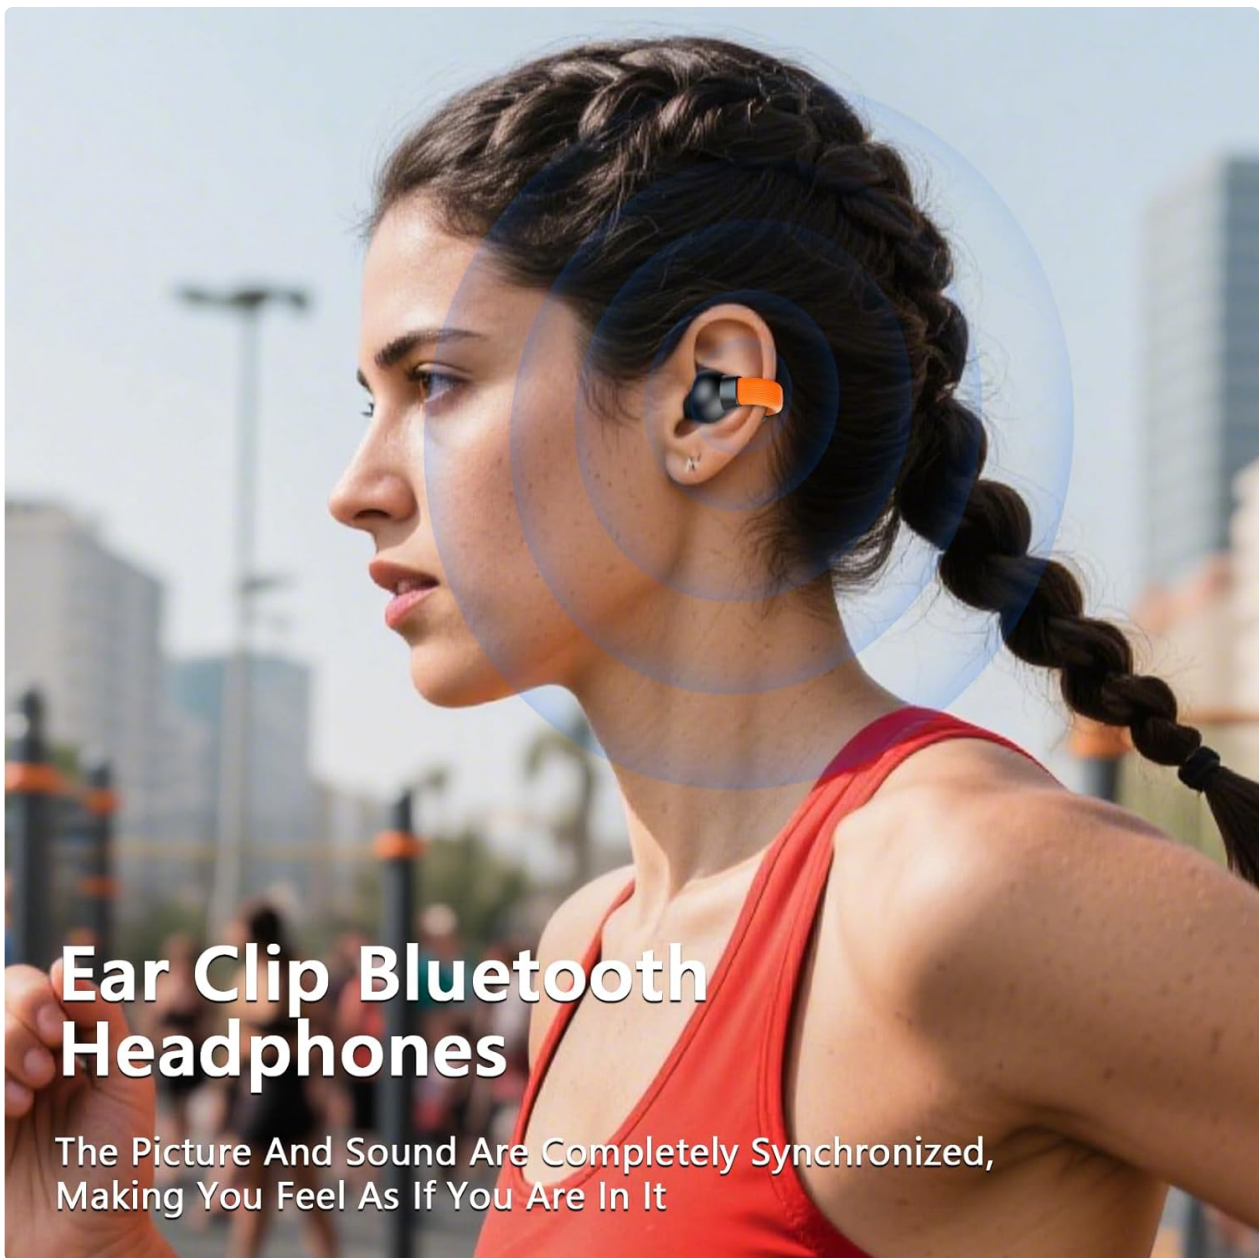

Ear Clip Bluetooth Headphones

The Picture And Sound Are Completely Synchronized, Making You Feel As If You Are In It

Image: A person wearing the MINISO MS191 earbuds, demonstrating their open-ear clip design.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. Place the earbuds into the charging case. Connect the USB-C charging cable to the charging port on the case and plug the other end into a compatible USB power source. The indicator light on the case will show charging status.

The earbuds offer a 50-hour battery life with quick charging capabilities, ensuring long periods of use.

2. App Installation (EarJoy APP)

To utilize the full translation features, download the "EarJoy" application on your iOS or Android device. Refer to the user manual included in the box for specific download guidance, typically via a QR code or app store search.

3. Bluetooth Pairing

1. Ensure the earbuds are charged and in the charging case.

2. Open the charging case lid. The earbuds will automatically enter pairing mode.
3. On your mobile device, go to Bluetooth settings and search for "MINISO-MS191".
4. Select "MINISO-MS191" to connect. A voice prompt will confirm successful pairing.



Image: Steps for quick connect and one-step pairing of the earbuds.

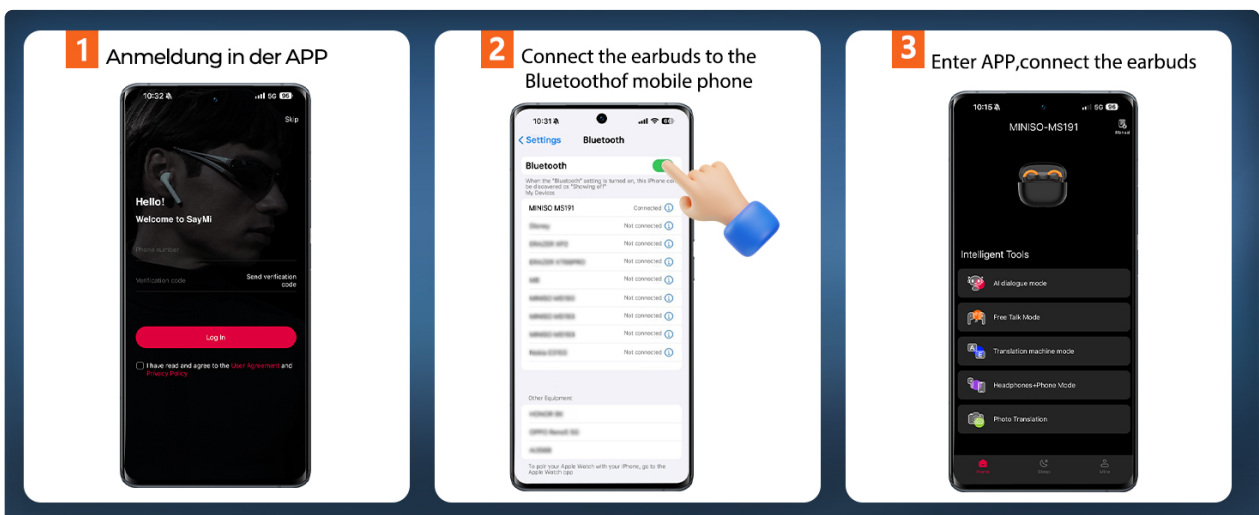


Image: Visual guide for app login and connecting the earbuds.

OPERATING INSTRUCTIONS

1. Wearing the Earbuds

The MS191 earbuds feature an open-ear clip design. Gently insert the earbud into your ear, ensuring the clip part rests comfortably around the back of your ear for a secure fit. This design allows for awareness of your surroundings while enjoying audio.



Image: Diagram illustrating the comfortable and secure fit of the open-ear earbuds.

2. Touch Controls

The earbuds are equipped with touch controls for easy management of audio and calls:

- **Play/Pause:** Single tap on either earbud.
- **Answer/End Call:** Single tap on either earbud.
- **Volume Up:** Double press the Right earbud.
- **Volume Decrease:** Double press the Left earbud.
- **Wake Up Voice Assistant:** Long press on either earbud.
- **Call Rejection:** Long press on either earbud.
- **Previous Song:** Triple press on the Left earbud.
- **Next Song:** Triple press on the Right earbud.



Image: Detailed diagram of touch control functions for the earbuds.

3. Translation Features

The MS191 earbuds offer high-precision real-time two-way translation for 135 languages via the EarJoy APP. Key translation modes include:

- **AI Dialogue Mode:** For natural, continuous conversations.
- **Translator Mode:** For direct two-way translation.
- **Free Talk Mode:** Enables spontaneous conversation flow.
- **Phone + Headset Mode:** Integrates translation with phone calls.
- **Photo Translation:** Translate text from images by taking a photo through the app.

Online translation for specific languages (Chinese, English, Japanese, Korean, Russian, German, French, Spanish) is available within the EarJoy APP. The system boasts a 0.5-second response time and 98% accuracy.

Ms191 AI Translation Earbuds

135

你好
こんにちは
Hola
Здравствуйтe
Halo
Bonjour
안녕하세요
Hello

0.5s
Responds Time

135
Language Online Translation

98%
Accuracy

Image: The earbuds highlighting support for 135 languages with quick response and high accuracy.

Photo Translation




Menu



Road Signs

Image: Demonstration of the photo translation feature for menus and road signs.

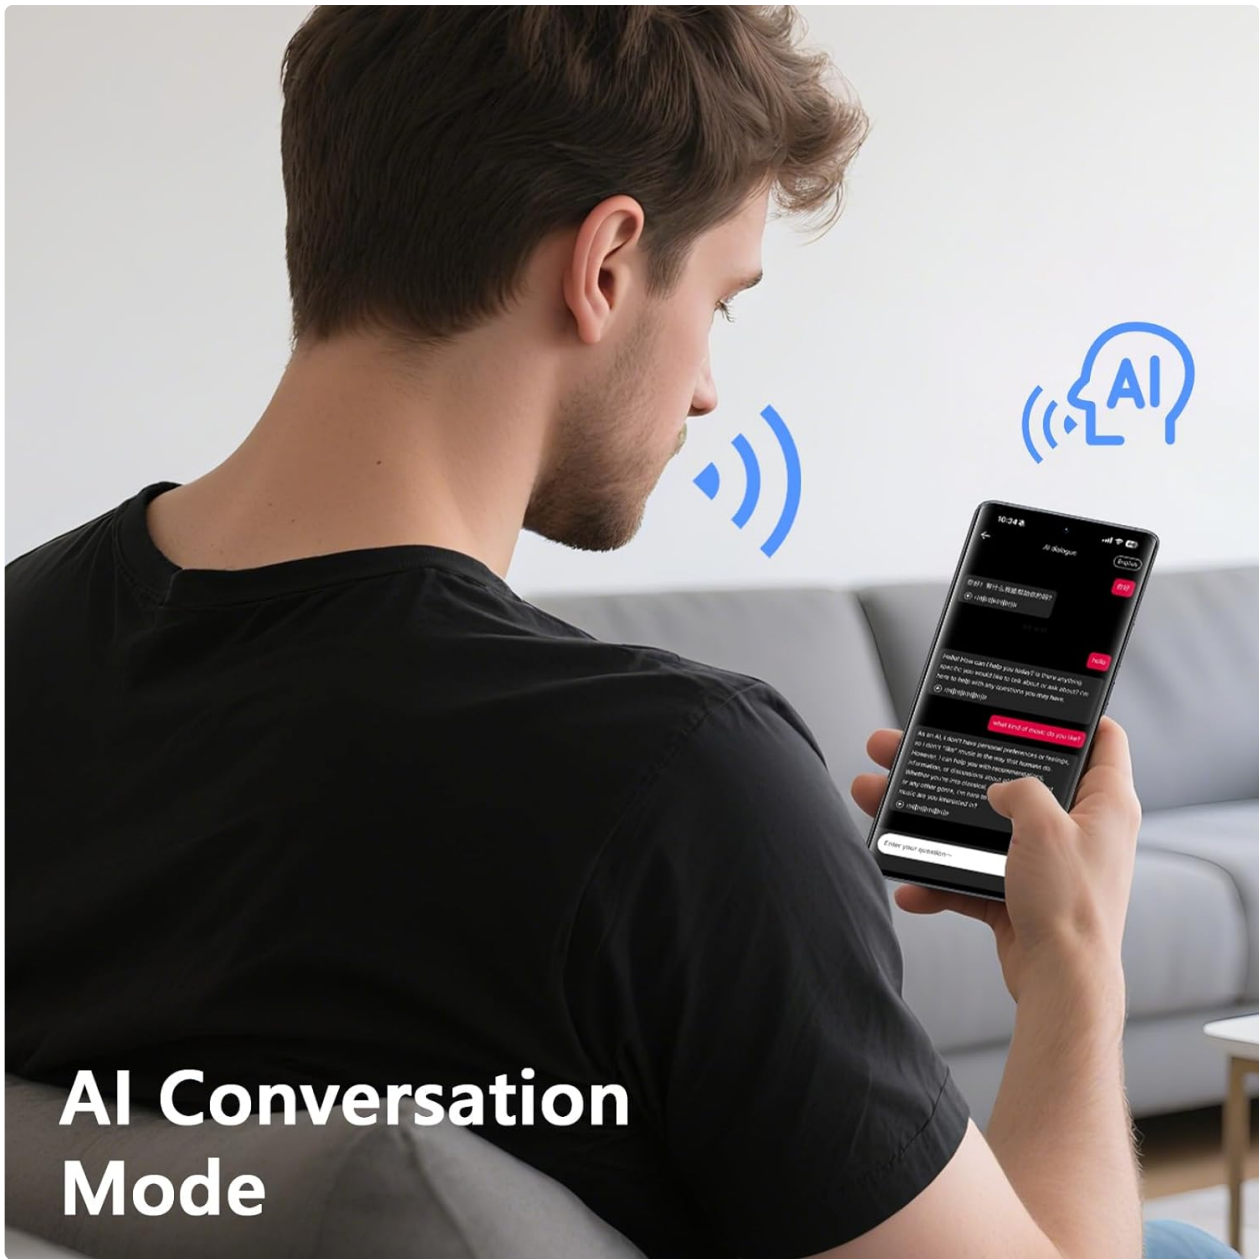

AI Conversation Mode

Image: A user engaging in AI Conversation Mode with the earbuds and a smartphone.

4. Audio Features

The earbuds provide HD stereo sound with adaptive noise cancellation (ANC) for clear audio during music playback and calls. The open-ear design ensures directional sound transmission without leakage, allowing you to hear your audio clearly while remaining aware of your surroundings.

High And Low Audio Enhancement Technology

Immersive Audio Experience

Provides A Clearer, Higher Quality Audio Experience



Image: Illustration of the high and low audio enhancement technology for an immersive experience.

5. Smart Tracker

The built-in smart tracker allows you to locate misplaced earbuds instantly via the EarJoy app. You can view their real-time position, last-known location, or activate a sound alert to help find them.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the earbuds and charging case. Avoid using abrasive materials or harsh chemicals.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Water Resistance:** The earbuds are waterproof. However, avoid prolonged submersion in water and ensure they are dry before placing them back in the charging case to prevent damage.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget the device in Bluetooth settings and re-pair.
Translation not working	Check internet connection. Ensure EarJoy app is open and updated. Verify microphone permissions for the app.
Low audio quality	Ensure earbuds are properly seated in your ear. Check device volume. Clean earbuds if necessary.
Earbuds not charging	Ensure charging cable is securely connected. Check power source. Clean charging contacts on earbuds and case.
Earbuds fall out easily	Adjust the ear clip for a more secure fit. Ensure proper placement as shown in the manual.

SPECIFICATIONS

Feature	Detail
Model Name	MINISO MS191 BLACK
Connectivity Technology	Wireless
Bluetooth Version	5.4
Control Type	Touch Control
Ear Placement	Open Ear
Form Factor	Open ear True Wireless
Noise Control	Adaptive Noise Cancellation
Supported Languages	135 (via EarJoy APP)
Battery Life	Up to 50 hours (with charging case)
Wireless Range	10 meters
Water Resistance Level	Waterproof
Material	Plastic
Item Weight	3.52 ounces
Manufacturer	MINISO
Country of Origin	China

OFFICIAL PRODUCT VIDEO

Watch this official video from the seller for a visual overview of the MINISO MS191 AI Translation Wireless Earbuds, demonstrating their features and design.

Video: A short overview of the MINISO MS191 AI Translation Wireless Earbuds, showcasing their design and functionality.

WARRANTY AND SUPPORT

MINISO provides lifetime free translation services via the EarJoy app, with no subscriptions needed. For any product-related inquiries, technical assistance, or warranty claims, please contact MINISO customer support. Refer to the packaging or the EarJoy app for specific contact details.