

Sanyipace B0F47G9GR7

Sanyipace Heated Japanese Bidet Toilet Seat User Manual

Model: B0F47G9GR7

INTRODUCTION

Thank you for choosing the Sanyipace Heated Japanese Bidet Toilet Seat. This manual provides essential information for the safe installation, operation, and maintenance of your new bidet toilet seat. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of burns, electrocution, fire, or injury, please observe the following safety precautions:

- Ensure the product is properly grounded.
- Do not immerse the product in water or other liquids.
- Unplug the product during lightning storms or when unused for extended periods.
- Do not operate if the cord or plug is damaged.
- Keep all electrical components dry.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PACKAGE CONTENTS

Please check that all components are present before installation:

- Sanyipace Heated Japanese Bidet Toilet Seat
- Remote Control
- Mounting Plate and Screws
- T-adapter for water supply
- Water Supply Hose
- User Manual (this document)

PRODUCT OVERVIEW

The Sanyipace Bidet Toilet Seat integrates advanced features for enhanced hygiene and comfort. Key components include the main bidet unit, a remote control for personalized settings, and an automatic lid mechanism.



Image: The Sanyipace Heated Japanese Bidet Toilet Seat with its remote control, showcasing the sleek design and integrated features.

INSTALLATION GUIDE

Before installation, ensure your toilet dimensions are compatible. Refer to the measurement guide below.

Bitte bestätigen Sie Ihre Toilettengröße

bevor Sie eine Bestellung aufgeben

So messen Sie es?



$\geq 50\text{cm}$



$11\text{cm} - 19\text{cm}$



$\geq 35\text{cm}$

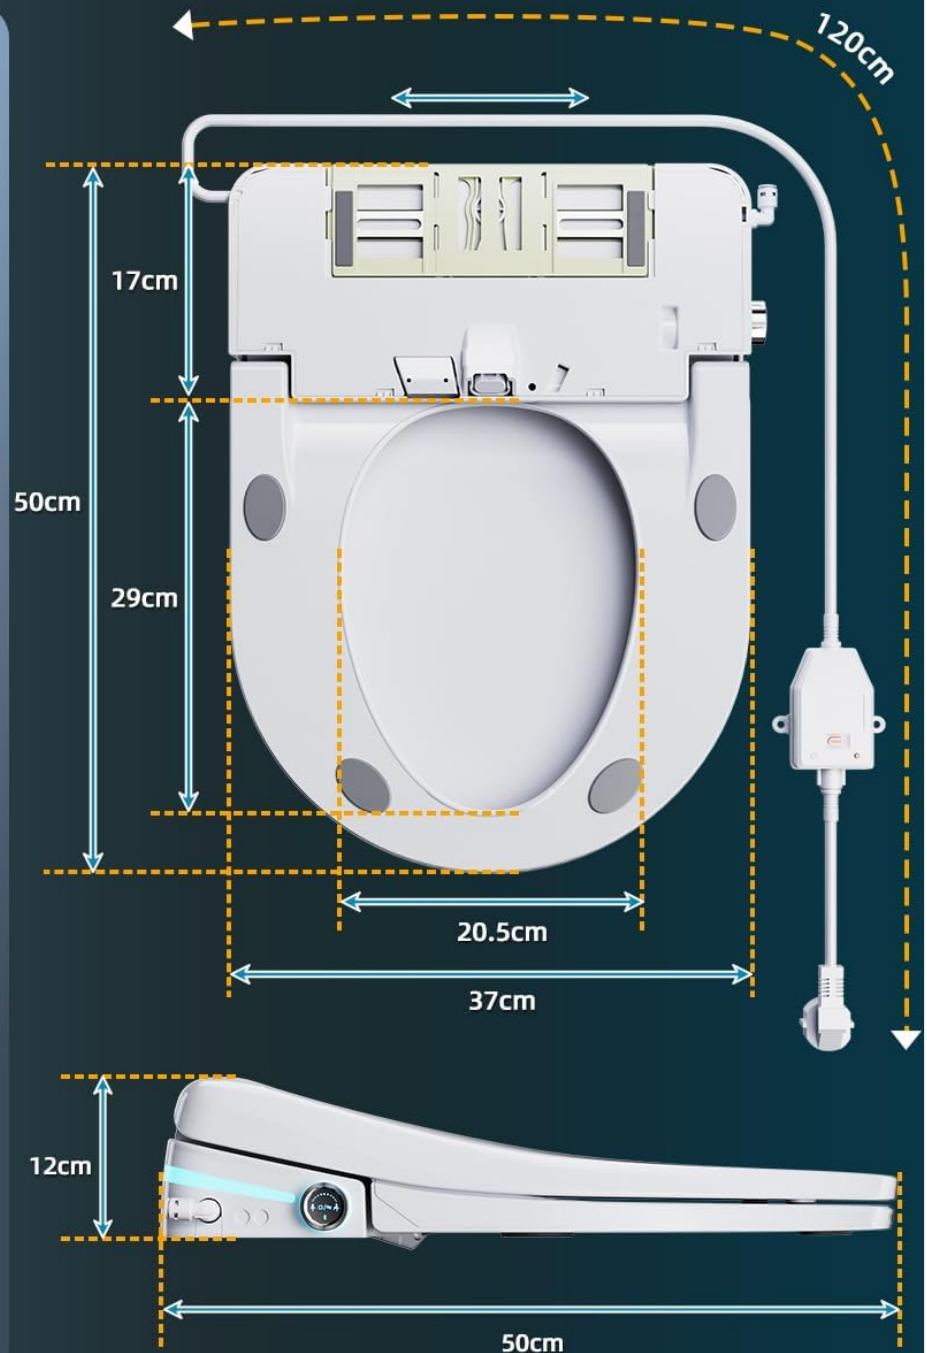


Image: A diagram illustrating how to measure your toilet bowl to ensure compatibility with the bidet seat. Key measurements for length, width, and bolt hole spacing are shown.

Step-by-Step Installation:

Einfach zu Installieren



1. Gummiexpansionsdübel einbauen

Setzen Sie die beiden Gummiexpansionsdübel in die vorgesehenen Schraubenlöcher ein.



2. Befestigungsplatte montieren

(Siehe Abbildung) Befestigen Sie die kleine runde Unterlegscheiben, den rechteckigen Metallabstandshalter (Lochabstand-Einstellblech) und die Befestigungsplatte mit Schrauben. Hinweis: Passen Sie die Position bevor Sie die Schrauben vollständig festziehen.



3. Duftstoffbehälter befüllen

Öffnen Sie die Duftstofföffnung an der Oberseite des Toilettensitzes, legen Sie eine Dufttablette hinein und schließen Sie den Deckel wieder.



4. Toilettensitz anbringen

Richten Sie den Toilettensitz parallel auf die Befestigungsplatte aus und schieben Sie ihn gerade nach oben, bis er einschnappt und fest sitzt.



5. Wasseranschluss herstellen

(Siehe Abbildung) T-Stück zwischen Eckventil und Tankschlauch setzen. Am freien Abgang Filter → PE-Schlauch → Toilettensitz anschließen. Stellen Sie sicher, dass alle Anschlüsse fest sitzen!



6. Inbetriebnahme

Stecken Sie den Stromstecker in die Steckdose und testen Sie die Funktionen des Toilettensitzes.

Image: A visual guide detailing the six steps for installing the bidet toilet seat, from inserting rubber expansion plugs to connecting the water supply and power.

- 1. Insert Rubber Expansion Plugs:** Place the two rubber expansion plugs into the designated screw holes on your toilet bowl.
- 2. Mount the Fixing Plate:** Secure the small round metal washers (as shown in the image) under the fixing plate. Align the fixing plate and secure it with screws. Ensure the screws are fully tightened.
- 3. Fill Aroma Container (Optional):** Open the aroma container on the side of the toilet seat, insert an aroma tablet,

and close the lid.

4. **Attach the Toilet Seat:** Align the toilet seat parallel to the fixing plate and slide it straight back until it clicks into place and is firmly seated.
5. **Connect Water Supply:** Install the T-adapter between the angle valve and the toilet tank hose. Connect the bidet's water supply hose to the T-adapter. Ensure all connections are secure and leak-free.
6. **Power On:** Plug the power cord into a grounded electrical outlet and test the functions of the toilet seat.

OPERATING INSTRUCTIONS

Automatic Lid Operation

Deckel Automatisch öffnen/schließen

Ganz ohne Berührung, Reduziert
Keimübertragung für mehr Hygiene

**Automatisches Öffnen per
Mikrowellen-Sensor**

voreingestellte Reichweite: 60cm



Deckel automatisch öffnen



Deckel automatisch schließen
(90s nach Verlassen des Sitzes)

Image: Illustration of the bidet seat's automatic lid function, showing the lid opening upon approach and closing after use, activated by a microwave sensor.



The bidet seat features a microwave sensor that automatically opens the lid when you approach and closes it gently after 90 seconds of leaving the seat. This provides a touch-free and hygienic experience.

Multiple Cleaning Modes with Warm Water

Keramik mit konstanter Temperatur

Der Heizer liefert Wasser mit konstanter Temperatur und sorgt so für ein angenehmes Reinigungserlebnis.

Sofort-Heizung, temperatur sicher in 2 Sekunden

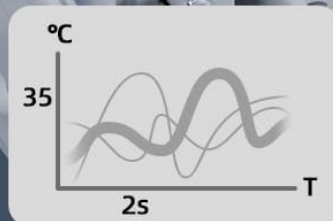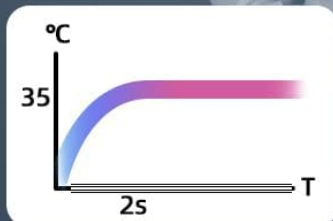

Separate, gefilterte Wasserzufuhr

- für mehr Hygiene und Gesundheit



Po-Reinigung

Damenmodus

Automatische Düsen-Selbstreinigung

Nach jeder Nutzung reinigen sich die Sprühdüsen selbstständig - restlos und hygienisch

Image: Diagram showing the internal heating mechanism for instant warm water and the separate, filtered water supply for posterior and feminine wash, along with the automatic nozzle self-cleaning feature.

The bidet offers various cleaning modes with adjustable warm water temperature and pressure:

- **Posterior Wash:** For general cleansing.
- **Feminine Wash:** A softer, wider spray for gentle cleansing.
- **Oscillation:** The nozzle moves back and forth for a wider cleaning area.

The ceramic heater provides instant warm water, maintaining a constant temperature for a comfortable experience. The

nozzle also performs an automatic self-cleaning cycle after each use.

Heated Seat Function

Beheizter Sitz mit 3 Stufen & Jahreszeiten-Automatik

Wahlweise 34°C/37°C/40°C oder intelligente Klima-Anpassung





Sitztemperatur	Empfohlene Jahreszeit
00	dass die Sitzheizung ausgeschaltet wird, ideal für Sommertage
34/37	Konstantes Heizen auf voreingestellte 34°C oder 37°C, ideal für Frühjahr und Herbst
40	Winter-Vorlieben

3D breiter gebogener Sitz,
keine Ermüdung nach langem Sitzen

Intelligente Temperaturregelung

passt sich intelligent der Umgebungstemperatur an.
Für jede Jahreszeit die ideale Wärme.
<Modus via „Seasonal Temperature Sensor“-Taste aktivieren>



Image: A visual representation of the heated seat function, showing manual temperature settings (34°C, 37°C, 40°C) and an intelligent seasonal temperature adaptation mode.

Enjoy a warm seat with two heating modes:

- **Manual Temperature Setting:** Choose from 3 levels (e.g., 34°C, 37°C, 40°C).

- **Intelligent Thermostat Mode:** Automatically adjusts the seat temperature based on ambient conditions for optimal comfort and energy efficiency.

Warm Air Drying

Trocknung mit Warmluft

00	45	50	55
Raumtemperaturwind	45°C	50°C	55°C

30_s
Schnelle Trocknung



Toilettenpapier sparen



Saubere und angenehme Haut



Niedriger Energieverbrauch

Image: Depiction of the warm air drying function, showing adjustable temperature settings (room temperature, 45°C, 50°C, 55°C) and highlighting benefits like quick drying, reduced toilet paper use, and comfortable skin.

After cleansing, use the warm air dryer for a comfortable and hygienic finish. The dryer offers adjustable temperature settings (e.g., room temperature, 45°C, 50°C, 55°C) for quick drying in approximately 30 seconds, reducing the need for

toilet paper.

Dual Control: Knob and Remote Control



Image: Detailed view of the bidet's dual control system, featuring a rotary knob for basic functions and a comprehensive wireless remote control for precise adjustments of all features, including water pressure, temperature, and seat temperature.

The bidet seat can be operated using either the integrated rotary knob or the wireless remote control:

- **Rotary Knob:** Provides quick and intuitive access to primary functions like posterior wash and feminine wash.

- **Remote Control:** Offers precise adjustments for all features, including water pressure, water temperature, seat temperature, nozzle position, and dryer settings. It also controls the automatic lid and nightlight.

MAINTENANCE

Cleaning the Bidet Seat

- Unplug the unit before cleaning.
- Wipe the exterior with a soft, damp cloth and a mild, non-abrasive cleaner.
- Do not use harsh chemicals, abrasive cleaners, or brushes that could scratch the surface.

Nozzle Cleaning

The nozzle performs an automatic self-cleaning cycle before and after each use. For additional cleaning:

- Refer to the remote control or side panel for a manual nozzle cleaning function, if available.
- Gently wipe the nozzle with a soft cloth if visible residue is present.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord unplugged, circuit breaker tripped	Ensure power cord is securely plugged in. Check circuit breaker.
No water spray	Water supply valve closed, hose kinked, filter clogged	Open water supply valve. Check for kinks in the hose. Clean or replace water filter if necessary.
Water temperature not warm	Heater setting too low, heater malfunction	Adjust water temperature setting. If problem persists, contact customer support.
Lid not opening/closing automatically	Sensor obstructed, sensor malfunction	Ensure the sensor area is clean and unobstructed. Check remote settings for automatic lid function.

SPECIFICATIONS

Feature	Detail
Brand	Sanyipace
Model	B0F47G9GR7
Dimensions (L x W x H)	50 x 37 x 2.51 cm (approx. 19.7 x 14.6 x 1.0 inches)
Weight	4.86 kg (approx. 10.7 lbs)
Color	White
Material	Polypropylene (PP)
Style	Modern




Feature	Detail
Shape	U-Shape
Power Source	Corded Electric (Batteries not required)
Special Features	Heated Seat, Warm Water Wash, Warm Air Dryer, Automatic Lid, Remote Control, Nightlight, Aromatherapy (optional)

WARRANTY AND SUPPORT

Sanyipace products are designed for quality and reliability. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official Sanyipace website. Please have your model number (B0F47G9GR7) ready when contacting support. For more information, you can visit the [Sanyipace Brand Store](#).

© 2025 Sanyipace. All rights reserved.

Related Documents - B0F47G9GR7

	<p>Sanyipace WP9603 Sewer Pipeline Drain Inspection Camera User Manual</p> <p>User manual for the Sanyipace WP9603 Sewer Pipeline Drain Inspection Camera, detailing product specifications, features, system installation, operation, and maintenance.</p>
	<p>Sanyipace S830ASMKT360 Rohrinspektionskamarasystem Benutzerhandbuch</p> <p>Umfassendes Benutzerhandbuch für das Sanyipace S830ASMKT360 Rohrinspektionskamarasystem, das Spezifikationen, Bedienung, Installation, Fehlerbehebung und Garantieinformationen detailliert beschreibt.</p>
	<p>Manuel d'utilisation de la caméra d'égout professionnelle Sanyipace</p> <p>Manuel d'utilisation détaillé pour la caméra d'égout professionnelle Sanyipace S850DSTKM/S850DSTKMS68. Apprenez-en plus sur ses caractéristiques, installation, fonctionnement et dépannage pour l'inspection de canalisations.</p>

<div><p>Telecamera di Ispezione Fognaria Manuale d'uso</p><p>Modello N. : S850DSTKM/S850DSTKM002 NOTA: Tutti gli accessori si trovano nella confezione. Per favore, controllate le parti sotto se ne avete problemi con il prodotto. Assistenza Post-Vendita: support@sanyipace.com Site Web Post-Vendita: www.sanyipace.com</p></div>	<p>Manuale d'uso Telecamera di Ispezione Fognaria Sanyipace S850DSTKM</p> <p>Manuale d'uso completo per la telecamera di ispezione fognaria Sanyipace modello S850DSTKM, che copre specifiche tecniche, istruzioni operative, installazione, manutenzione e risoluzione dei problemi.</p>
<div><p>Sewer Camera System User Manual</p><p>Model No.: S8951DM Please contact us at 81913108 if you get issues with the product. Assistenza clienti: support@sanyipace.com Sito Web: www.sanyipace.com</p></div>	<p>Sanyipace S8951DM Sewer Camera System User Manual</p> <p>User manual for the Sanyipace S8951DM Sewer Camera System. Provides detailed information on product specifications, setup, operation, troubleshooting common issues, and warranty details for effective pipeline inspection.</p>
<div><p>Rohrinspektionskammersystem Benutzerhandbuch</p><p>Model: U88 HINWEIS: Alle Zubehörteile befinden sich unter der Taste!. Bitte kontaktieren Sie uns umgehend, wenn Sie Probleme mit dem Produkt haben. Webseite Kundendienst: support@sanyipace.com</p></div>	<p>Sanyipace U88 Rohrinspektionskammersystem Benutzerhandbuch</p> <p>Umfassende Anleitung für das Sanyipace U88 Rohrinspektionskammersystem, das detaillierte Informationen zur Einrichtung, Bedienung, technischen Spezifikationen, Fehlerbehebung und Garantie bietet, um effiziente Rohrinspektionen zu gewährleisten.</p>