

## VITCOCO JSQ-LH-New

# VITCOCO Portable Bidet User Manual

Model: JSQ-LH-New

## 1. INTRODUCTION

---

Thank you for choosing the VITCOCO Portable Bidet. This rechargeable handheld sprayer is designed for personal hygiene on the go, offering convenience and cleanliness for various situations including travel, postpartum care, and daily hygiene. Its compact and waterproof design ensures ease of use and maintenance. Please read this manual thoroughly before using the product to ensure proper operation and longevity.

# ***Convenient protection of personal hygiene***



Pregnancy



Postpartum



Daily care



Traveling

Figure 1: VITCOCO Portable Bidet applications for personal hygiene.

## **2. PRODUCT COMPONENTS**

The VITCOCO Portable Bidet package includes the following items:

- Main Bidet Unit (Sprayer)
- Transparent Water Bottle (200 ml capacity)
- Black Transparent Spare Bottle (200 ml capacity)
- USB Charging Cable
- Storage Bag
- Small Towel (may vary by package)



Figure 2: Contents of the VITCOCO Portable Bidet package.

### 3. SETUP

#### 3.1 Initial Charging

Before first use, fully charge the bidet unit. The unit has a 450 mAh battery.

1. Locate the USB charging port on the bidet unit.
2. Connect the provided USB charging cable to the bidet unit.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., mobile phone charger, USB power bank, car USB charger).
4. Allow the unit to charge until the indicator light shows a full charge (refer to indicator light behavior in Operating Instructions).

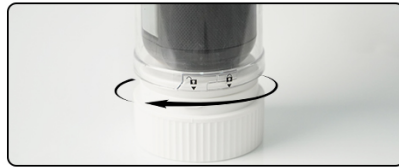


Figure 3: USB charging options for the bidet.

## 3.2 Assembling the Bidet

1. Choose either the transparent or black transparent water bottle.
2. Ensure the bottle is clean before filling.
3. Fill the bottle with clean water. The transparent bottle allows for clear visibility of the water level.
4. Screw the main bidet unit onto the filled water bottle securely by rotating it clockwise until tight.

## ***How To Use ?***



Rotating



Rotating



Fill with clean water



Connect to bottle



Open waterpipe in a proper way



Switch

Figure 4: Assembly and filling instructions.

## **4. OPERATING INSTRUCTIONS**

### **4.1 Using the Bidet**

1. Once assembled and filled, open the spray nozzle by rotating it outwards. The nozzle can rotate 180 degrees for optimal positioning.
2. Position the bidet as desired for cleaning.
3. Press the power button (switch) once to activate the first spray mode (Relieve Mode).
4. Press the power button a second time to switch to the second spray mode (Strong Mode).
5. Press the power button a third time to turn off the bidet.
6. After use, close the spray nozzle by rotating it back into its stored position.





Figure 5: Nozzle rotation and spray modes.

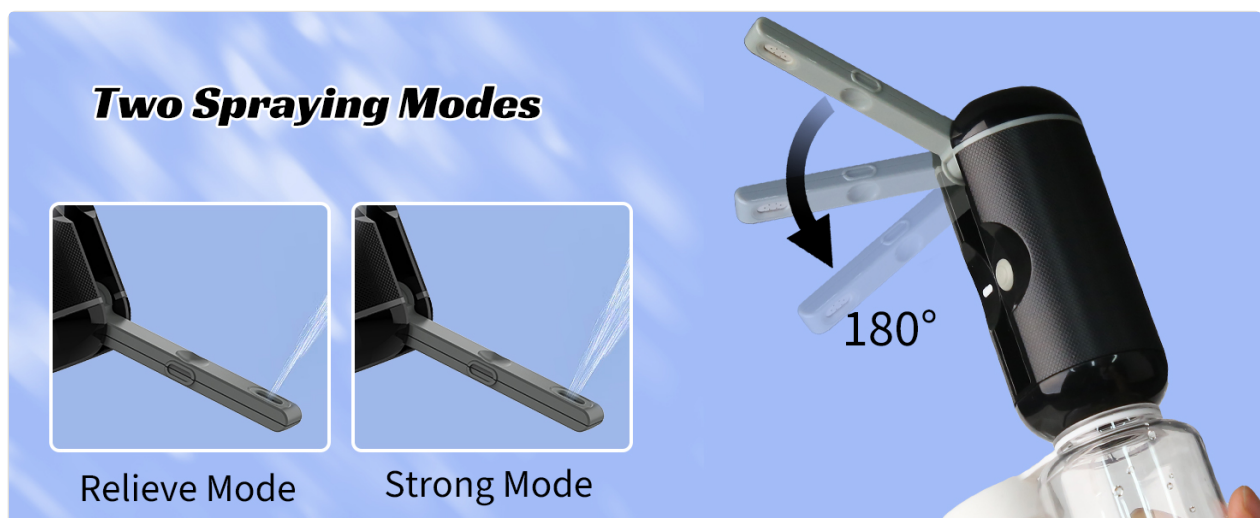


Figure 6: Detailed view of the two spraying modes.

## 5. MAINTENANCE AND CARE

## 5.1 Cleaning the Bidet

The VITCOCO Portable Bidet is IPX7 waterproof, allowing for easy and thorough cleaning.

- After each use, empty any remaining water from the bottle.
- The entire unit can be washed under warm running water (10 to 50 degrees Celsius).
- Ensure no water enters the charging port when cleaning, although the unit is designed to be waterproof.
- Use a soft cloth to wipe down the exterior. Do not use abrasive cleaners or harsh chemicals.
- Allow all components to air dry completely before reassembling or storing.



Figure 7: The bidet is fully washable due to its IPX7 waterproof rating.

## 5.2 Storage

Store the bidet in its provided storage bag in a cool, dry place when not in use. Ensure the unit is completely dry before storage to prevent mold or mildew.

## 6. TROUBLESHOOTING


---

Problem	Possible Cause	Solution
Bidet does not turn on.	Battery is low or depleted.	Charge the bidet unit using the provided USB cable.
Weak water pressure.	Insufficient water in the bottle; nozzle partially blocked; incorrect mode selected.	Ensure the bottle is adequately filled. Check the nozzle for any obstructions and clean if necessary. Press the power button twice to select Strong Mode.
Water leaks from connection.	Bottle not securely attached to the main unit.	Ensure the bottle is screwed on tightly and correctly aligned.
Unit makes unusual noise.	Air in the pump; internal malfunction.	Ensure the bottle is filled with water. If the noise persists, contact customer support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	JSQ-LH-New
Brand	VITCOCO
Product Dimensions	22 x 17 x 7 cm
Item Weight	700 g
Material	Plastic
Water Bottle Capacity	200 ml (each bottle)
Battery Type	1 Lithium Ion battery (required)
Battery Capacity	450 mAh
Power Source	Battery-powered (USB rechargeable)
Waterproof Rating	IPX7
Operating Temperature	10 to 50 degrees Celsius
Country of Origin	China



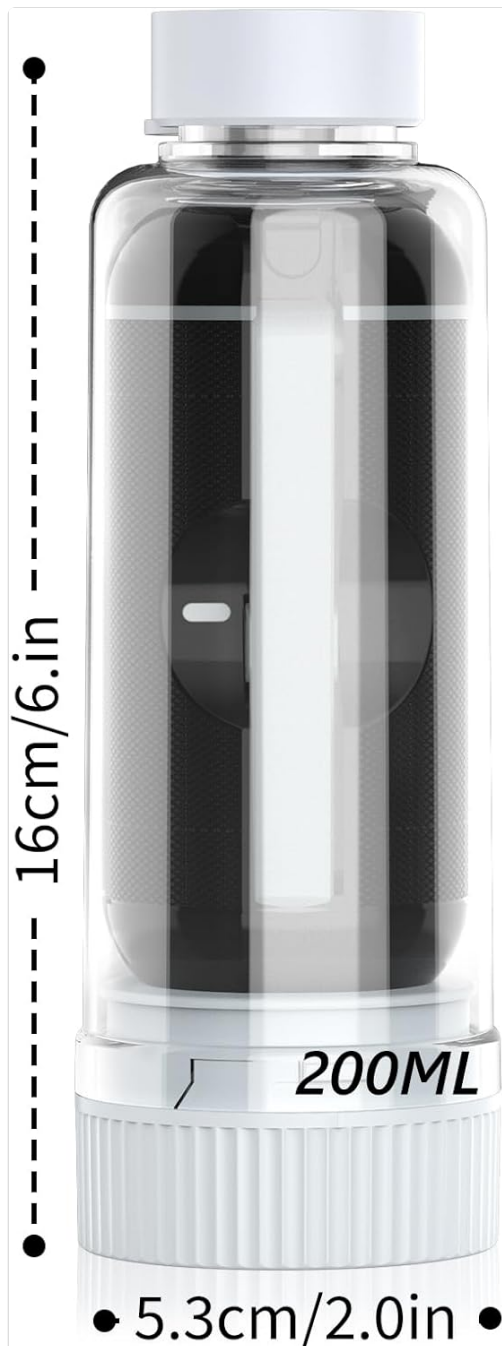

## ***Space saving***



Figure 8: Compact dimensions and portability for travel.

## **8. WARRANTY AND SUPPORT**

For warranty information and customer support, please refer to the official VITCOCO website or contact the seller directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit: [VITCOCO Official Store on Amazon](#)