

[Manuals.plus](#) /

› [ZYDIIIE](#) /

› ZYDIIIE AI Translation Earbuds User Manual

ZYDIIIE M95

ZYDIIIE AI Translation Earbuds User Manual

Model: M95

INTRODUCTION

Thank you for choosing the ZYDIIIE AI Translation Earbuds. These innovative earbuds are designed to break down language barriers, offering real-time translation in 144 languages. They also function as high-fidelity headphones for music playback and hands-free calling, making them a versatile 3-in-1 device for travel, business, and learning. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance.



Image: The ZYDIIIE AI Translation Earbuds, black in color, resting within their compact charging case. The case features a digital display showing battery levels.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 2x Translation Earphones
- 1x Rechargeable Charging Case
- 1x Type-C Charging Cable

- 1x User Manual (this document)



Image: A visual representation of the package contents, including the two earbuds, charging case, Type-C cable, and user manual.

KEY FEATURES

AI Real-Time Translation

Break language barriers instantly with support for 144 languages, including English, Spanish, French, Chinese, Japanese, Korean, and more. Ideal for travelers, business professionals, and language learners.

Multi-Language Instant Translation

Support 144 Languages to Overcome Language Barriers



All-in-One Language Hub for Meetings & Travel




Image: Depicts individuals communicating with the aid of the translation earbuds, showcasing flags of multiple supported languages like Spanish, English, German, French, Chinese, Japanese, Arabic, and Russian.

Upgraded Free Translation App

The dedicated AI intelligent translation app is completely free and compatible with both iOS and Android devices. It offers innovative modes such as recorded translation, simultaneous interpretation, face-to-face translation, video call translation, and real-time translation for voice calls.

Real Time Translator Earbuds

Designed for travelers, business pros, and multilingual communication, these smart earbuds translate speech in real-time across 144+ languages.

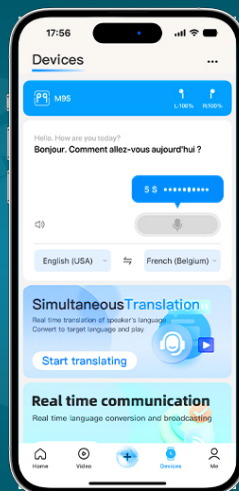

Bonjour. Comment allez-vous aujourd'hui ?



Image: A smartphone displaying the "WearFit Pro" translation app interface, showing options for simultaneous translation and real-time communication, alongside the earbuds.

Hi-Fi Sound Quality & 3-in-1 Functionality

These earbuds combine translation, music playback, and call functions. Equipped with 14.2 mm high-power speaker drivers, they deliver superior sound quality for an immersive audio experience, whether for communication or entertainment.

Hi-Fi Stereo Sound



Image: An exploded view diagram illustrating the internal components of an earbud, highlighting the speaker driver and sound chamber designed for high-fidelity audio output.

Bluetooth 5.4 & Ergonomic Design

Utilizing Bluetooth 5.4 technology, the earbuds offer ultra-low latency transmissions up to 33 feet (approximately 10 meters), with faster pairing and greater stability. Their sleek, lightweight, and ergonomic design ensures a secure and comfortable fit for extended wear.

Bluetooth 5.4

Ultra-Fast Pairing for Instant Connectivity

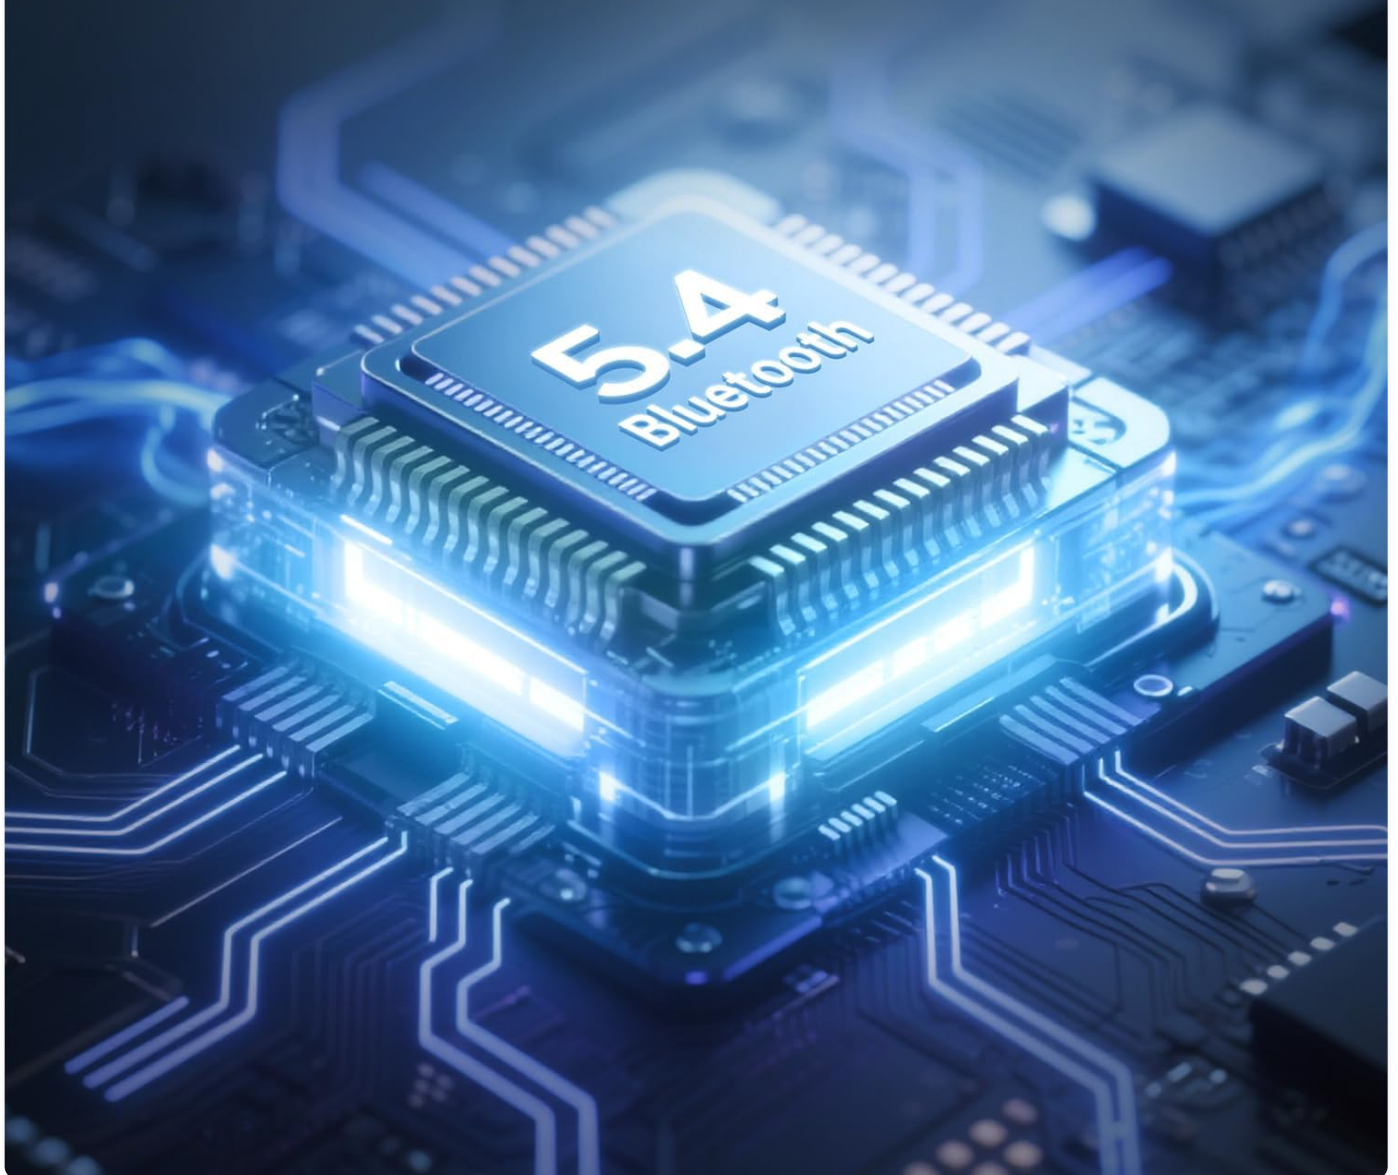


Image: A close-up of a microchip labeled "5.4 Bluetooth," representing the advanced Bluetooth technology integrated into the earbuds.

Type-C Charging & Efficient Battery

Each earbud has a 40mAh battery, providing 4-5 hours of use. The 600mAh charging case offers 5-6 full charges, extending total usage time to 30 hours. A single charge takes approximately 1.5 hours via the Type-C port.

Type-C Rechargeable & High Capacity Battery

1-2H

Charging Time

6-8H

Talk & Music
Playing Time

80H

Standby Time



Image: The earbuds are shown charging within their case, with a Type-C charging cable connected, illustrating the charging process and battery capacity.

SETUP GUIDE

Follow these steps to connect your ZYDIIE AI Translation Earbuds to your phone and begin using them:

1. **Download the App:** Scan the QR code provided in the physical user manual or search for "WearFit Pro" in the Google Play Store (for Android) or Apple App Store (for iOS) to download the official translation application.
2. **Register Your Account:** Open the "WearFit Pro" app and follow the on-screen instructions to register your account. Select "Smart earphones" as your device type.
3. **Enable Bluetooth:** On your phone, go to your Bluetooth settings and turn on Bluetooth. The earbuds should appear as "M95" in the list of available devices. Select "M95" to connect.
4. **Connect in App:** Open the "WearFit Pro" app. Click the "+" icon to manually add the M95 model. The app will scan for available devices.

5. **Add the M95:** Once "M95" appears in the app's device list, select it and click "Connect."
6. **Choose Translation Mode:** After successful connection, you can choose the desired translation mode within the app and begin your translation.

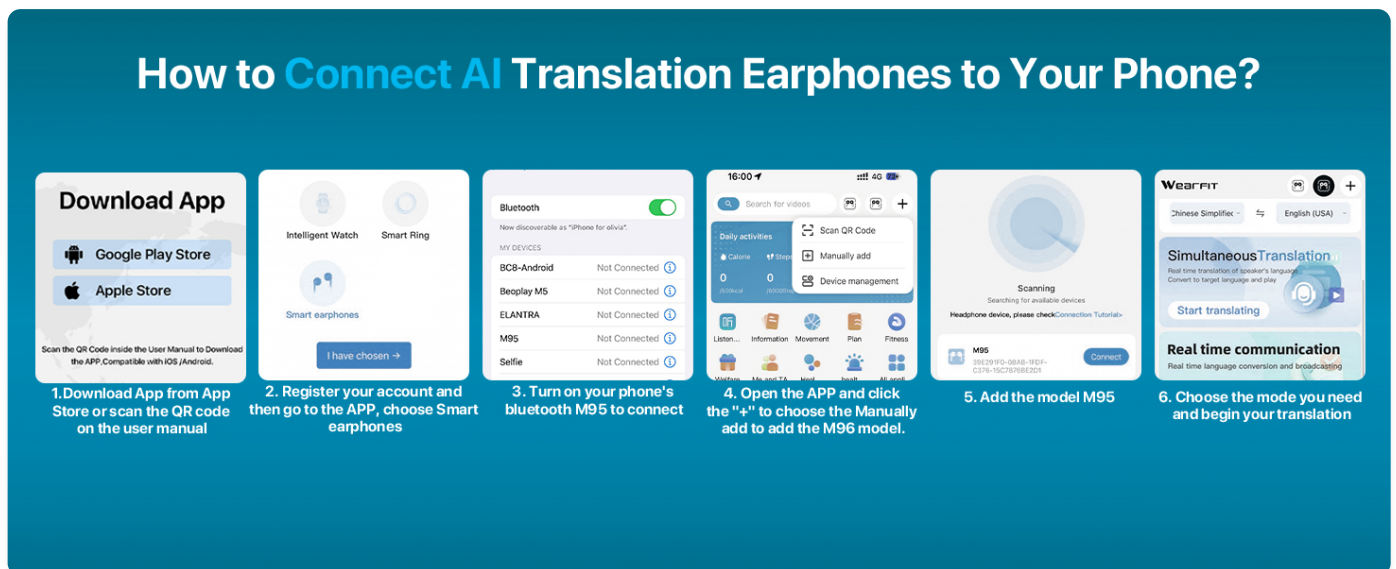


Image: A visual step-by-step guide demonstrating how to download the app, register, connect via Bluetooth, and select the device within the app to initiate translation.

OPERATING INSTRUCTIONS

Translation Modes


The "WearFit Pro" app offers several translation modes to suit different communication scenarios:

- **Real Time Call Mode:** For live conversations, translating speech as it happens.
- **Voice Call Mode:** Enables real-time translation during phone calls.
- **Simultaneous Translation:** Translates spoken language continuously, ideal for lectures or presentations.
- **Speaker Mode:** Allows one person to speak into the phone while the translation is played through the earbuds for the listener, or vice versa.
- **Recorded Translation:** Translate pre-recorded audio.
- **Face-to-Face Translation:** Facilitates direct conversation with translation.
- **Video Call Translation:** Provides real-time translation during video calls.

4 Modes Translation Instructions



Real Time Call Mode

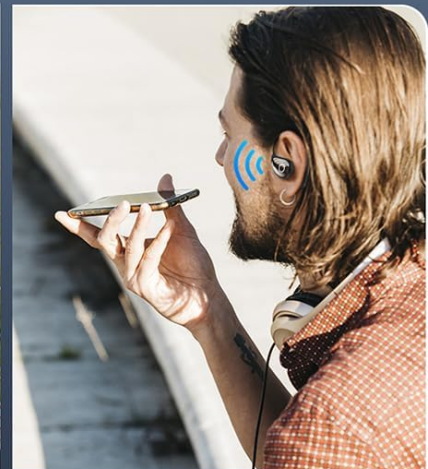

Voice Call Mode



Simultaneous Translation



Speaker Mode

Image: Illustrates the four primary translation modes available in the app: Real Time Call Mode (person speaking into phone), Voice Call Mode (person on phone call), Simultaneous Translation (two people conversing), and Speaker Mode (person holding phone for translation).

Music Playback and Calls

Beyond translation, your earbuds function as standard Bluetooth headphones:

- **Music Playback:** Connect to your device via Bluetooth to enjoy high-fidelity audio.
- **Answering Calls:** Use the touch controls on the earbuds to answer or end phone calls.

3-in-1 AI Language Translator Earbuds



Image: A composite image showing the versatility of the earbuds: a person relaxing and listening to music, another person smiling while on a phone call, and two people interacting with the earbuds for language translation.

Touch Controls

The earbuds feature intuitive touch controls for easy management of calls and audio. Refer to the specific instructions in the app or the physical manual for detailed touch gestures.



Image: A hand's finger is shown interacting with the touch-sensitive surface of an earbud, indicating its touch control functionality for instant response.

MAINTENANCE

To ensure the longevity and optimal performance of your earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage.
- **Charging:** Use only the provided Type-C charging cable and a compatible power adapter. Avoid overcharging.
- **Avoid Water:** The earbuds are not waterproof. Avoid exposure to water, moisture, or extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your ZYDIIE AI Translation Earbuds, please refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing/connecting	◦ Ensure Bluetooth is enabled on your device. ◦ Make sure the earbuds are charged. ◦ Restart your phone and the earbuds (by placing them back in the case and taking them out). ◦ Forget the device in your phone's Bluetooth settings and try pairing again.
Translation not working or inaccurate	◦ Check your internet connection; the app requires an active connection for translation. ◦ Ensure the correct source and target languages are selected in the app. ◦ Speak clearly and at a moderate pace. ◦ Update the "WearFit Pro" app to the latest version.
No sound or low volume	◦ Adjust the volume on your phone and through the app. ◦ Ensure the earbuds are properly seated in your ears. ◦ Check if the earbuds are connected to the correct device.
Charging issues	◦ Ensure the Type-C cable is securely connected to both the case and the power source. ◦ Try a different charging cable or power adapter. ◦ Clean the charging contacts on the earbuds and inside the case.

If you still cannot resolve the issue after following these steps, please contact our after-sales support team for professional technical guidance.

SPECIFICATIONS

Feature	Detail
Model Number	M95
Package Dimensions	4.53 x 3.74 x 1.57 inches
Item Weight	3.84 ounces
Batteries	1 Lithium Polymer battery required (included)
Bluetooth Version	5.4
Earbud Battery Capacity	40mAh (per earbud)
Charging Case Battery Capacity	600mAh

Feature	Detail
Earbud Usage Time	4-5 hours
Total Usage Time (with case)	Up to 30 hours
Charging Time	Approx. 1.5 hours (for full charge)
Charging Port	Type-C
Manufacturer	ZYDIIIE
Country of Origin	China

WARRANTY AND SUPPORT

Your ZYDIIIE AI Translation Earbuds are designed for reliable performance. While specific warranty details are not provided in this manual, we encourage you to retain your proof of purchase for any warranty claims.

For technical assistance, troubleshooting beyond this guide, or any product-related inquiries, please contact our dedicated after-sales support team. They are available to provide professional technical guidance and assist you step-by-step to resolve any issues you may encounter.

Contact information for support is typically found on the product packaging, official brand website, or your purchase receipt.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question