

ChunHee HI06

ChunHee Wireless Intercom System User Manual

Model: HI06
Brand: ChunHee

PRODUCT OVERVIEW

The ChunHee Wireless Intercom System provides full duplex, two-way communication for homes, offices, and businesses. Designed for hands-free operation, this system allows for seamless room-to-room communication without the need for shouting or complex channel switching. It features a rechargeable battery, customizable ringtones, and a low battery alert for user convenience. The compact and lightweight design makes it easy to carry and use in various environments, including assisting the elderly or pregnant individuals.



Image: Two ChunHee wireless intercom units, highlighting their compact design and user-friendly buttons.

WHAT'S IN THE BOX

- 2 x Intercom Units
- Charging Cable (Type-C)
- User Manual (this document)

KEY FEATURES

- **Full Duplex Hands-free Communication:** Allows for simultaneous two-way conversation, similar to a phone call. Simply press a button to talk without needing to hold it down.
- **Rechargeable Battery:** Equipped with a 1000mAh li-polymer battery, providing 72-96 hours of standby time or 8 hours of continuous usage on a full charge.
- **Customizable Call Ringtone & Volume:** Choose from 4 different ringtones and 8 volume levels for clear audio.

- **Low Battery Alert:** Provides a voice prompt every 30 seconds when the battery is low, and an LED indicator (Red while charging, Green when full).
- **Long Range Coverage:** Effective range of up to 500 ft in open areas and 20-100 ft through walls, suitable for various indoor and outdoor communication needs.
- **Monitor Function:** Can be used as a baby monitor or for elder care by staying on the line, with the LED remaining blue.

SETUP

1. Charging the Intercom Units

Before initial use, ensure both intercom units are fully charged. Connect the provided Type-C charging cable to the charging port on the unit and a suitable power source. The LED indicator will light Red during charging and turn Green when charging is complete.



Image: Intercom unit being charged via Type-C cable, illustrating battery capacity and standby time.

2. Powering On/Off

To power on or off the intercom unit, press and hold the power button (located at the bottom of the unit) for approximately 5 seconds. You will hear a voice prompt "power on" or "power off" to confirm the action.

Your browser does not support the video tag.

Video: Demonstrates how to power on and off the intercom unit by holding the power button for 5 seconds.

3. Intercom Pairing

To pair two intercom units:

1. On one intercom, press and hold both the VOL- and VOL+ buttons simultaneously for 5 seconds until you hear a "Searching" voice prompt. Release the buttons.
2. On the other intercom, press and hold the VOL- and power buttons simultaneously for 5 seconds.
3. You will hear "Successful" from both devices, indicating successful pairing.

Refer to the video above for a visual guide on the pairing process.

4. Adjusting Volume

When an intercom is ringing or in a call, press the VOL- button to decrease the volume or the VOL+ button to increase it. There are 8 volume levels available.

Refer to the video above for a visual guide on adjusting the volume.

5. Changing Ringtone

To change the ringtone, hold the VOL- button for 5 seconds until you hear the desired ringtone. There are 4 different chime options available.

Refer to the video above for a visual guide on changing the ringtone.

OPERATING INSTRUCTIONS

1. Making and Receiving Calls

To initiate a call, simply press the large green call button on your intercom unit. The other paired unit will ring. To answer an incoming call, the recipient presses the green call button on their unit.

Real-Time Two-Way Communication = No More Yelling



Upstairs



Downstairs

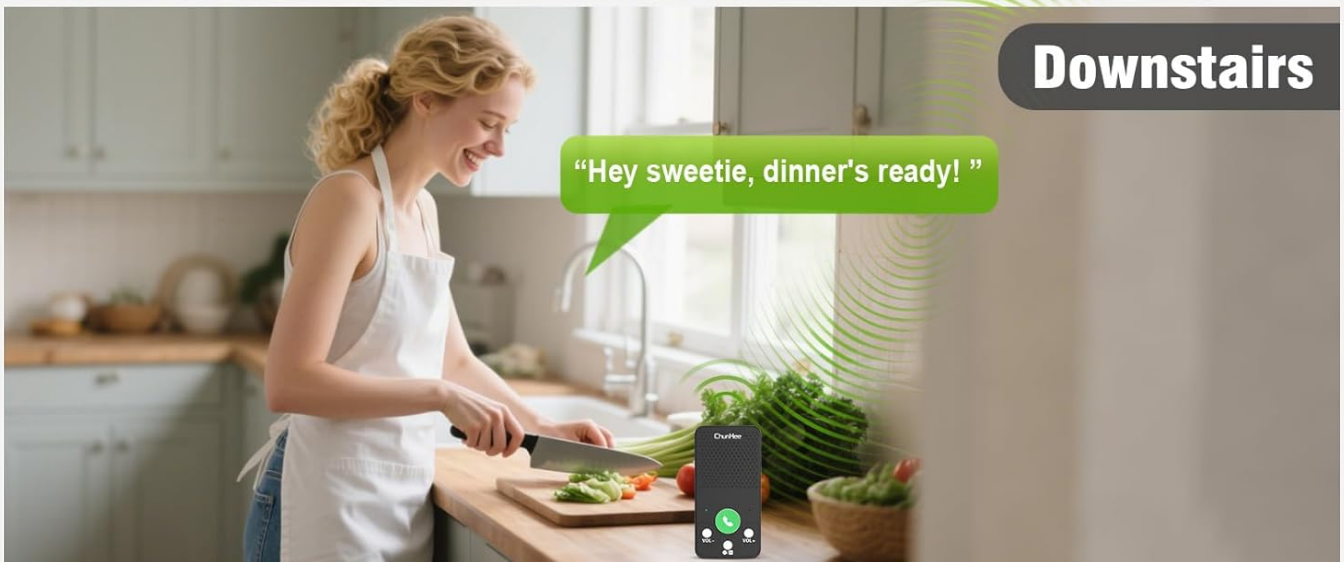


Image: Illustrates real-time two-way communication between different rooms in a home.

The system supports full duplex communication, meaning both parties can speak and listen simultaneously, just like a phone call. There is no need to hold down a "push-to-talk" button during conversation.

Intercom System for Business and Offices



FULL DUPLEX -YOU CAN TALK AND HEAR AT THE SAME TIME, JUST LIKE ON A PHONE.



Image: Demonstrates the full duplex capability for business and office communication.

Refer to the video above for a visual guide on starting a call.

2. Ending a Call

Either party can end the call by pressing the power button on their intercom unit.


Refer to the video above for a visual guide on ending a call.

3. Monitor Function


For continuous monitoring, such as a baby monitor or elder care, you can leave one intercom unit on without hanging up. The LED will remain blue, indicating an active connection, allowing you to hear sounds in real-time.

Monitor Function

DO NOT HANG UP, STAY ON THE LINE AND THE LED IS ALWAYS BLUE.

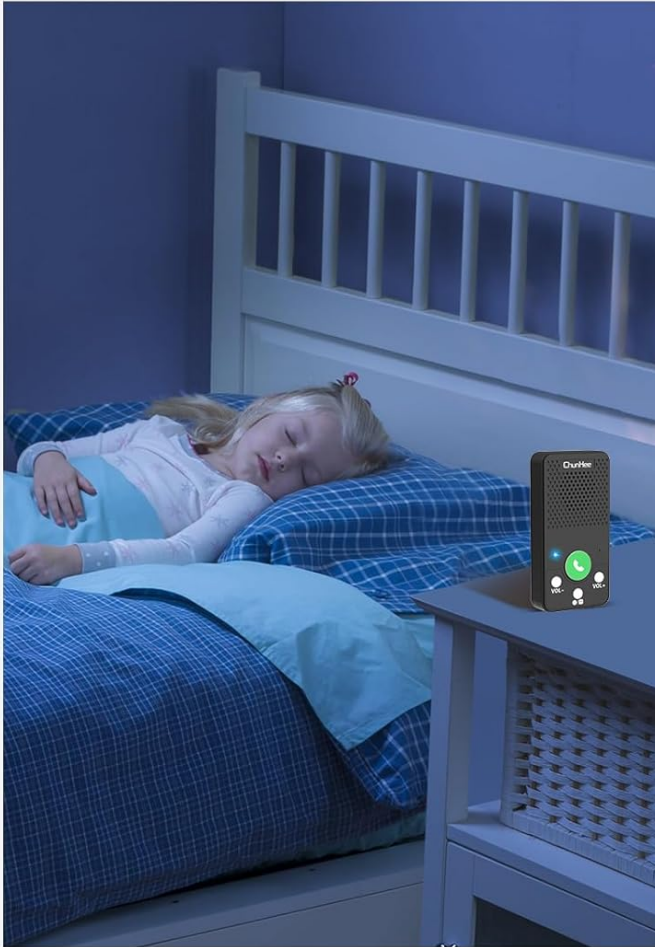

Baby Monitor:
Hear cries or noises
in real-time

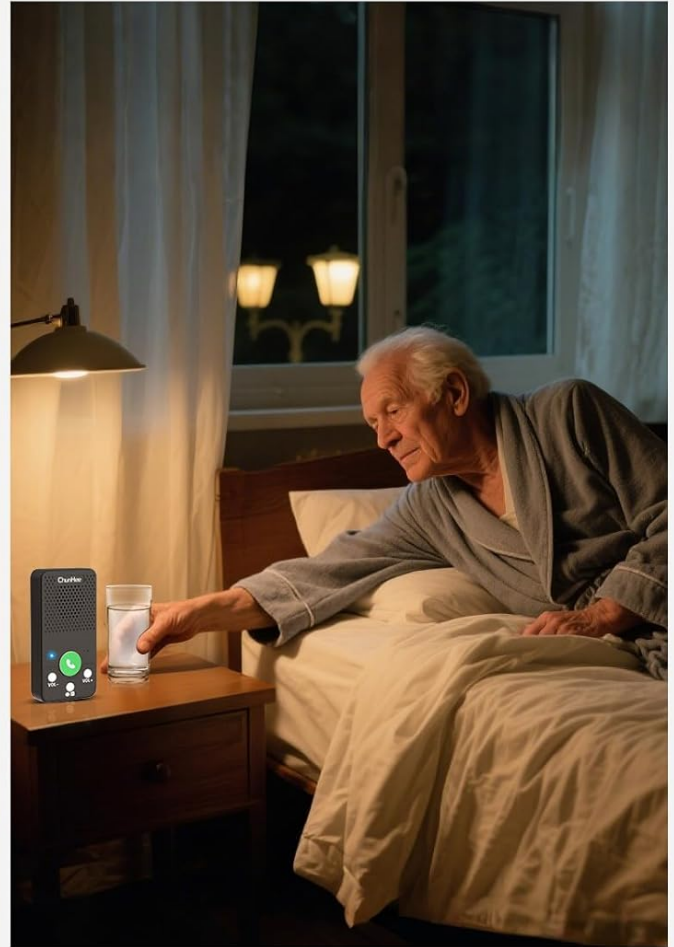

Elder Care:
Respond instantly to
nighttime needs

Image: Illustrates the monitor function for baby and elder care.

MAINTENANCE

Low Battery Alert

The intercom system will provide a voice prompt every 30 seconds when the battery level is low, continuing until the unit is turned off. It is recommended to charge your intercom system regularly to avoid interruptions, especially if used for critical communication like elder care.

No Signal Required

STAY IN TOUCH EVEN WHERE THERE'S NO SIGNAL!



GARAGE



Image: Demonstrates use in areas without cellular signal, like a garage.

TROUBLESHOOTING

1. Intercoms Not Connecting

If your intercoms are not connecting or experiencing issues, you may need to clear the pairing settings and re-pair them.

Clearing Pairing Settings:

On each intercom unit, press and hold both the VOL+ and power buttons simultaneously for 5 seconds until you hear a "Di" sound. This indicates the pairing settings have been cleared. Repeat this process for both intercoms to ensure a clean slate for the next pairing attempt.

Refer to the video above for a visual guide on clearing pairing settings.

2. Limited Range

While the intercoms offer a long range, environmental factors such as thick walls, multiple floors, or electronic interference can reduce effective communication distance. For optimal performance, try to minimize obstructions between units.

3. Audio Quality Issues

Ensure the volume is set appropriately using the VOL- and VOL+ buttons. If static or unclear audio persists, try moving closer to the other unit or away from potential sources of interference.

SPECIFICATIONS

Product Dimensions	1.26 x 6.3 x 9 inches
Weight	9.59 ounces
Item Model Number	HI06
Batteries	1 Lithium Polymer battery required (included)
Manufacturer	ChunHee
ASIN	B0F6NJB4S2
Country of Origin	China

WARRANTY & SUPPORT

No specific warranty or direct support contact information is provided in the product details. For any issues or inquiries, please refer to the seller's contact information on the platform where the product was purchased.

