



Manuals.plus /

- › MINISO /
- › MINISO MS162 AI Language Translation Earbuds User Manual

MINISO MS162

MINISO MS162 AI Language Translation Earbuds User Manual

Model: MS162

1. INTRODUCTION

The MINISO MS162 AI Language Translation Earbuds are designed to facilitate real-time communication across language barriers. These earbuds support translation in 135 languages and accents, integrate music playback, and call handling. They feature an open-ear design for comfort and are compatible with both iOS and Android devices via Bluetooth 5.4.



Image 1.1: The MINISO MS162 AI Language Translation Earbuds and their charging case.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x MS162 Translator Earbuds
- 1 x Charging Cable (Type-C)
- 2 x User Manual
- 1 x Smart Charging Case

Flexible Titanium Wire Alambre de titanio flexible

Good material, comfortable to wear
Buen material, cómodo de llevar



Image 2.1: Overview of the MINISO MS162 Earbuds package contents, including earbuds, charging case, and cables.

3. SETUP GUIDE

3.1 Initial Charging

Before first use, fully charge the earbuds and the charging case. Connect the provided Type-C charging cable to the charging port on the case and a power source. The LED display on the case will indicate the charging status.

Your browser does not support the video tag.

Video 3.1: This video demonstrates the charging process for the MINISO MS162 earbuds and case, showing the Type-C port and LED power display.

3.2 Bluetooth Pairing

1. Take the earbuds out of the charging case. They will automatically enter pairing mode.
2. On your smartphone or device, navigate to the Bluetooth settings.
3. Search for 'MINISO-MS162' in the list of available devices.
4. Select 'MINISO-MS162' to connect. A voice prompt will confirm successful pairing.



AI Headphones

Capable of translating 75 languages

Capaz de traducir
75 idiomas



Image 3.2: A smartphone displaying its Bluetooth settings, showing 'MINISO-MS162' as a connectable device, with the earbuds in their open charging case.

3.3 App Installation

For full translation functionality, download the 'Earjoy Intelligence' app:

1. Scan the QR code provided in the user manual or on the product packaging using your smartphone's camera.
2. The QR code will direct you to the app download page.
3. Select the appropriate version (iOS or Android) and install the 'Earjoy Intelligence' app.

Supports Free Translation in 135 Languages

A-E

Afrikaans
Albanian
Amharic
Arabic (Algeria)
Arabic (Bahrain)
Arabic (Egypt)
Arabic (Iraq)
Arabic (Israel)
Arabic (Jordan)
Arabic (Kuwait)
Arabic (Lebanon)
Arabic (Libya)
Arabic (Morocco)
Arabic (Oman)
Arabic (Palestinian Authority)
Arabic (Qatar)
Arabic (Syria)
Arabic (Tunisia)
Arabic (United Arab Emirates)
Arabic (Yemen)
Armenian
Azerbaijani
Basque
Belarusian
Bengali
Bosnian
Bulgarian
Cantonese
Catalan
Croatian
Czech
Danish
Dutch
English (Australia)
English (Canada)

E-U

English (Ghana)
English (India)
English (Ireland)
English (Kenya)
English (New Zealand)
English (Nigeria)
English (Philippines)
English (Singapore)
English (South Africa)
English (Tanzania)
English (UK)
English (US)

U-S

Ukrainian
Urdu
Uzbek
Vietnamese
Welsh
Zulu
Serbian
Sinhala
Slovak
Slovenian

S-L

Spanish (Costa Rica)
Spanish (Cuba)
Spanish (Dominican Republic)
Spanish (Ecuador)
Spanish (El Salvador)
Spanish (Equatorial Guinea)
Spanish (Guatemala)
Spanish (Honduras)
Spanish (Mexico)
Spanish (Nicaragua)
Spanish (Panama)
Spanish (Paraguay)
Spanish (Peru)
Spanish (Puerto Rico)
Spanish (Spain)
Spanish (Uruguay)
Spanish (Venezuela)
Estonian
Filipino
Finnish
French
French (Belgium)
French (Canada)
French (Switzerland)
Galician
Georgian
Hebrew
Hindi
Hungarian/Icelandic
Indonesian
Irish
Italian
Italian (Switzerland)
...



Tagalog
Tamil
Telugu
Thai
Turkish
Ukrainian

Somali
Spanish
Spanish (Argentina)
Spanish (Bolivia)
Spanish (Chile)
Spanish (Colombia)

Image 3.3: A smartphone scanning a QR code from the instruction manual, leading to the Earjoy app download page.

Your browser does not support the video tag.

Video 3.2: This video demonstrates the process of pairing the earbuds via Bluetooth and downloading the companion Earjoy app by scanning a QR code.

4. OPERATING INSTRUCTIONS

4.1 Wearing the Earbuds

The MS162 earbuds feature an open-ear design for comfort and stability. Gently place the ear hook over your ear, ensuring the speaker rests comfortably near your ear canal without entering it. The flexible titanium wire allows for adjustment to fit various ear shapes.

Face-to-Face Translation Traducción cara a cara



Image 4.1: A person wearing the MINISO MS162 earbuds, showcasing the open-ear design that provides comfort and breathability.

Not in the ears Very breathable
No en los oídos. Muy transpirable



Image 4.2: A close-up view of a person wearing the MINISO MS162 earbuds, illustrating how the ear hook secures the device.

4.2 Touch Controls

The earbuds feature sensitive touch controls for various functions:

- **Click once (L/R):** Play/Pause music.
- **Double click (L/R):** Next song / Answer or hang up a call.
- **Triple click (L/R):** Previous song.
- **Long press for 2 seconds (L/R):** Wake up voice assistant.
- **Long press for 3 seconds (L/R):** Reject incoming calls.

4.3 Translation Modes (via Earjoy App)

The Earjoy app offers multiple translation modes:

- **Free Talk Mode:** For natural, uninterrupted conversations.
- **Speaker Mode:** Use your phone as a microphone and the earbuds for listening, ideal for quick interactions like asking for directions.
- **Touch Mode:** Tap an earbud to speak, and the translation is heard by the other person through their earbud or your phone.

- **AI Dialogue Mode:** Facilitates real-time translation in various scenarios, such as business meetings or academic exchanges.

MINISO

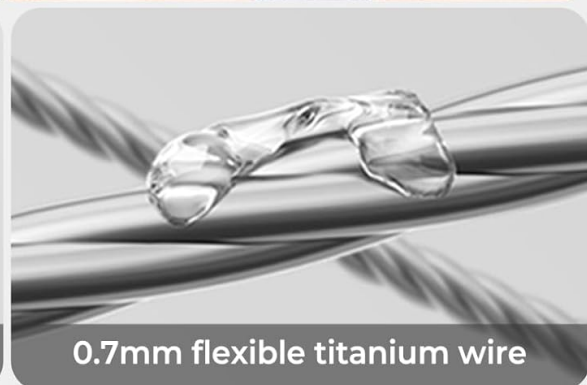
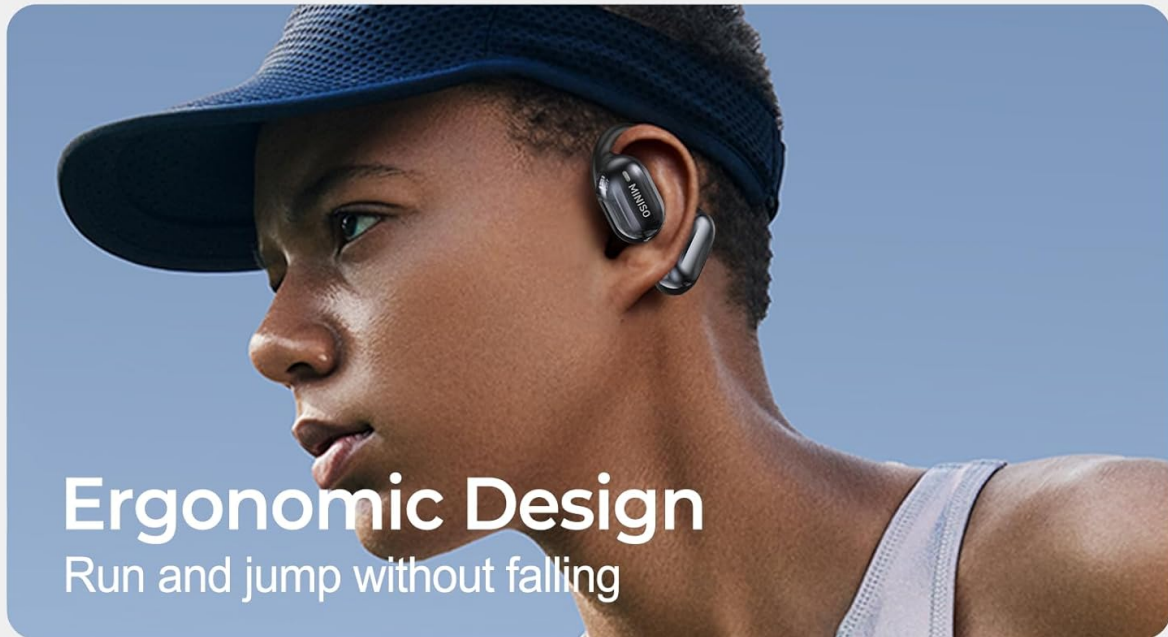


Image 4.3: Two individuals engaged in a conversation, utilizing the MINISO MS162 earbuds for face-to-face real-time translation.

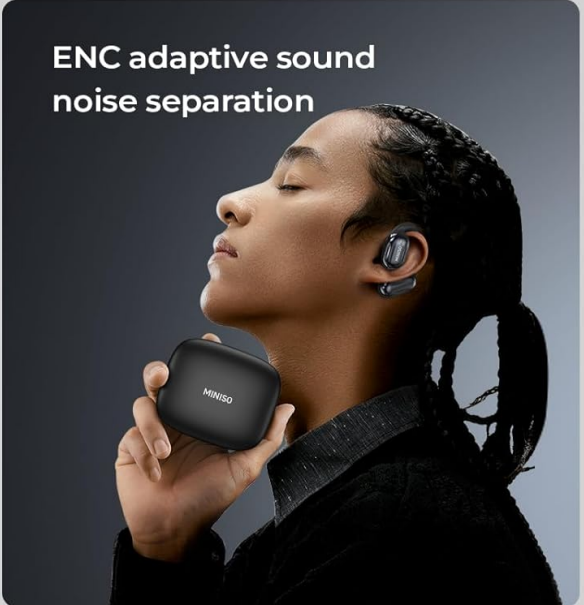
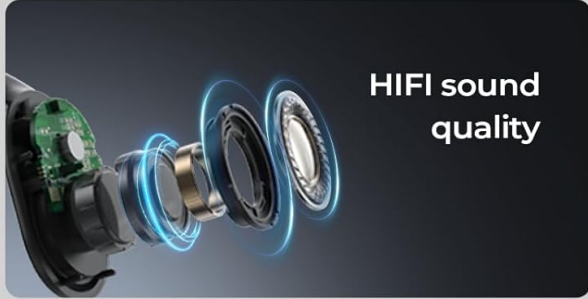


Image 4.4: A business meeting scenario where participants are using MINISO MS162 earbuds for on-site meeting recording and translation.

5. MAINTENANCE

5.1 Cleaning and Care

The MS162 earbuds are IPX5 waterproof, meaning they are resistant to sweat and light splashes. However, they are not suitable for submersion in water. To clean, gently wipe the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

On-site meeting recording at startup

Grabación de reuniones en el sitio al inicio



Image 5.1: The MINISO MS162 earbuds covered in water droplets, demonstrating their IPX5 water resistance.

5.2 Storage

When not in use, store the earbuds in their charging case to protect them and ensure they remain charged. Keep the device in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **Earbuds not connecting:** Ensure Bluetooth is enabled on your device and the earbuds are charged. Try unpairing and re-pairing the earbuds.
- **No sound or low volume:** Check the volume levels on both your connected device and the earbuds. Ensure the earbuds are properly seated in your ears.
- **Translation issues:** Verify that the Earjoy app is correctly installed and configured. Ensure a stable internet connection for optimal translation performance.
- **Charging problems:** Check the charging cable and adapter. Ensure the charging contacts on the earbuds and case are clean and free of debris.

7. SPECIFICATIONS

Feature	Detail
Product Model	MS162
Pairing Name	MS162
Wireless Version	V5.4
Charging Time	Approx. 1.5 hours
Music Time	≥48 hours (with charging case)
Call Time	≥48 hours (with charging case)
Charging Bay Battery	300mAh
Headphone Battery	70mAh
Charging Voltage/Current	5V===300mAh
Transmission Distance	Approx. 10m
Headphone Speaker	16mm
Item Weight	5.9 ounces
Waterproof Rating	IPX5

Note: Product parameters are for reference only. Due to slight differences in electronic components, actual product parameters may vary.

MINISO

**58 hour high
battery life**



Single battery life



Cooperate with the
cabin battery life



Image 7.1: Visual representation of the MINISO MS162 earbuds' battery life, showing 8 hours for single use and 58 hours with the charging case.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official MINISO website. Specific warranty terms may vary by region and retailer.