

[Manuals.plus](#) /

› [amseatec](#) /

› amseatec LY-9053 Ergonomic Mesh Office Chair User Manual

amseatec LY-9053

amseatec LY-9053 Ergonomic Mesh Office Chair User Manual

Model: LY-9053

1. INTRODUCTION

Thank you for choosing the amseatec LY-9053 Ergonomic Mesh Office Chair. This manual provides essential information for the proper assembly, operation, and maintenance of your new chair. Please read these instructions carefully before use and retain them for future reference.



Figure 1: amseatec LY-9053 Ergonomic Mesh Office Chair (Pink)

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following:

- Always ensure the chair is assembled correctly according to the instructions.
- Do not exceed the maximum weight recommendation of 300 pounds (136 kg).
- Keep the chair away from heat sources, open flames, and sharp objects to prevent damage to the mesh, fabric, and other components.
- Avoid standing on the chair or using it as a step stool.
- Do not allow children to play with the chair unsupervised.
- Regularly check all bolts and connections to ensure they are tight.

3. PACKAGE CONTENTS

Before assembly, verify that all components are present:

- Mesh Backrest Frame
- Seat Cushion with Solid Coated Steel Base
- Flip-Up Armrests (Pair)
- Steel Gas Lift Cylinder
- Tilt Mechanism with Tension Control Knob
- Five-Star Chair Base
- Casters (5 pieces)
- Assembly Tools (Allen key, bolts, washers)

Setup So Easy

Simple Parts • Clear Guide • 15 Mins



*The product parts are subject to the actual items

Figure 2: Chair Components for Assembly

4. SETUP AND ASSEMBLY

Estimated assembly time: 15 minutes. Tools are included.

1. **Attach Casters to Base:** Insert the five casters into the holes at the end of the five-star chair base. Push firmly until they click into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the five-star base.

3. **Attach Armrests to Backrest:** Secure the flip-up armrests to the backrest using the provided bolts and Allen key. Do not fully tighten yet.
4. **Attach Backrest/Armrest Assembly to Seat:** Align the backrest and armrest assembly with the seat cushion. Secure with bolts, ensuring the 'FRONT' indicator on the seat is facing forward. Tighten all bolts from step 3 and 4 completely.
5. **Attach Mechanism to Seat:** Secure the tilt mechanism to the underside of the seat cushion using the appropriate bolts. Ensure the control levers are facing the rear of the chair.
6. **Connect Seat to Gas Lift:** Carefully place the assembled seat onto the gas lift cylinder, ensuring the mechanism's center hole aligns with the top of the gas lift. Press down firmly to secure.

Assembly Video Guide

Your browser does not support the video tag.

Video 1: General Office Chair Assembly Guide (Provided by Seller NEO Direct)

Your browser does not support the video tag.

Video 2: Office Chair Installation Video (Provided by Seller Sweetcrispy DIRECT)

5. OPERATING INSTRUCTIONS

Your amseatec office chair offers several adjustable features for personalized comfort:

- **Height Adjustment:** Use the lever located under the seat on the right side to adjust the chair's height. Lift the lever while seated to lower the chair, or lift the lever while standing to raise it.
- **Tilt Function with Tension Control:** The chair features a 90–110° rocking tilt. Pull the lever on the left side outwards to enable the tilt function. Push it inwards to lock the chair in an upright position. The tension control knob under the seat allows you to adjust the resistance of the tilt. Turn clockwise for more resistance, counter-clockwise for less.
- **Flip-Up Armrests:** The armrests can be flipped up to allow the chair to slide further under a desk, saving space. Simply lift the armrests upwards until they lock into the vertical position.
- **360° Swivel:** The chair's base allows for smooth 360° rotation.

Max Load **300 Lbs**

Thick Frame • Wide Base • Reinforced Support



Figure 3: Flip-Up Armrests and Weight Capacity

All-Day Lumbar Support

Ergonomic design that adapts to your posture


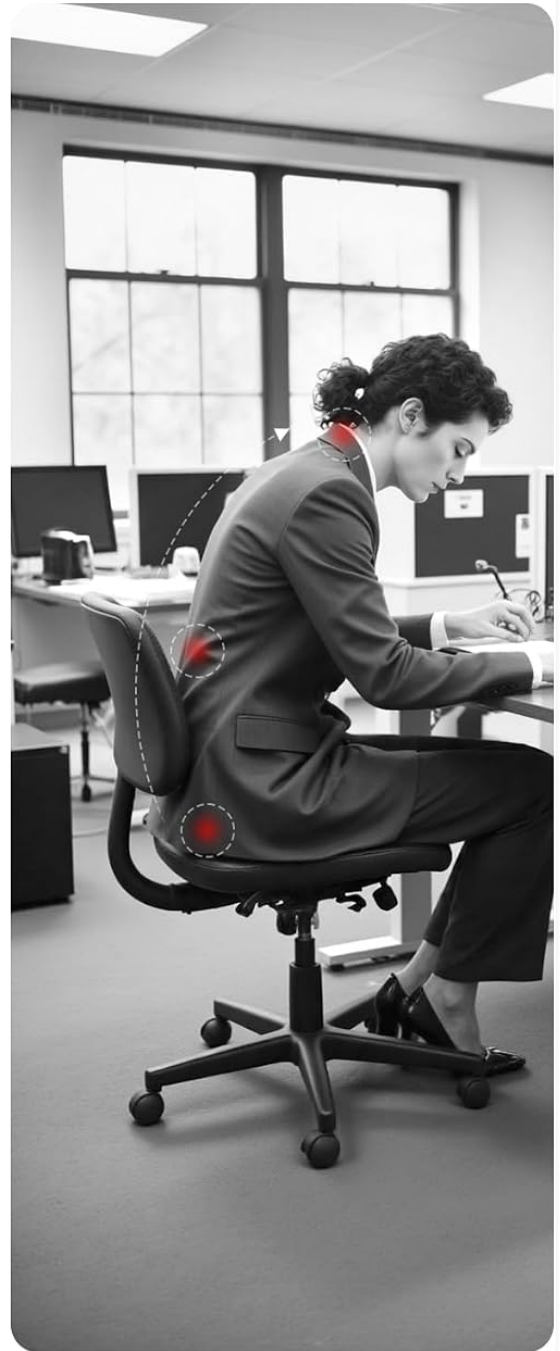



Figure 4: Ergonomic Lumbar Support

3-Zone Cushion For Real Comfort

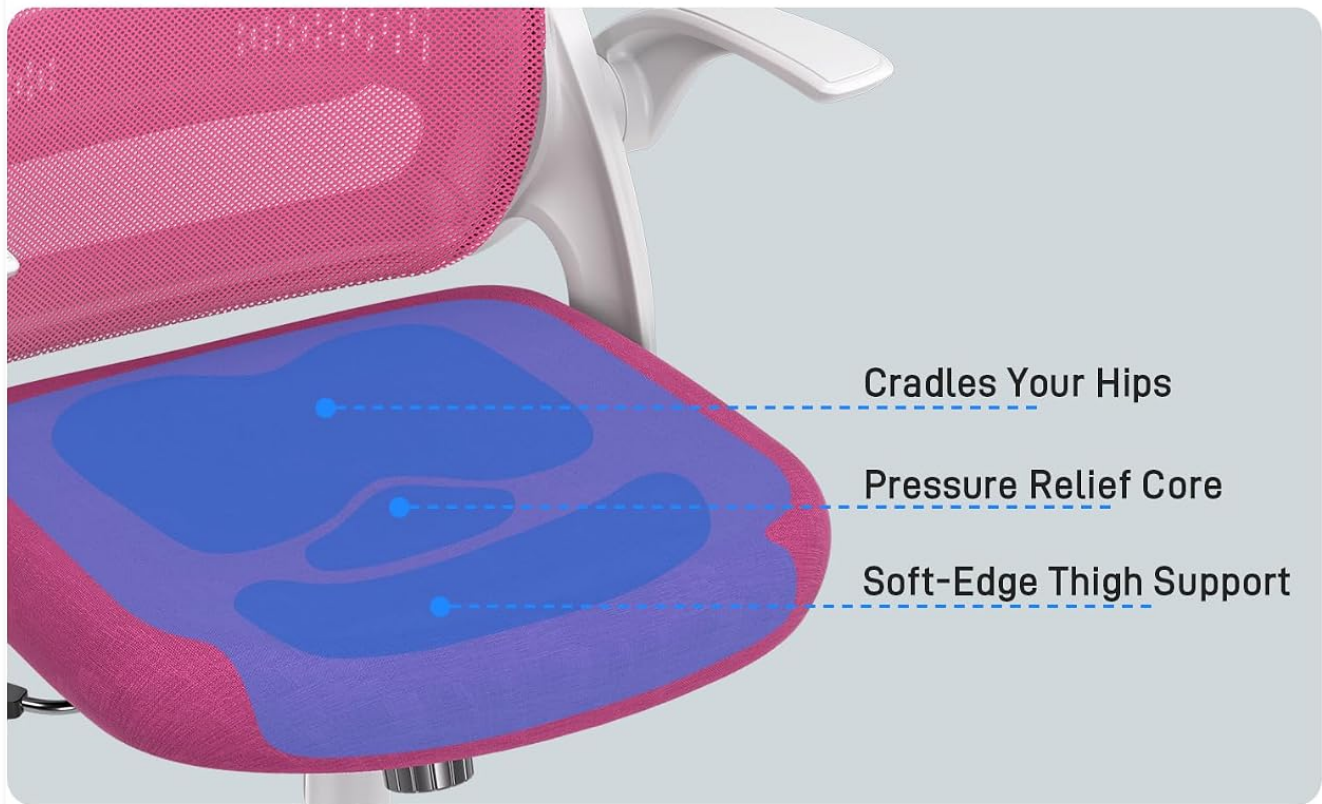

Spring Seat (Ours)

Breathable & Long-Lasting Comfort

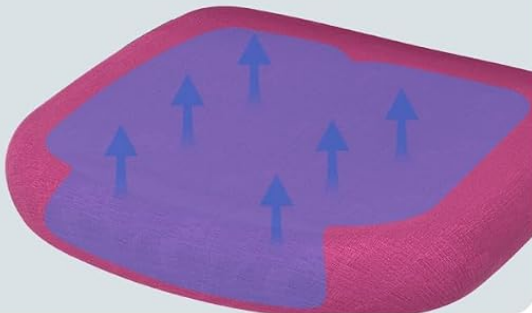

Cheap Thin Cushion

Hot & Sticky



Figure 5: 3-Zone Cushion for Enhanced Comfort

6. MAINTENANCE

To maintain the appearance and functionality of your chair:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the mesh or fabric.
- **Regular Checks:** Periodically inspect all screws and bolts to ensure they are securely tightened.
- **Avoid Overloading:** Do not place excessive weight on the chair or its components.

7. SPECIFICATIONS

Feature	Detail
Brand	amseatec
Model Name	LY-9053
Color	Pink
Product Dimensions	23.4"D x 27.4"W x 39.4"H
Maximum Weight Recommendation	300 Pounds
Back Style	Mid-Back Ergonomic Mesh
Arm Style	Flip-up Armrests
Material	Aerospace-Grade Plastic, Breathable Mesh, High-Density Foam, Oxford Fabric, Solid Reinforced Coated Steel Base, Steel Gas Lift
Certifications	BIFMA, SGS, TUV
Furniture Base Movement	Swivel
Item Weight	23.2 pounds

For **Any** Workspace

Office • Meeting • Reception • **More**



Figure 6: BIFMA, SGS, and TUV Certifications

8. WARRANTY AND SUPPORT

Your amseatec office chair comes with an industry-leading 5-year warranty. For any questions, concerns, or support needs, please refer to the contact information provided with your purchase or visit the official amseatec website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question